


EED 14700
EED 14800
EED 14650
EED 29800

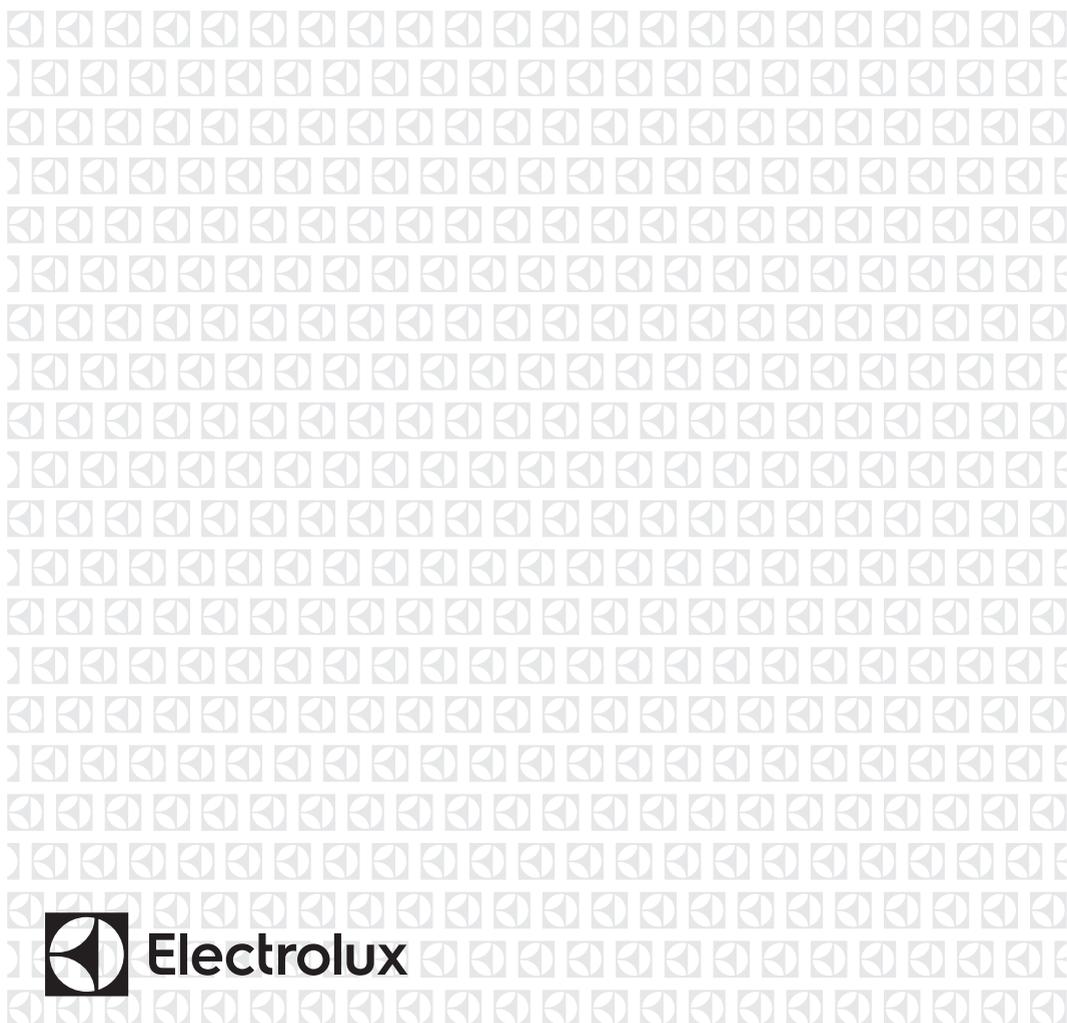

EN Warming Drawer

User Manual



Electrolux

CONTENTS

SAFETY INFORMATION	3
SAFETY INSTRUCTIONS	5
PRECAUTIONS DURING USE	6
APPLIANCE DESCRIPTION	7
USE	8
LOAD CAPACITY	11
CLEANING AND MAINTENANCE	12
WHAT SHOULD I DO IF THE CROCKERY WARMER DOESN'T WORK?	13
INSTALLATION INSTRUCTIONS	13
ENVIRONMENT CONCERNS.....	14
INSTALLATION	15

WE'RE THINKING OF YOU

Thank you for purchasing an Electrolux appliance. You've chosen a product that brings with it decades of professional experience and innovation. Ingenious and stylish, it has been designed with you in mind. So whenever you use it, you can be safe in the knowledge that you'll get great results every time. Welcome to Electrolux.

Visit our website to:



Get usage advice, brochures, trouble shooter, service information:
www.electrolux.com



Register your product for better service:
www.electrolux.com/productregistration



Buy Accessories, Consumables and Original spare parts for your appliance:
www.electrolux.com/shop

CUSTOMER CARE AND SERVICE

We recommend the use of original spare parts.

When contacting Service, ensure that you have the following data available.

The information can be found on the rating plate. Model, PNC, Serial Number.

 Warning / Caution-Safety information.

 General information and tips.

 Environmental information.

Subject to change without notice.

SAFETY INFORMATION

Carefully read the instructions before installing and using the equipment. The manufacturer is not liable for improper installation and use of the equipment that may cause injuries and damage. Always keep the instructions at hand, so they can be easily referred to during use.

Safety of children and vulnerable adults

WARNING!

Risk of choking, injury or permanent disability.

- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they are given supervision or instructions concerning how to use the appliance in a safe way and understand the hazards involved.
- Children should not play with the appliance.
- Keep packaging materials away from children.
- Keep children and pets away from the appliance during operation or when cooling.
- Cleaning and maintenance should not be done by children without supervision.

Installation

- Make sure that the Warming Drawer is not damaged in any way. Check that the drawer opens and closes correctly. If you find any damage, contact the Technical Assistance Service.

- Electrical installation must be performed by an electrician qualified in accordance with the legislation in force.

Warnings on general safety

- During installation, follow the instructions supplied separately.
- Only qualified personnel can install the appliance and replace the cable.
- **WARNING:** The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.
- During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.
- **WARNING:** Accessible parts may become hot during use. Young children should be kept away.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
- Do not use steam cleaners to clean the appliance.
- Do not use abrasive detergents or metal scrapers to clean the appliance.
- The electric connection is made via an omnipolar switch, which is suitable for the intensity to be tolerated and which has a minimum gap of 3mm between its contacts,

which will ensure disconnection in case of emergency or when cleaning the Warming Drawer. If a plug is used for the electric connection, then it must be accessible after installation.

- The connection should include correct earthing, in compliance with current norms.
- Disconnect the appliance from the power supply before carrying out any maintenance operation.

SAFETY INSTRUCTIONS

WARNING!

Before connecting the appliance compare the power data (voltage and frequency) indicated on the characteristics plate with those of the power supply in question. If these data do not match there may be problems. In case of doubt, contact an electrician.

WARNING!

If the electrical wire plug is removed, the appliance must be installed and connected by a technician. Contact a qualified electrician who knows and respects current safety standards. The manufacturer cannot be held responsible for damage resulting from fitting or connecting errors.

WARNING!

The electrical safety of the appliance can only be guaranteed if it is earthed. The manufacturer cannot be held responsible for damage resulting from the absence of or defects in the installation's protection system (e.g. electrical shock).

WARNING!

Only use the appliance once it has been fitted into its built-in position. Only in this manner can it be guaranteed that users cannot access the electrical components.

WARNING!

Never open up the appliance's frame. Possible contacts with electrical conducting parts or changes to electrical or mechanical components may represent a danger to users' safety and prejudice the correct working of the appliance.

WARNING!

Repairs and maintenance, especially of parts carrying electrical current, must only be done by technicians authorised by the manufacturer. **The manufacturer and retailers do not accept responsibility** for any damage caused to people, animals or property as a result of repairs and maintenance carried out by non-authorised personnel.



WARNING!

Repairs undertaken during the guarantee period must only be done by technicians authorised by the manufacturer. If this is not the case then any damage resulting from the repair in question is excluded from the guarantee.



WARNING!

The appliance must be disconnected from the electrical current when

installation and repair work is being done. To disconnect the appliance from the current, one of the following conditions must apply:

- The switchboard fuses / circuit breakers must be disconnected.
- The plug should be removed from the socket. To remove the plug from the socket do not pull on the electric cable but rather pull out the plug itself directly.

PRECAUTIONS DURING USE



- This appliance complies with current safety standards. Improper use of the appliance may put the user at risk.
- Read the operating instructions carefully before using the appliance for the first time. In this way you will avoid the risk of injuring yourself or damaging the appliance.
- Depending on the temperature selected and the operating time, the temperature inside the appliance may reach 80 °C. To take crockery out of the crockery warmer protect your hands by using oven gloves or an oven cloth.
- Do not sit or hang on the drawer. The telescopic runners will be damaged. The maximum load capacity of the drawer is 25 kg.
- Do not store synthetic containers or easily inflammable objects inside the crockery warmer. When you switch on the appliance such containers and objects may melt or catch fire. **Fire danger.**
- Do not use the appliance to heat up the air temperature in the kitchen. The high temperatures reached may cause easily inflammable objects close to the appliance to catch fire.
- Do not use high pressure or steam jet cleaning devices. The steam may affect electrical components and cause a short circuit. The steam pressure may also cause damage to the appliance's surface and components in the long term.
- When you stop using the appliance at the end of its working life, disconnect it from the power supply and render the electrical cable unusable so that the appliance is not a danger if, for example, children use it for playing.

APPLIANCE DESCRIPTION

MAIN COMPONENTS

- | | | | |
|----------|---------------|----------|---------------|
| 1 | Thermostat | 4 | Handle |
| 2 | On/Off switch | 5 | Anti-Slip mat |
| 3 | Control Lamp | 6 | Drawer Grid * |

EED 14650 / 14700 / 29800

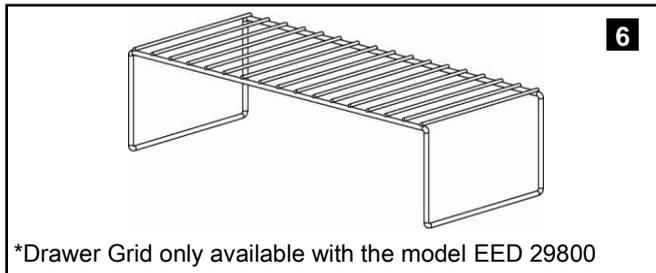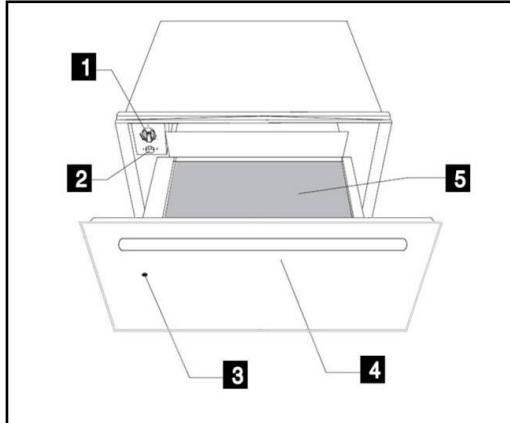

HOW THE CROCKERY WARMER WORKS

This appliance is equipped with a warm air circulation system. A fan distributes the heat generated by an electrical heating element throughout the interior of the appliance.

The thermostat allows the user to define and control the temperature wanted for the crockery.

The circulating hot air that is generated heats up the crockery quickly and evenly.

A metal grille protects both the heating element and the fan.

The base of the drawer is fitted with a non-slip mat to prevent plates and dishes sliding around, when the drawer is opened and closed.

USE


BEFORE USING FOR THE FIRST TIME

Before using the appliance for the first time you should clean the interior and the exterior, following the cleaning instructions given in the section "Cleaning and Maintenance".

Then heat the crockery warmer for at least 2 hours. For this, turn the temperature control to the maximum position (see section "Selecting temperature").

Make sure the kitchen is well-ventilated when you are doing this. The appliance's parts are protected by a special product. For this reason, during the first heating an odour will be released. Both the odour and any smoke that may form will disappear after a short time and neither signifies that there is anything wrong with the connection or the appliance.

CONTROL PANEL

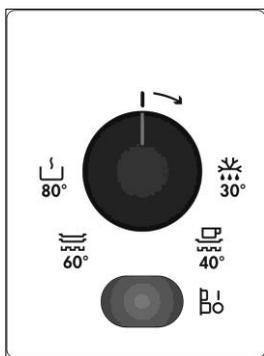

The control panel has a Thermostat and on/off switch. The control panel is only visible when the drawer is open.

USING THE CROCKERY WARMER

To use the crockery warmer, proceed as follows:

- Put the crockery in the drawer.
- Select the function you want by turning the thermostat control to the desired position.
- Switch on the appliance by pressing the switch, which will light up.
- Close the drawer.
- Be careful not to use too much force when closing the drawer since it may open up again. Before taking out the warm crockery you must switch off the crockery warmer by pressing the switch again.

SELECTING FUNCTION

By turning the thermostat control you can select temperatures between 30 and 80 °C.

Do not force the thermostat control to the left of the "0" position or to the right of the maximum position since this may damage the appliance.

As soon as the selected temperature is reached, the heating is turned off.

When the temperature drops to a value below than the one selected, the heating is turned back on.

The temperature scale is marked with absolute temperatures in °C and symbols which correspond to the optimum temperatures for groups of crockery:

Symbol	°C	Function
	30°C	Defrosting
	40°C	Proving dough Cups / glasses warming
	60°C	Crockery warming Keep food warm
	80°C	Food Warming Low temperature cooking (Only available for the EED 29800 Model)

HEATING TIMES

Various factors affect heating times:

- Material and thickness of the crockery;
 - Load quantity;
 - How the crockery is arranged;
 - Temperature setting.
- It is therefore not possible to give any precise heating times.

As you use the crockery warmer more and more you will learn the best settings for your crockery.

However, as a guide, the following times are given for the thermostat

setting  and for uniform heating of the crockery:

Load	Time (min)
Crockery for 6 people	30 – 35
Crockery for 12 people	40 – 45

SUGGESTIONS FOR THE FUNCTION KEEP FOOD WARM AND FOOD WARMING:

Preheat the Warming Drawer 15 minutes to ensure the interior space has the required temperature.

LOW TEMPERATURE COOKING (ONLY AVAILABLE FOR THE EED 29800 MODEL)

With the low temperature cooking meat can be gently prepared at low

temperatures over a longer period of cooking time. The cooking time is dependent on the piece of meat's size. Use dishes made of glass, china or ceramics.

Preparation:

- Preheat the device with the dishes at 80°C for 10 minutes.
- Sear the meat in a pan using fat and place it into the heat drawer on the preheated dishes. Keep the setting at 80° C.

Table: Low Temperature Cooking (Reference Values)


Application	Quantity	Roast gently on the cooking plate	Cooking times
Beef			
Completely rare	1kg	on all sides, on each 2min.	1hr
Rare	1kg	on all sides, on each 3min	1.25hrs
Medium	1kg	on all sides, on each 3min	1.75 hrs
Well-done	1kg	on all sides, on each 3min	2.25hrs – 2.5hrs.
Roast beef in one piece	1kg	on all sides, on each 3min	3 hrs rare 4.5 hrs medium
Veal			
Filet, whole	1kg	on all sides, on each 2min.	1.75 – 2hrs.
Loin, in one piece	1kg	on all 4 sides, on each 3min.	2 – 2.5hrs.
Roast, vat	1kg	on all sides, on each 3min.	2 – 2.5hrs.
Roast, shoulder	1kg	on all sides, on each 3min.	2.5hrs.
Porc			
Filet, whole	500-600 g	on all sides, on each 2min.	1.5hrs
Loin	600 - 1000g	all around 10-15min.	2 - 3hrs
Lamb			
Gigot with haunch	2kg	on all sides, on each 4min.	3 – 4hrs
Gigot steak of the haunch	2kg	on all sides, on each 2min	0.75-1hr
Filet	400g	on all sides, on each 2min	1 – 1.25hrs.

If you wish to keep the cooked meat warm, put the settingback to 60° C. We recommend not to use the warming function for more than 1hr.

LOAD CAPACITY

Load capacity depends on the size of the crockery items:

EED 14700 /14800 / 14650	EED 29800
6 persons servings	12 persons servings
6 x 24cm Dinner Plates	12 x 24cm Dinner Plates
6 x 10cm Soup Bowls	12 x 10cm Soup Bowls
1 x 19cm Serving Dish	1 x 19cm Serving Dish
1 x 17cm Serving Dish	1 x 17cm Serving Dish
1 x 32cm Meat Plates	2 x 32cm Meat Plates
or	or
20 dishes with \varnothing 28 cm	40 dishes with \varnothing 28 cm
or	or
80 espresso coffee cups	160 espresso coffee cups
or	or
40 tea cups	80 tea cups
or	or
...	...

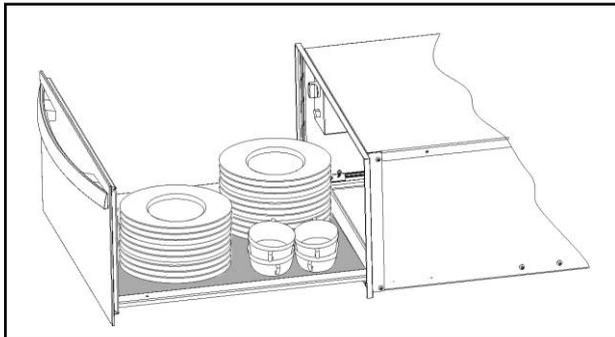

CLEANING AND MAINTENANCE

Cleaning is the only maintenance action that is required normally.



WARNING!

Cleaning must be done with the crockery warmer disconnected from the electrical power supply. Remove the plug from the power socket or disconnect the crockery warmer power supply circuit.

Do not use aggressive or abrasive cleaning products, abrasive sponges or pointed objects since stains or abrasion marks may appear.

Do not use high pressure or steam jet cleaning appliances.

Appliance front and control panel

The crockery warmer can be cleaned using just a damp cloth. If it is very dirty, add a few drops of washing-up liquid to the washing water.

Wipe the surfaces dry using a dry cloth.

For stainless steel fronted crockery warmers,

special products for treatment of stainless steel surfaces can be used.

These products prevent the surfaces becoming dirty again for some time.

Apply a thin layer of such a product on the surface using a soft cloth.

On aluminium fronted crockery

warmers use a gentle glass cleaning product and a soft cloth that does not release fluff. Wipe horizontally without pressing on the surface since aluminium is sensitive to scratches and cuts.

INTERIOR OF THE CROCKERY WARMER

Clean the inside of the crockery warmer regularly using a damp cloth. If it is very dirty add a few drops of washing-up liquid to the washing water.

Wipe the surfaces dry using a dry cloth.

Avoid water entering through the air circulation opening.

Only use the crockery warmer again when it is completely dry.

ANTI-SLIPT MAT

The non-slip surface mat can be removed to facilitate cleaning of the drawer.

The mat can be cleaned by hand using hot water with a few drops of washing-up liquid. Dry thoroughly.

The non-slip mat should only be replaced when it is completely dry.

WHAT SHOULD I DO IF THE CROCKERY WARMER DOESN'T WORK?

WARNING!

Any type of repair must only be done by a specialised technician. Any repair done by a person not authorised by the manufacturer is dangerous.

Before contacting Technical Assistance, check on the following:

- **The crockery doesn't heat up enough. Check whether:**
 - The appliance has been switched on.
 - The appropriate temperature has been selected.
 - The air circulation orifices are covered by the crockery.
 - The crockery was left to heat up for sufficient time.
- **Heating time depends on several factors, such as, for example:**
 - Crockery material type and thickness.
 - Quantity of crockery.
 - How the crockery is arranged.
- **The crockery doesn't heat up at all. Check whether:**
 - You can hear the noise of a fan. If the fan is operating then the heating element is broken; if the fan is not operating then the fan is broken.
 - The switchboard fuses / circuit breakers have fused / tripped out.
- **The crockery is heating up too much, check if:**
 - The thermostat selector is broken.
- **The on/off switch does not light up, check if:**
 - The switch's pilot light has blown.

INSTALLATION INSTRUCTIONS

WARNING!

Read the "Safety Information" carefully for your safety and correct operation of the appliance before installing the appliance.

BEFORE INSTALLATION

Check that the input voltage indicated on the characteristics plate is the same as the voltage of the power outlet you are going to use.

Open the drawer and **take out all the accessories** and remove the packing material.

WARNING!

The front surface of the crockery heater may be wrapped in a **protective film**. Before using the crockery warmer for the first time, remove this film carefully.

Make sure that the crockery warmer is not damaged in any way. Check that the drawer opens and closes correctly. If you find any damage, contact the Technical Assistance Service.

ATTENTION:

The power socket should be easily accessible after the crockery warmer has been installed.

The crockery warmer should only be built-in in combination with those appliances indicated by the manufacturer.

INSTALLATION

To build-in the crockery warmer in combination with another appliance there must be a fixed, interim shelf in the housing unit to support the weight of both appliances.

The appliance to be combined with the crockery warmer will be placed directly


on the latter without any need to have a separating shelf.

To build-in the appliance which is combined with the crockery warmer, follow the instructions set out in the respective instructions and fitting booklet.

The relevant installation dimensions are indicated in mm **in the diagrams shown at the end of this booklet.**

Proceed as follows:

1. Place the crockery warmer on the shelf and slide it towards the interior of the niche in such a way that it is centred and completely lined up with the front of the unit.
2. Check that the crockery warmer's frame is properly levelled and is sitting evenly on the shelf.
3. Open the drawer and fix the crockery warmer to the sides of the unit using the provided screws.

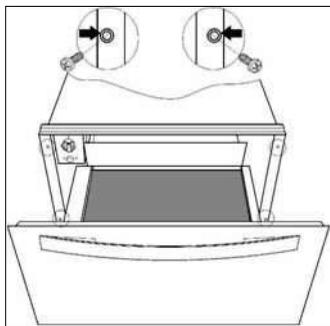

ELECTRICAL CONNECTION

Electrical installation must be performed by an electrician qualified in accordance with the legislation in force.

Before connecting the crockery warmer to the electric mains, check that the voltage and frequency of the mains matches that which is shown on the rating plate located in the heating block inside.

The electric connection is made via an omnipolar switch, which is suitable for the intensity to be tolerated and which has a minimum gap of 3mm between its contacts, which will ensure disconnection in case of emergency or when cleaning the crockery warmer. If a plug is used for the electric connection, then it must be accessible after installation.

The connection should include correct earthing, in compliance with current norms.



WARNING:

THE CROCKERY WARMER MUST BE EARTHED.

The manufacturer and retailers do not accept responsibility for any damage that may be caused to people, animals or property if these installation instructions are not observed.

ENVIRONMENT CONCERNS




Recycle the materials with the symbol. Put the packaging in applicable containers to recycle it. Help protect the environment and human health and to recycle waste of electrical and electronic appliances.




Do not dispose appliances marked with the symbol with the household waste. Return the product to your local recycling facility or contact your municipal office


INSTALLATION

EED 14700 / 14800 / 14650

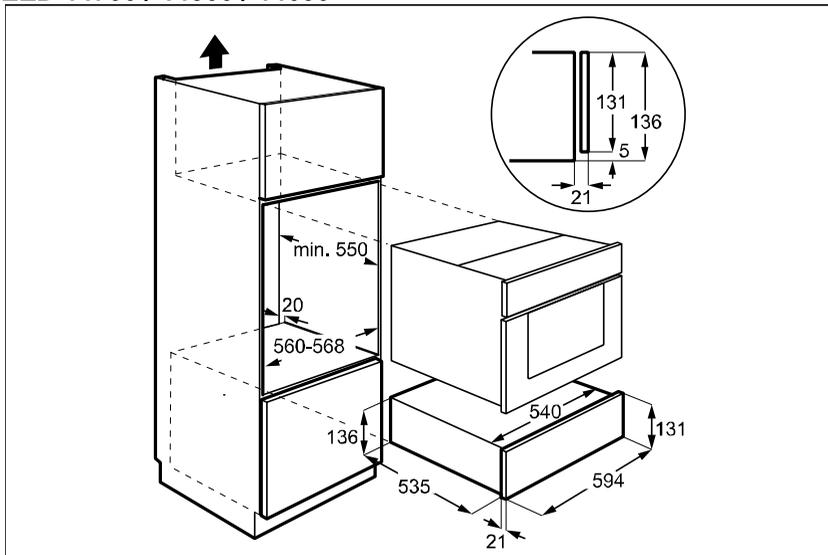

EED 29800

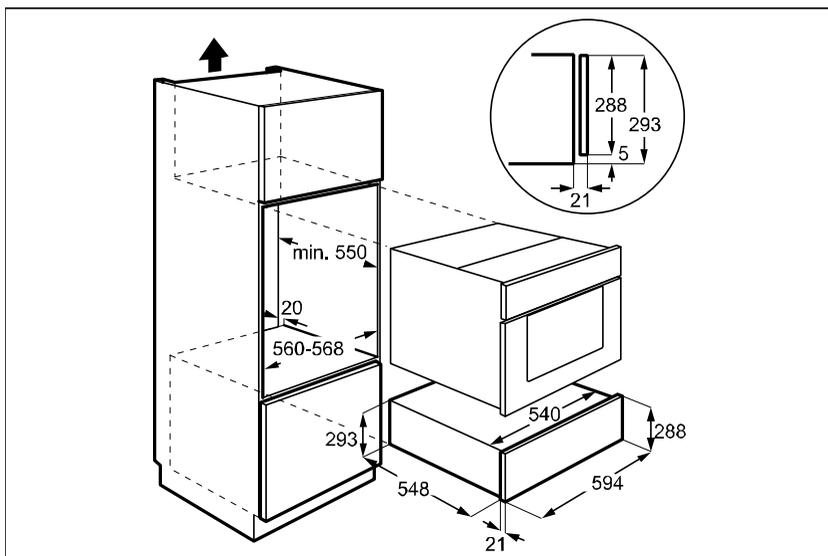

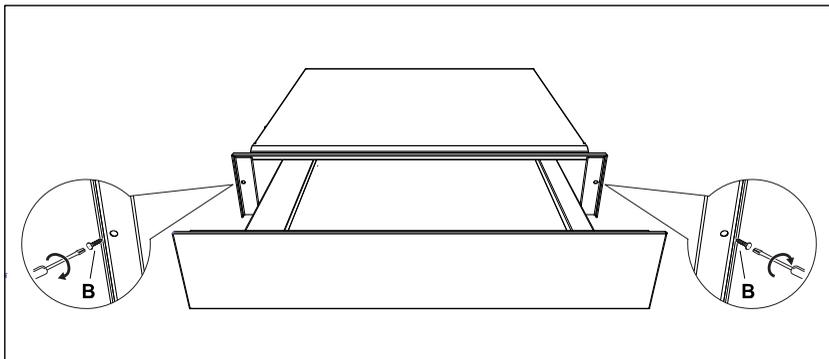

www.electrolux.com/shop



943359-b

