



ETB2302H, ETB2502H,  
ETB2802H, ETB3400H,  
ETB3700H, EBB2802H,  
EBB3400H, EBB3700H,  
EME2800H, EME3700H

## EASY WAY TO REGISTER YOUR PRODUCT WITH YOUR SMARTPHONE

- 1 Photograph** the camera icon located on your product's serial tag, including the 4 dots (⦿).



Step 1 - Photograph the camera icon with the right, including the 4 dot (⦿).  
Step 2 - Send it in via Line, Facebook Messenger, Or go online.  
• Line: @eluxreg  
• Facebook: eluxreg  
• Online: eluxreg.com  
MADE IN THAILAND



- 2 Send it in** via Line, Facebook Messenger or go online.



@eluxreg



eluxreg



eluxreg.com

- 3 Enjoy** many privileges.\*

\* Terms and conditions apply.



# Electrolux

# ENG-CHINESE



## Thank You for choosing Electrolux!

Congratulations and thank you for choosing an Electrolux refrigerator/freezer. We are sure you will find your new appliance a pleasure to use. Before you start using the appliance, we recommend you read through the entire user manual which describes the appliance and its many functions. To avoid any unnecessary risks, misuse or hazards that may be present when using a new electrical appliance, it is important you read the safety instructions carefully. We recommend you keep this user manual for future reference and pass it on to future owners. After unpacking the appliance, please check that it is not damaged. If in doubt, do not use the appliance but contact your local Electrolux Customer Care Centre.

## CONTENTS

Important Safety Information .....	3
Installing and Cleaning the Refrigerator .....	4
Temperature Control .....	5
LED Lighting .....	7
Door Storage Bins .....	7
Crisper Bin .....	7
- Storing Vegetables	
- Storing Fruits and Small Items	
Deodorizer .....	8
Refrigerator Features .....	9
Food Storage Guide .....	16
Troubleshooting .....	17
Noise .....	18

**RoHS**  
Compliant

Being ensured the permissible content limitation of  
some toxic chemicals (RoHS compliant)  
(According to the Circular No. 30/2011/TT-BCT Vietnam,  
dated 10<sup>th</sup> August, 2011)

## ENVIRONMENTAL TIP

### Disposal information for users

Most of the packing materials are recyclable. Please dispose these materials through your local recycling depot or place them in appropriate collection containers.

If you wish to discard this appliance, please contact your local authorities and ask for the correct method of disposal. These products are RoHS compliance.

### Conditions of use

This appliance is intended to be used in household and similar applications such as,

- Staff kitchen areas in shops, offices and other working environments;
- Farm house and by clients in hotels, motels and other residential type environments;
- Bed and breakfast type environments;
- Catering and similar non-retail applications;

Please read the user manual carefully and keep it in a handy place for later reference.

The symbols you see in this manual have the following meanings:

## WARNING

This symbol indicates information concerning your personal safety.

## CAUTION

This symbol indicates information on how to avoid damaging the appliance.



## TIPS AND INFORMATION

This symbol indicates tips and information about the use of the appliance.

## ENVIRONMENTAL TIP

This symbol indicates tips and information about economical and ecological use of the appliance.

### MEANING OF SYMBOLS

-  This symbol indicates to never do this.
-  This symbol indicates to always do this.

## TIPS AND INFORMATION

Important: Check for any damages or marks. If you find that the refrigerator is damaged or marked, you must report this within 7 days if you wish to claim for damages/marks under the manufacturer's warranty. This does not affect your statutory rights.













## WARNING



If pressurised aerosol containers bear the word 'Flammable' and/or a small flame symbol, do not store them inside any refrigerator. If you do so, you may cause an explosion.

When you dispose of refrigerators and freezers, remove all doors. Children can suffocate if they get trapped inside. This refrigerator contains insulation formed with flammable blowing gases. Avoid safety hazards by carefully disposing of this appliance.






## WARNING

-  This appliance must be plugged into its own dedicated 220-240V, 50/60Hz AC electrical outlet
-  Ensure that the electrical outlet is properly earthed to ground. Consult a qualified electrician if you are unsure.
-  Do not use an extension cord or adapter plug.
-  If the power cord is damaged, it must be replaced by manufacturer, its service agent or similarly qualified personnel in order to avoid a hazard.
-  Unplug the appliance before cleaning and before changing the light bulb to avoid electric shock.
-  Never unplug the appliance by pulling on the power cord. Always grip the plug firmly, and pull straight out of the receptacle to prevent damaging the power cord. Choose a location that is not too cold for installation.
-  The temperature should be above 10 degrees °C.
-  Put the appliance in a dry place, avoiding areas of high moisture or humidity.
-  Do not place the appliance in frosty or unprotected areas, such as in a garage or on a verandah.
-  Do not place the appliance in direct sunlight.
-  Do not place the appliance near stoves, fires or heaters.
-  The plug must be accessible when the appliance is in position.

## WARNING

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

Please follow these tips;

-  Never let children play with the refrigerator.
-  Never store fizzy drinks in the freezer compartment.
-  Never try to repair the refrigerator on your own.
-  Never use electric heaters or dryers to defrost the freezer because you can receive an electric shock.
-  Never use electrical appliances inside the storage areas.

## WARNING

### Stability Foot

When you refrigerator is in place, wind down the stability foot to the floor to stabilise it. Lift the front of the refrigerator to take the weight off the stability foot, then turn it 1/4 turn further to ensure firm contact with the floor.

If you do move the refrigerator, remember to wind it back up, to allow the refrigerator to roll. Remember to reset it when reinstalling.



#### R600A REFRIGERANT WARNING

- This appliance contains flammable R600a refrigerant. Avoid safety hazards by carefully installing, handling, servicing and disposing of this appliance. If your appliance contains R600a it will be indicated on the rating plate inside the appliance.
- Ensure that the tubing of the refrigerant circuit is not damaged during transportation and installation.
- In the event any damage accidentally occurs, keep the appliance away from open fires and any devices that produce sparks or arcs and luminaries during normal or abnormal operation, and unplug the appliance at the power point. Call authorized service for necessary action and advice.
- Leaking refrigerant may ignite vent area if leak occurs.
- The room for installing appliance must be at least 1m<sup>3</sup> per 8g of refrigerant. The amount and type of refrigerant in the appliance can be found on the rating plate inside the appliance.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

#### WARNING

- Do not use a steam cleaner. If live components come in contact with the condensing steam, they may short circuit or cause an electric shock.
- Do not plug the appliance into a timer fitted to the power point.
- Do not put your appliance on an uneven surface.
- Do not store explosive substances such as aerosol cans with flammable propellant in the appliance.
- Do not store fizzy drinks in the freezer compartment.
- Never try to repair the refrigerator on your own. Use only a qualified or authorised service person for repairs.
- Never use electric heaters or dryers to defrost the freezer because you can receive an electric shock.

#### Installing Your New Refrigerator

 
Clean the refrigerator thoroughly according to instruction, and wipe away any dust that has accumulated during shipping.

Check that the floor is level. If it is not then adjust the provided levelling leg so product is level and stable.

We recommend that you let your refrigerator run for two to three hours before you put any food in it. This will allow you to check that it is operating properly and that enough cool air is going to the freezer.

#### Clearance around your Top and Bottom Mount refrigerator

- Allow a minimum of 30mm clearance on both sides of the refrigerator.
- Allow 50mm clearance at the back of the refrigerator.
- Allow a minimum of 10mm clearance above the hinge cover.
- If you do not have a cupboard with allowance for air flow above the refrigerator, the recommended clearance area on top increases to 90 mm.
- When positioned in a corner area, spacing of at 350mm on the hinge side will allow the doors to open enough to enable the removal of bins and shelves.

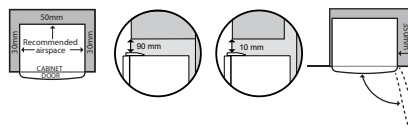

NOTE: In installation where both sides and the rear of the refrigerator are not enclosed by cabinetry eg the refrigerator is placed against a wall, the clearance between the rear of refrigerator and the wall should not be greater than 75mm.

Your refrigerator uses energy efficient components that may produce different noises (Refer "Noises" page for examples) to your old refrigerator. Occasionally a gurgling sound of refrigerator flowing or the sound of parts expanding and contracting can be heard. These noises are quite normal.

#### Cleaning Your Refrigerator

##### Exterior

You should only clean your refrigerator with lukewarm soapy water and a soft cloth. Rinse with clean water and then wipe the surface with a soft clean cloth to remove any soap residue.

##### Interior

You should clean the refrigerator interior regularly. Wash the interior with a soft cloth and lukewarm soapy water. Thoroughly dry all surfaces and removable parts. Avoid getting water on refrigerator controls. If you have taken out any removable parts, replace them and switch the power on before restocking the refrigerator with food. Naturally, you should keep the interior of your refrigerator hygienic by promptly and thoroughly wiping up any food spills.

#### WARNING

Never use hot water, solvents, commercial, caustic or abrasive cleaners, or scourers to clean this appliance as they will damage it. Many commercially available cleaning products and detergents contain solvents that will damage your refrigerator. When cleaning, use only a soft cloth and lukewarm soapy water.

## TEMPERATURE CONTROL

When you first turn on the refrigerator, set both the refrigerator and freezer temperature control to normal. Please refer to the below section for information on adjusting refrigerator and freezer temperature.

 
### **i** TIPS AND INFORMATION

#### Changing setting

When you change the temperature settings, make small adjustments and wait 24 hours before assessing whether you need to make any further changes.

#### For Top Freezer models


##### Freezer temperature setting recommendation

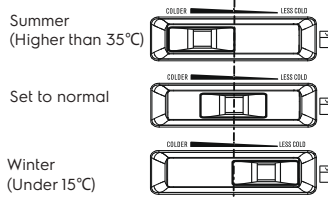

#### Refrigerator temperature adjustment


1. Select the refrigerator control
2. Slide the control to the left to set it to colder
3. Slide the control to the right to set less cold
 
##### Refrigerator temperature setting recommendation

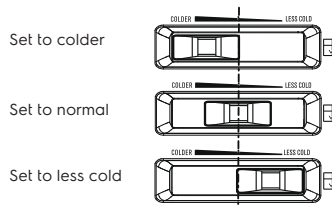

#### For Bottom Freezer models

 
##### Freezer temperature setting recommendation

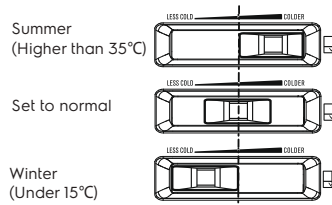

#### Refrigerator temperature adjustment

1. Select the refrigerator control
2. Slide the control to the left to set it to less colder
3. Slide the control to the right to set cold
 
##### Refrigerator temperature setting recommendation

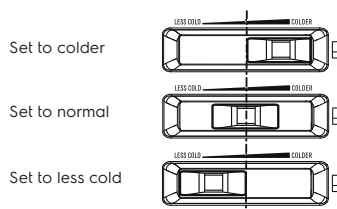

### **i** TIPS AND INFORMATION

Setting the freezer temperature to colder is not recommended for normal or very hot climate condition as this will limit the cooling capacity to other sections of the refrigerator. In very cold climate the freezer will need to be set colder.

## DOOR ALARM

If the refrigerator door is left open longer than two minutes, a buzzer will sound. Re-set the alarm by pressing the Light switch or closing the door.

## TEMPERATURE CONTROL

 
### For Multi Top Freezer models

We recommend that when you start your refrigerator for the first time, the temperature for the refrigerator is to set to 3°C and the freezer to -18°C. If you want to change the temperatures, use the instructions below. You should make only small adjustments and wait 24 hours to see whether you need to make further changes.




### TIPS AND INFORMATION

When you set a temperature, you set an average temperature for the whole appliance cabinet. Temperatures inside each compartment may vary, depending on how much food you store and where you place it. High or low room temperature may also affect the actual temperature inside the appliance.
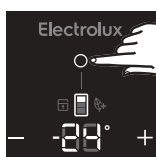
#### How to select the compartment to set temperature



Use "Compartment Select" button to highlight freezer, middle or fresh food compartment temperature setting.

Compartment Icon Display		
		
Freezer Selected	Middle Selected	Food Selected

#### Adjusting the freezer temperature



1. Press left "<" arrow button to make the freezer colder in 1°C steps.
2. Press right ">" arrow button to make the freezer warmer in 1°C steps.

The Freezer temperature range: -23°C to -14°C

#### Adjusting the middle temperature



1. Press left "<" arrow button to make the middle colder in 1°C steps.
2. Press right ">" arrow button to make the middle warmer in 1°C steps.

The Middle temperature range: -12°C to 3°C

#### Adjusting the refrigerator temperature



1. Press left "<" arrow button to make the middle colder in 1°C steps.
2. Press right ">" arrow button to make the middle warmer in 1°C steps.

 
The Refrigerator temperature range: 0°C to 7°C

### TIPS AND INFORMATION

Coldest freezer setting is not recommended in normal and very hot climates as this will limit the cooling to the refrigerator sections. In very cold climates the freezer will need to be set colder.

## Door Alarm

Press "Compartment select" button to silence alarm.

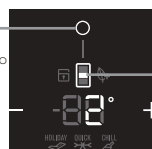


Compartment icon will pulse every 0.5 seconds.

If the Freezer, Middle or Fresh food doors are left open for longer than 2 minutes. The buzzer will sound and "Compartment icon" and "Compartment select button" will pulse every 0.5 seconds. Press "Door Switch" or close the door to stop alarm. Press any button to silence alarm. Alarm sound will mute for 8 minutes if the door is still open. If the alarm resounds then pressing the button again will silence the alarm for a further 8 minutes. When door alarm is activated, all other functions are locked out.

#### Energy efficiency

 Your appliance has been designed with energy efficiency in mind and can operate in any of three modes (NORMAL, ECO, HOLIDAY), depending on the level of efficiency sought.

## ECO Mode

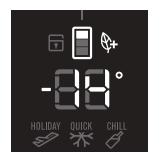


When the green "ECO" icon is illuminated, it means your appliance is set to run in an ecologically

The "ECO" icon will appear when setting Freezer compartment temperature from -18°C to -17°C, Middle compartment temperature from -2°C to 4°C and Fresh food compartment temperature from 3°C to 7°C.

If any compartment temperature setting is outside of this range, or the Quick Freeze function is activated, the "ECO" icon will disappear.

## Holiday Mode

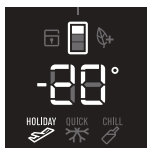 


Holiday mode is designed to take advantage of maximum energy efficiency when you will be away from your appliance for an extended period. Press “Modes” button to select holiday mode until “HOLIDAY” icon illuminates. “ECO” icon stay on if temperature setting still in the Eco mode range. Holiday mode can be activated while the door is opened. Manually enabled Holiday mode must be manually deactivated. Automatic Holiday mode (30 hours of on human interaction) deactivates if button is pressed on the display or door is opened.

**NOTE:** Holiday mode is designed to operate with minimum door opening (e.g. if fridge is used for long term storage), frequent door opening in Holiday mode could lead to food spoilage.

## Drink Chill Mode

 Use the Drink Chill Model for chilling drinks in the freezer, sounding an alarm after 20 minutes (default) to remind you to remove the bottles. Press the “Modes” button to select drinks chill mode. “CHILL” icon will illuminate. The numerical display will change to “20”

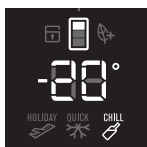

The minimum time adjustment is 5 minutes and maximum time is 30 minutes.

Adjust the timer by using arrow button “<” and “>”.


Each button touch will add or decrease 5 minutes to the chill time.

**Suggested chilling times:**

 - 10 minutes for cans of drink
- 20 minutes for bottles of wine
- 30 minutes for bottles of soft drink

**NOTE:** When drinks chill alarm is activated, all other functions are locked out

## Quick Freeze Mode

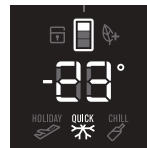

Use the quick freezer mode when you add a large amounts of food to the freezer compartment. The freezer compartment temperature will show -23°C. (This temperature cannot be changed while pressing the “Modes” button to select quick freeze will now operate for 90 minutes then switch to normal operation.)

## LED Lighting

 
Your refrigerator is fitted with long life LED lighting. In the unlikely event the LED lights should ever fail, then the LED lights need to be serviced by a qualified technician. Refer to page 14 for contact details.

## FEATURES

This section tells you how to make the most of the many useful features of the refrigerator and how to clean them. You can adjust the refrigerator bins to meet different storage needs.

### Door storage bins (shelves)

Both the refrigerator and freezer have door storage bins. You can adjust the refrigerator bins to meet different storage needs. All the door bins are completely removable for cleaning. If you want to remove or adjust a bin, lift and tilt to remove. To replace, tilt the top and push bin down until the support lugs lock it in place.

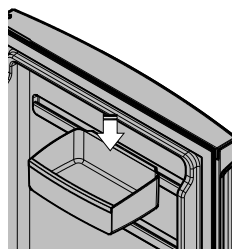

### Store safe compartment (where fitted)

You can use this compartment to store food and other items. To operate lock, push up to open and down to lock.

 
### Crisper bin

Storing vegetables

Use the crisper bin to store vegetables, fruits or small items. You can adjust the humidity inside the bin by sliding the humidity control.


### Storing fruits and small items

You can store fruits in the crisper bin, but do remember to lower the humidity via the humidity can be adjusted by the sliding the lever on the humidity control.

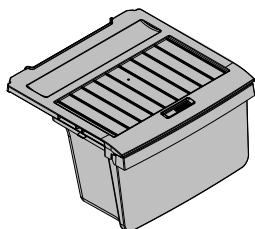

### Deodorizer

 
Your refrigerator is fitted with Nano copper deodorizer to assist with the removal of food odours inside your refrigerator. Keeping the food covered and wrapping it in plastic will also help to reduce the odours inside your refrigerator.

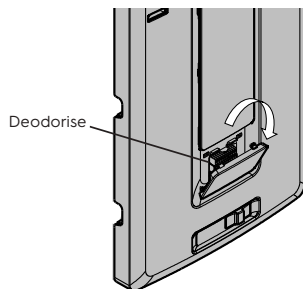



TOP FREEZER FEATURES

 - ETB2302H

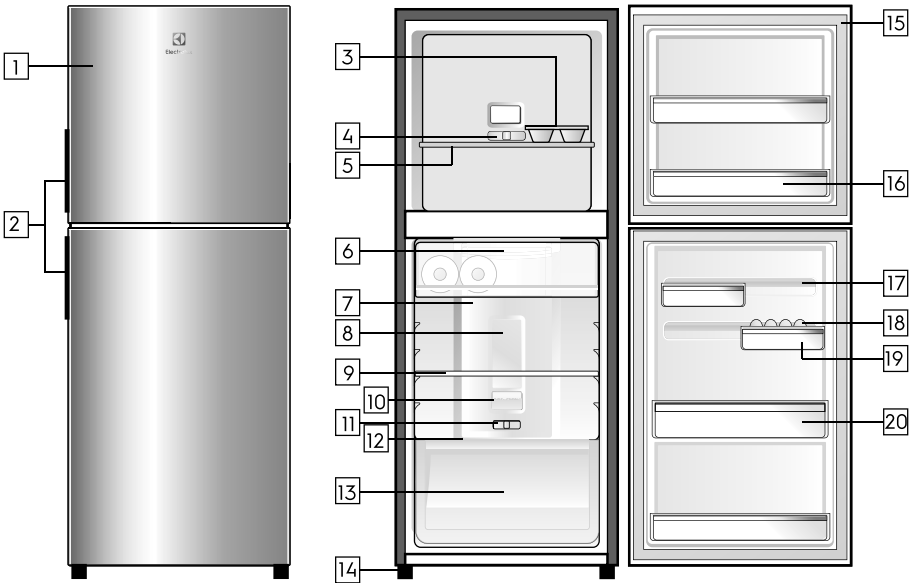


The details of the refrigerator feature:

1	Doors	11	Slide Control Refrigerator
2	Door Handles	12	Humidity Slide
3	Ice Tray	13	Crisper
4	Slide Control Freezer	14	Feet
5	Freezer Shelf	15	Gaskets
6	Chill room	16	Door Bins
7	Multi Flow	17	FlexStor Rails
8	Refrigerator Light	18	Egg Tray
9	Shelf	19	FlexStor Bins
10	Deodoriser Cover Refrigerator	20	Bottle Bins

TOP FREEZER FEATURES

 - ETB2502H

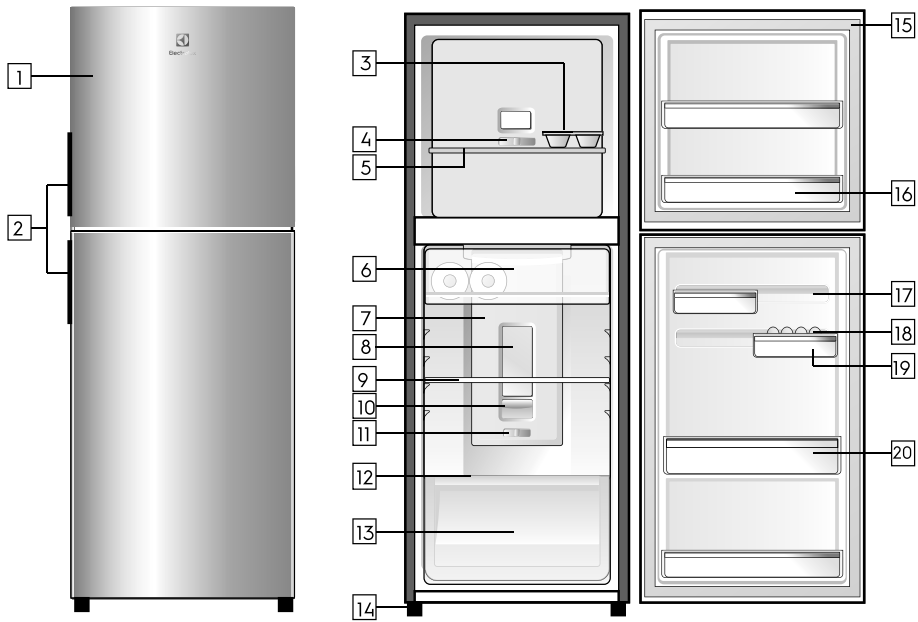


The details of the refrigerator feature:

1	Doors	11	Slide Control Refrigerator
2	Door Handles	12	Humidity Slide
3	Ice Tray	13	Crisper
4	Slide Control Freezer	14	Feet
5	Freezer Shelf	15	Gaskets
6	Chill room	16	Door Bins
7	Multi Flow	17	FlexStor Rails
8	Refrigerator Light	18	Egg Tray
9	Shelf	19	FlexStor Bins
10	Deodoriser Cover Refrigerator	20	Bottle Bins

TOP FREEZER FEATURES

 - ETB2802H

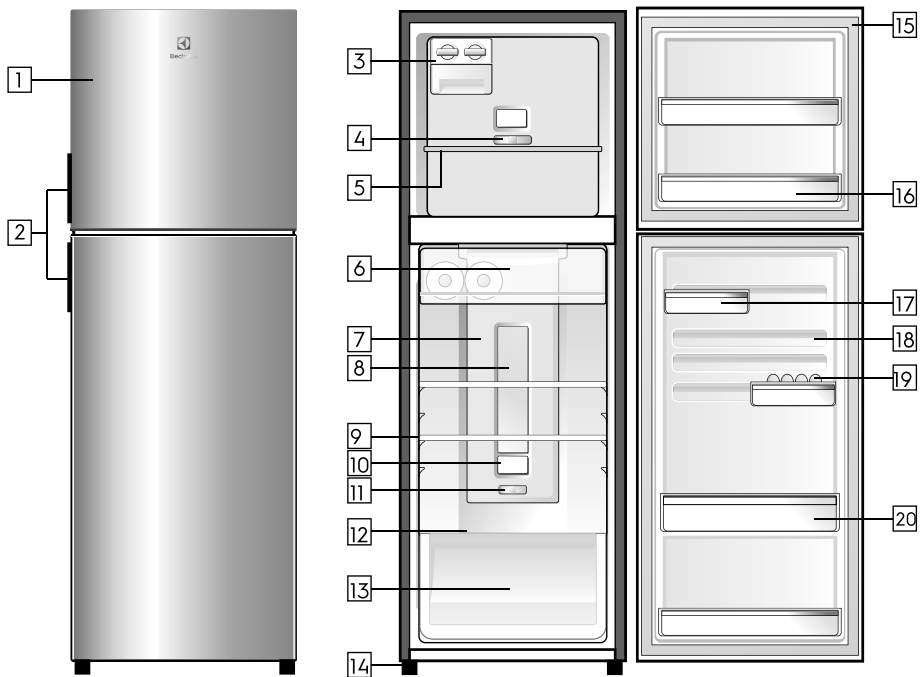


The details of the refrigerator feature:

1	Doors
2	Door Handles
3	Ice twist & serve
4	Slide Control Freezer
5	Freezer Shelf
6	Chill room
7	Multi Flow
8	Refrigerator Light
9	Shelves
10	Deodoriser Cover Refrigerator

11	Slide Control Refrigerator
12	Humidity Slide
13	Crisper
14	Feet
15	Gaskets
16	Door Bins
17	FlexStor Bins
18	FlexStor Rails
19	Egg Tray
20	Bottle Bins

TOP FREEZER FEATURES

 - ETB3400H
- ETB3700H

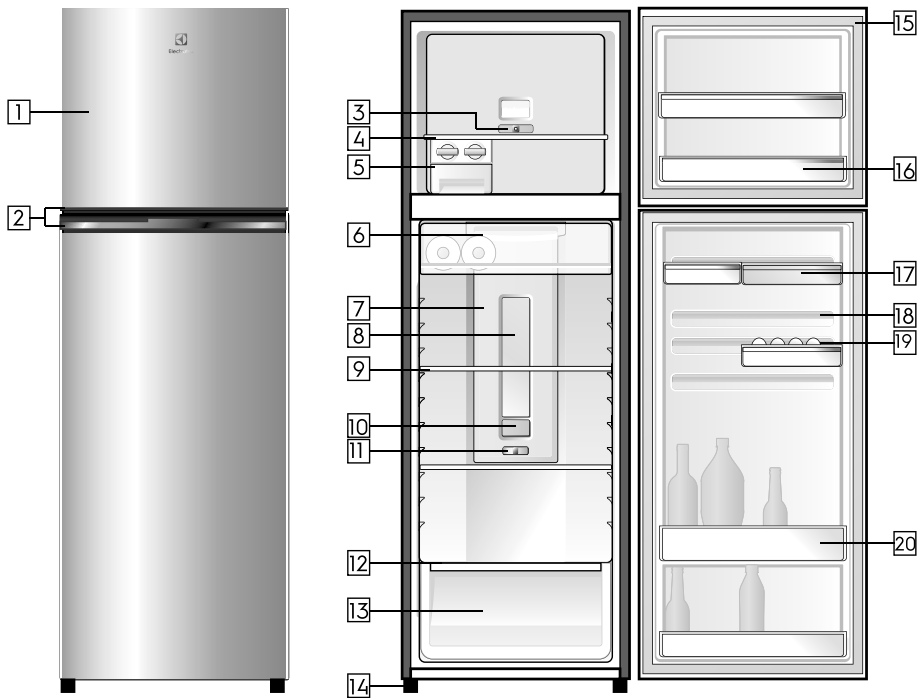


The details of the refrigerator feature:

1	Doors
2	Door Handles
3	Slide Control Freezer
4	Freezer Shelf
5	Ice Twist & Serve
6	Chill room
7	Multi Flow
8	Refrigerator Light
9	Shelves
10	Deodoriser Cover Refrigerator

11	Slide Control Refrigerator
12	Humidity Slide
13	Crisper
14	Feet
15	Gaskets
16	Door Bins
17	FlexStor Bins
18	FlexStor Rails
19	Egg Tray
20	Bottle Bins

**BOTTOM FREEZER FEATURES**

 - EBB2802H

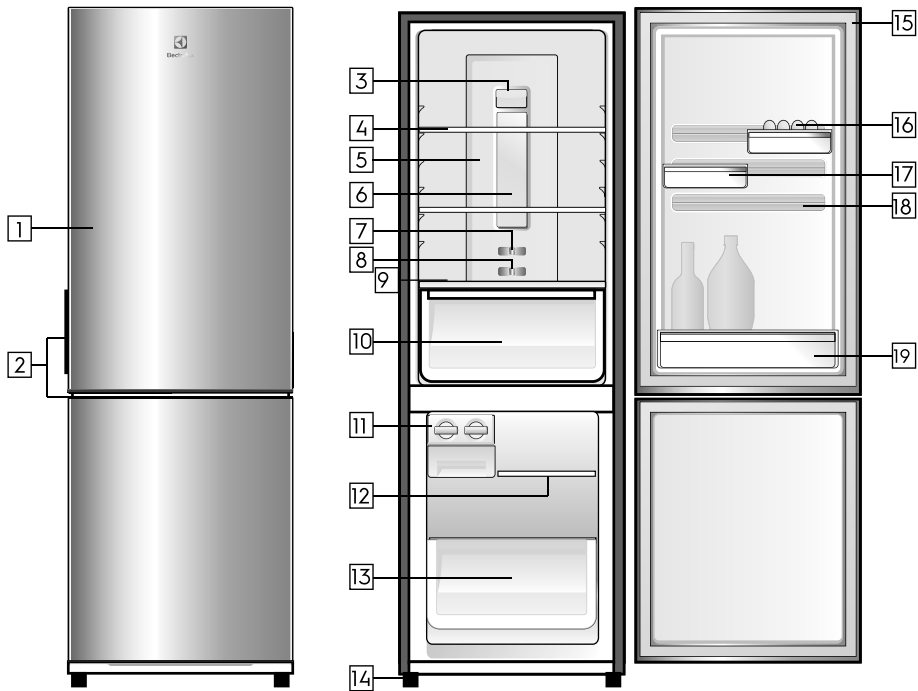


The details of the refrigerator feature:

1	Doors
2	Door Handles
3	Deodoriser Cover
4	Shelves
5	Multi Flow
6	Refrigerator Light
7	Slide Control Refrigerator
8	Slide Control Freezer
9	Humidity Slide
10	Crisper

11	Ice Twist & Serve
12	Freezer Shelf
13	Freezer Drawer
14	Feet
15	Gaskets
16	Egg Tray
17	FlexStor Bins
18	FlexStor Rails
19	Bottle Bins

**BOTTOM FREEZER FEATURES**

 - EBB3400H
- EBB3700H

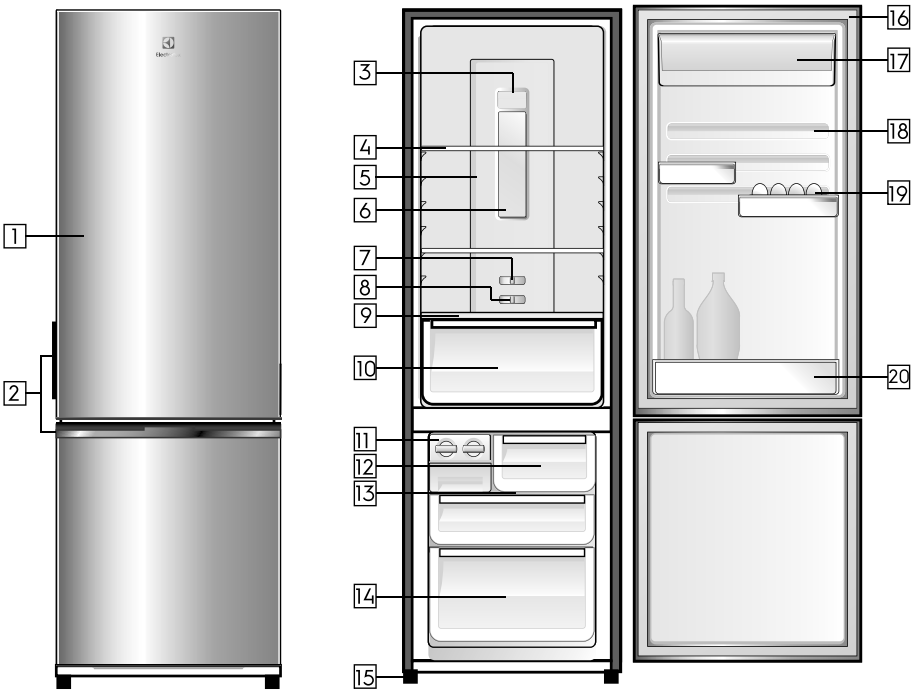


The details of the refrigerator feature:

1	Doors
2	Door Handles
3	Deodoriser Cover
4	Shelves
5	Multi Flow
6	Refrigerator Light
7	Slide Control Refrigerator
8	Slide Control Freezer
9	Humidity Slide
10	Crisper

11	Ice Twist & Serve
12	Meat Drawer
13	Freezer Shelf
14	Crisper
15	Feet
16	Gaskets
17	FlexStor Bins
18	FlexStor Rails
19	Egg Tray
20	Bottle Bins

MULTI TOP FREEZER FEATURES

 - EME2800H
- EME3700H

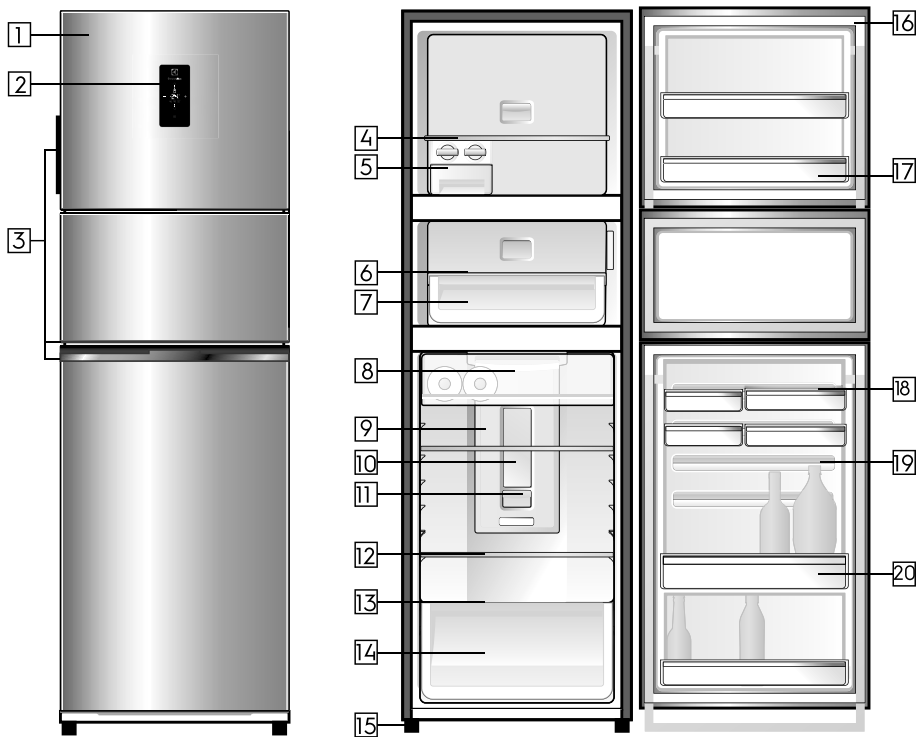

The details of the refrigerator feature:

1	Doors
2	Temperature Control Refrigerator
3	Door handles
4	Freezer Shelf
5	Ice Twist & Serve
6	Mid Door Shelf
7	Mid Door Bin
8	Chill Room
9	Multi Flow
10	Refrigerator Light

11	Deodoriser Cover refrigerator
12	Shelves
13	Humidity Slide
14	Crisper
15	Feet
16	Gaskets
17	FlexStor Bins
18	Egg Tray
19	FlexStor Rails
20	Bottle Bins

## FOOD STORAGE GUIDE

CATEGORY	PRODUCT	REFRIGERATOR	FREEZER	STORAGE TIPS
MEAT	Sausages and Mince	1-2 Days	2-3 Months	Keep cold meat at the back of the refrigerator where it is coldest.
	Chops and Steak	3-4 Days	4-6 Months	
	Cold Meats	3-5 Days	4-6 Months	Plastic can cause meat to sweat if stored in refrigerator for more than a day.
	Roasts	3-5 Days	12 Months	Roast can take up to 48 hours to defrost properly, transfer frozen roast to the refrigerator 2 days before use.
POULTRY	Chicken	1-2 Days	2 Months	If poultry takes on a smell or colour you are unsure about it is best to throw it out.
	Roast Chicken	3-5 Days	12 Months	
	Eggs	6 Weeks	Not Suitable	Whole eggs are not suitable for freezing, slightly beaten eggs may be frozen for four months.
SEAFOOD	Whole fish and fillets	2-3 Days	2 Months	Store in an airtight container or foil.
	Lobster and crabs	1-2 Days	2 Months	
	Prawns	1-2 Days	2 Months	Never freeze prawns in salty water as this will dehydrate the flesh.
DAIRY	Milk	Until Expiry Date	Not Suitable	If dairy takes on a smell or colour and you are unsure about it, it is best to throw it out.
	Yoghurt	7- 10 Days	Not Suitable	
	Hard Cheeses	2 Weeks - 2 Months	2 Months (Grated)	
	Soft Cheeses	1-2 Weeks	Not Suitable	Depending on the variety hard cheese can last from 2 weeks to 2 months.
	Butter	8 Weeks	12 Months	
FRUIT & VEGETABLES	Every fruit and vegetable has a different shelf life. Some stay fresh for a couple of days e.g. beans, others can last for a couple of months e.g. onions.		8-12 Months When freezing chop and blanch in small portions.	Keep vegetables in the crisper and away from the air vents to avoid freezing.
				Don't wash fruit and vegetables before storing them in the refrigerator as this can make them susceptible to rotting.
LEFT OVERS	Homemade meals	3-4 Days	2-6 Months	Store in sealed container.
				Freeze meals in small portion sizes to limit wastage.

### IMPORTANT

Please note, use this information as a guide only, actual storage times will vary depending on how you use your refrigerator, climatic conditions and the freshness of the food.



## TROUBLESHOOTING

If you find that something is wrong with your refrigerator, you can carry out some easy checks before calling for service. You may be able to fix the problem and save time and costs, and spare yourself from some inconvenience.

Problem	Solution
<b>When your appliance is not operating</b>	<ul style="list-style-type: none"><li>• Check that the power cord is plugged into the power outlet properly and that the outlet is switched on.</li><li>• Try running another appliance from the same power outlet. If no power is coming out from the outlet, you may have a blown fuse or tripped your household power supply circuit.</li><li>• Try adjusting the temperature control to a slightly colder position.</li><li>• It is normal for the freezer fan to NOT operate during the automatic defrost cycle or for a short time after the refrigerator is turned on.</li></ul>
<b>When there is refrigerator noise</b>	<ul style="list-style-type: none"><li>• Your refrigerator uses energy efficient components that may produce different noises from your old refrigerator.</li><li>• Occasionally, a gurgling sound of the refrigerant flowing or the sound of parts contracting or expanding may be heard.</li><li>• These sounds are quite normal. If the refrigerator is rattling or making vibrating noises, check that it is level and adjust levelling foot.</li></ul>
<b>If there are odours inside the refrigerator</b>	<ul style="list-style-type: none"><li>• The interior may need cleaning</li><li>• Some foods may produce strong odours and need to be tightly sealed.</li></ul>
<b>If the temperature in the refrigerator is too warm</b>	<ul style="list-style-type: none"><li>• Check that the refrigerator has enough clearance at the sides, back and top. Refer to the installation instructions in this manual.</li><li>• Refer to <b>Temperature Control</b> section.</li><li>• The door may have been opened for too long or too frequently.</li><li>• Food containers or packaging may be holding the door</li></ul>
<b>If the temperature in the refrigerator is too cold</b>	<ul style="list-style-type: none"><li>• Refer to <b>Temperature Control</b> section.</li><li>• Increase the temperature to avoid high energy consumption.</li></ul>

 
## SERVICE REQUEST

If the problem persists after you have made the above mentioned checks, contact your nearest service centre or the dealer where you bought the refrigerator from. Be ready to quote the model number which is stated on the label found at the inner plastic compartment liner wall of the refrigerator.

### Important notice

Before calling a service technician, please check carefully the operating instructions, service booklet and warranty terms and conditions.

Noise

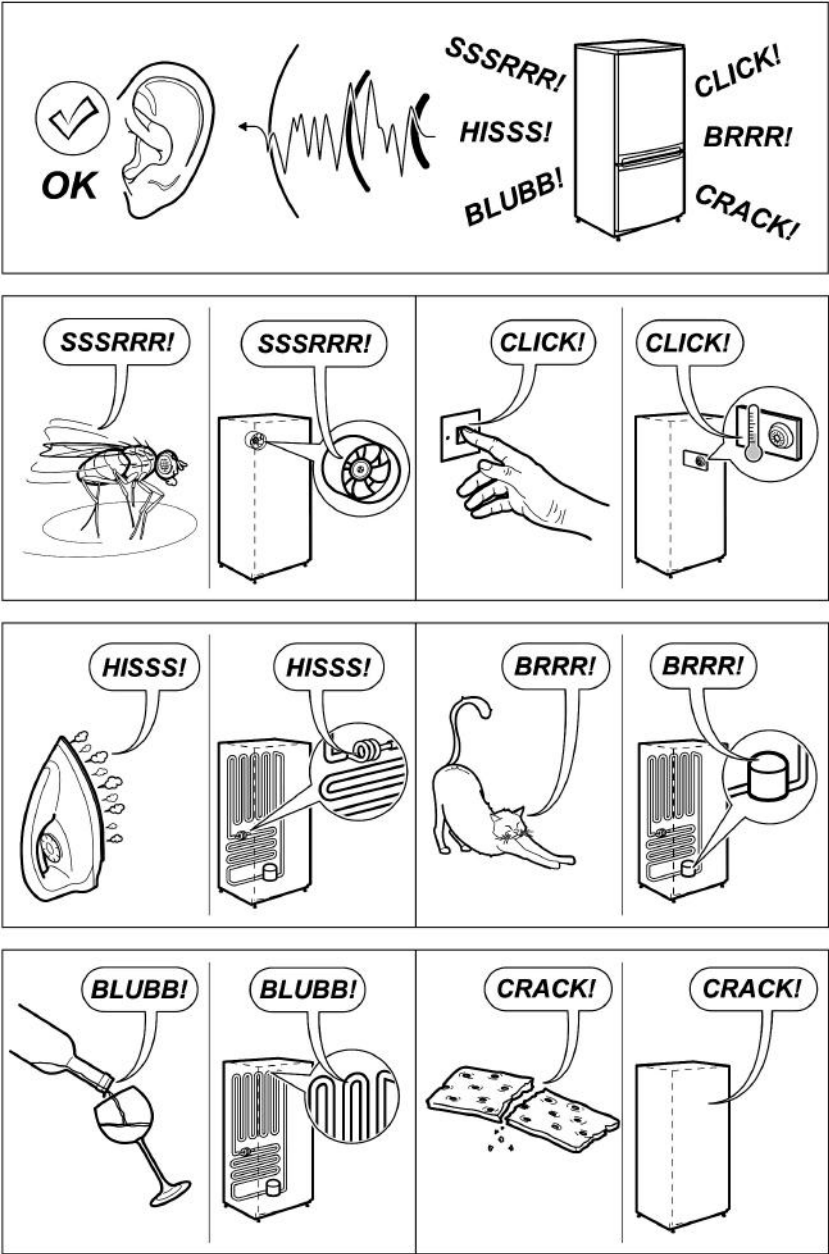

## The thoughtful design innovator

Do you remember the last time you opened a gift and said to yourself "That's exactly what I wanted!" That's the kind of feeling that the designers at Electrolux seek to evoke in everyone who chooses or uses one of our products. We devote time, knowledge and a great deal of thought into anticipating and creating the kind of appliances that our customers really need and want.

This kind of thoughtful care means innovating with insight. Not design for design's sake, but designed for the user. For us, thoughtful design means making appliances easier to use and performing tasks that are more enjoyable, and allowing our customers to experience the ultimate in luxury and ease of mind. Our aim is to make this ease of mind available to more people all over the world, in every part of their daily lives. So when we say that we're thinking of you, we mean exactly that.

### **Electrolux. Thinking of you**

**Share more of our thinking at**  
**[www.electrolux.com](http://www.electrolux.com)**





CONTACT DETAILS ELECTROLUX CUSTOMER CARE

Philippines

Domestic Toll Free: 1-800-10-845-care 2273  
Customer Care Hotline: (+63 2) 845 care 2273  
Electrolux Phils Inc  
25th Floor, Equitable Bank Tower 8751  
Paseo De Roxas, Makati City 1226 Philippines  
Office Tel: (+63 2) 845 4510  
Office Fax: (+63 2) 845 4548  
Email: [wecare@electrolux.com](mailto:wecare@electrolux.com)

Singapore

 
CONSUMER CARE HOTLINE : (+65) 67273699  
Electrolux S.E.A. Pte Ltd.  
1 Fusionopolis Place, West Lobby #07-10 Galaxis,  
Singapore 138522.  
Office Fax: (+65) 67273611  
Email : [customer-care.sin@electrolux.com](mailto:customer-care.sin@electrolux.com)

Malaysia

Domestic Toll Free: 1800-88-11-22  
Electrolux Home Appliances Sdn. Bhd  
7th Floor, Tower 2, Jaya 33, No. 3 Jalan Semangat,  
Seksyen 13, 4610 Petaling Jaya, Selangor  
Office Tel: (+60 3) 7843 5999  
Office Fax: (+60 3) 7955 5511  
Customer Care Center: Lot C6, No. 28,  
Jalan 15/22, Taman Perindustrian Tiong Nam,  
40200 Shah Alam, Selangor.  
Consumer Care Hotline: (+60 3) 5525 0800  
Fax: (+60 3) 5524 2521

Share more of our thinking at [electrolux.com](http://electrolux.com).

P/No: A12081618

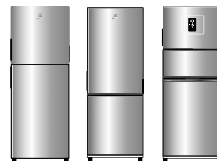

ETB2302H、ETB2502H、  
ETB2802H、ETB3400H、  
ETB3700H、EBB2802H、  
EBB3400H、EBB3700H、  
EME2800H、EME3700H



**Electrolux**

中文-HK

## 感謝您選擇伊萊克斯！

祝賀您，同時也感謝您選擇伊萊克斯冰箱。我們相信，這台新電器定會帶給您愉快的使用體驗。開始使用本電器之前，建議通讀整個使用者手冊，手冊中有對該電器及其多種功能的描述。為了避免在使用新電器時出現不必要的風險、誤用或危害，請務必仔細閱讀本安全說明。建議保留本使用者手冊，以便將來用作參考，以及將其轉交給其未來擁有者。開啟電器包裝後，請您檢查其是否損毀。如有疑問，請先不要使用本電器，請聯絡您當地的伊萊克斯客戶服務中心。



### 目錄

重要安全資訊.....	3
冰箱安裝與清潔.....	4
溫度控制.....	5
LED 燈.....	7
門上儲物櫃.....	7
保鮮櫃.....	7
- 儲存蔬菜	
- 儲存水果和小物件	
除臭器.....	8
冰箱結構.....	9
食物儲存指南.....	16
疑難排解.....	17
噪音.....	18

**RoHS** 保證部分有毒化學物件的可允許含量限制（符合限制  
Compliant 在電子電氣產品中使用有害物質的指令（RoHS）要求）  
（根據 2011 年 8 月 10 日越南 Circular No. 30/2011/  
TT-BCT）

## 環保提示

### 使用者廢棄物處置方法

大部分包裝材料均為可回收利用材料。請透過當地的回收站處理這些材料，或將其放置於適當的手機容器中。

如果您想去棄此電器，請與當地有關部門聯絡，詢問正確的處理方法。這些產品符合 RoHS 要求。

### 使用條件

本電器適用家庭使用以及類似用途，如：

- 商場、辦公室或其他工作環境中的員工廚房區域；
- 農舍和可供客人居住的酒店、汽車旅館以及其他住戶型環境；
- 簡易旅館類型環境；
- 餐飲及類似非零售用途；

請仔細閱讀使用者手冊，並將其置於方便之處，以便用作參考。

手冊中的符號有以下含義：

## 警告

該符號表示與您個人安全有關的資訊。

## 小心

該符號表示如何避免損壞電器的資訊。

## 建議與資訊

該符號表示與電器使用相關的建議與資訊。

## 環保提示

該符號表示電器的經濟和環保使用相關的建議與資訊。

### 符號含義

⊘ 該符號表示禁行此事。

⚠ 該符號表示始終如此。

## 建議與資訊

重要：檢查是否有損壞或劃痕。如果發現冰箱有損壞或劃痕，若您想按照製造商的保單要求損壞/劃痕賠償，請在 7 天之內報告實情。該行為不會影響您的合法權益。

## 警告



如果高壓密封容器上標有「易燃」字元和/或小火苗符號，請勿將其放入冰箱內。如果強行將其放入冰箱，可能引起爆炸。

處理冷藏室和冷凍室時，請打開所有門。如果孩子被困在裡面，會導致窒息。該冰箱包含可燃性發泡管形成的隔熱層。請小心使用本電器，以避免安全隱患。

## 警告

- ⚠ 該電器插頭必須插入專用 220-240V，50/60Hz 交流電源插座上
- ⚠ 確保電源插座正確接地。如果您無法確認，請向專業電工人員諮詢。
- ⊘ 請勿使用延長電線或轉接插頭。
- ⚠ 如果電源線受損，則必須由製造商、服務代理或類似合格人員進行替換，以避免發生危險。
- ⚠ 清洗和更換燈泡前，請拔掉電器插座，避免觸電。
- ⊘ 請勿拉扯電源線來拔下插頭。請務必牢牢抓住插頭，並將其從插座中拔出，以防止電源線損壞。
- ⚠ 選擇溫度不是太低的地點，放置冰箱。放置點溫度應當在 10°C 以上。
- ⚠ 將電器放置在乾燥的地方，避開高濕區域。
- ⊘ 請勿將電器放置在寒冷或無保護區域，如車庫或陽臺。
- ⊘ 請勿將電器放置在陽光直射區域。
- ⊘ 請勿將電器放置在靠近火爐、火源或暖氣設備附近。
- ⚠ 電器所放位置應便於插頭插入插座。

## 警告

該電器不適用於身體、感官或心智能力衰弱或缺乏經驗與知識之人員（包括孩子）使用，除非他們在其安全負責人的監督或指導下使用。監護孩子，確保不讓他們玩弄該電器。

 
請遵循以下建議：

- ⊘ 切勿讓孩子玩弄冰箱。
- ⊘ 切勿將碳酸飲料置於冷凍室。
- ⊘ 切勿嘗試自行修理冰箱。
- ⊘ 切勿使用電熱器或烘乾機給冷凍室除霜，否則您可能會觸電。
- ⊘ 請勿在儲存區域內使用電器。

## 警告

底腳

放置冰箱時，請將底腳向下轉動至緊貼地面，以使其穩定。將冰箱從正面抬起，使得底腳不受重，然後將其旋轉 1/4 圈，確保其與地板緊貼。如需移動冰箱，請記得將其轉回，以使冰箱能夠滾動。重新安裝時，請重新設定。

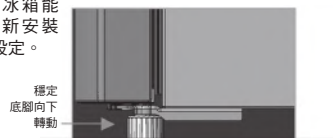

側視圖



#### R600A 製冷劑警示

- 該電器包含易燃的 R600a 製冷劑。小心安裝、操作、維修和使用本電器，以避免安全隱患。如果您的電器內含 R600a，則會在電器內部銘牌上顯示。
- 確保製冷劑回路的管道系統在運輸和安裝時未受損。
- 如不慎發生任何損毀，請將電器遠離明火以及在正常或異常操作時會產生火星或電光和發光的設備，並將冰箱的電源插頭從插座中拔出。撥打授權服務電話，以獲得必要的行動和建議。
- 如果發生洩漏，洩露的製冷劑可能會點燃洩露區域。
- 安裝電器的房間，每立方米的製冷劑密度不得超過 8 克。該電器的製冷劑劑量和類型可在電器內部銘牌中找到。
- 請勿損壞製冷劑回路。
- 除製造商推薦使用的電器類型外，請勿在電器的食物儲存隔室中使用電器。
- 保持設備外殼或內置結構中的通風設備開啟，清除堵塞。
- 除製造商推薦使用的方法外，請勿使用機械裝置或其他設備加速除霜過程。

#### ⚠ 警示

- 請勿使用蒸汽清潔器。如果帶電元件與冷凝蒸汽接觸，可能會引起短路或導致觸電。
- 請勿將電器插在計時器電源插座上。
- 請勿將電器置於不平坦的地面。
- 請勿在電器中儲存爆炸性物質，如裝有易燃物質的密封罐。
- 請勿將碳酸飲料置於冷凍室。
- 切勿嘗試自行修理冰箱。僅允許專業或授權服務人員修理。
- 切勿使用電熱器或烘乾機給冷凍室除霜，否則您可能會觸電。

#### 安裝新冰箱


根據說明，徹底清潔冰箱，並清除運輸過程中所積累的灰塵。

檢查地板是否平整。如果不平整，則調整所提供的調平腳，以便產品能夠平穩放置。

建議讓冰箱運行 2-3 小時後，再將食物放進冰箱內。這樣可以檢查冰箱是否運行正常，以及是否有足夠的冷氣進入。

#### 安裝冰箱時的上下間隙

 - 冰箱兩側留出至少 30 毫米的間隙。
- 冰箱後背留出至少 50 毫米的間隙。
- 冰箱蓋板上方留出至少 10 毫米的間隙。
- 如果冰箱上方沒有限制空氣流通的櫥櫃，則建議將蓋板上方的間隙增加至 90 毫米。
- 冰箱放置於角落時，門開一側之間距至少 350 毫米，以便冰箱門能夠開啟，並且有足夠的距離移動冰箱內抽屜和攔物架。

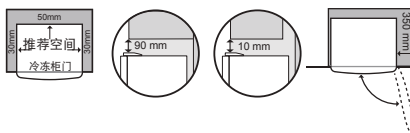

注意：在安裝時，如果冰箱的兩側和後背未受櫥櫃包圍（如：冰箱安裝靠牆），則冰箱後背與牆的間隙不應超過 75 毫米。

您冰箱使用的節能元件可能會產生與您的舊冰箱不同的噪音（可參考「噪音」頁面）。有時冰箱內流淌流水聲，或者能聽到零件膨脹或收縮的聲音。這些噪音都是很正常的。

#### 清潔冰箱

##### 外部

僅可使用微溫肥皂水和軟抹布清潔冰箱。用乾淨的水清洗，然後用柔軟乾淨的抹布擦拭表面，以清除所有肥皂水殘留。

##### 內部

您應當定期清潔冰箱內部。利用軟抹布和微溫肥皂水清洗冰箱內部。將所有表面和可移動部分徹底擦乾。避免冰箱控制裝置進水。如果您有移除任何可移動部分，請將其歸位後再打開電源，之後再將食物放進冰箱。當然，您應當迅速徹底地清除所有溢出的食物，以保持冰箱內部的衛生。

#### ⚠ 警示

請勿使用熱水、溶劑、市售的、腐蝕性或研磨性清潔劑或洗淨劑來清洗該電器，因為這會導致您的冰箱受損。許多市售清潔產品和洗滌劑都包含有損毀冰箱的溶劑成分。清潔時，只可使用軟抹布和微溫肥皂水。



## 溫度控制

首次打開冰箱時，將冷藏室和冷凍室的溫度都控制在正常範圍內。請參考以下部分，以獲取調整冷藏室與冷凍室溫度資訊。

### ① 建議與資訊

#### 變更設定

 
在調整溫度設定時，調整幅度要小，在評估是否需要再做進一步調整前，需等待 24 小時。

#### 冷凍室上置款

##### 冷凍室溫度設定建議

##### 夏天

(溫度高於 35°C)



##### 調至正常



##### 冬天

(低於 15°C)

 


#### 冰箱溫度調整

1. 選擇冰箱控溫件
2. 向左滑動控溫件，調至超冷
3. 向右滑動控溫件，調至微冷

##### 冰箱溫度設定建議

##### 調至超冷



##### 調至正常



##### 調至微冷

 


#### 冷凍室下置款


##### 冷凍室溫度設定建議

##### 夏天

(溫度高於 35°C)




##### 調至正常

 

##### 冬天

 (低於 15°C)




#### 冰箱溫度調整


1. 選擇冰箱控溫件
2. 向左滑動控溫件，調至微冷
3. 向右滑動控溫件，調至正常

##### 冰箱溫度設定建議

 
##### 調至超冷



##### 調至正常

 

##### 調至微冷

 

### i 建議與資訊

在正常或非常炎熱的天氣，不建議將冷凍室溫度調至超冷狀態，因為這將限制冰箱其他部分的製冷功能。在天氣很冷時，冷凍室的溫度應當設定為超冷。

## 冰箱門警報

如果冰箱門打開時間超過兩分鐘，會有蜂鳴聲響起。按下冰箱電燈開關或關閉冰箱門，即可重設警報。

## 溫度控制

 
### 多冷凍室上置款

首次使用該冰箱時，建議冷藏室溫度設定為  $3^{\circ}\text{C}$ ，冷凍室溫度設定為  $-18^{\circ}\text{C}$ 。如果您想變更溫度設定，請查看以下說明。溫度需小幅度調整，在決定是否需要再做進一步調整前，需等待 24 小時。

### 建議與資訊

當您設定溫度時，您設定的是冰箱所有冷凍櫃的平均溫度。根據您所儲存食物的數量和存放位置，冰箱內部每個隔室的溫度都不一樣。室溫的高低也會影響冰箱內部的實際溫度。

### 如何選擇隔室來設定溫度

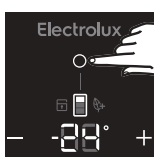

使用「隔室選擇」按鈕來選擇冷凍室、中室或食物保鮮隔室的溫度設定。

隔室圖示顯示		
已選冷凍室	已選中室	已選食物保鮮室

### 調整冷凍室溫度



1. 按左側「<」方向按鈕，使冷凍室溫度下調  $1^{\circ}\text{C}$ 。
2. 按右側「>」方向按鈕，使冷凍室溫度上調  $1^{\circ}\text{C}$ 。

冷凍室溫度範圍： $-23^{\circ}\text{C} \sim -14^{\circ}\text{C}$

### 調整中室溫度



1. 按左側「<」方向按鈕，使中室溫度下調  $1^{\circ}\text{C}$ 。
2. 按左側「>」方向按鈕，使中室溫度下調  $1^{\circ}\text{C}$ 。

中室溫度範圍： $-12^{\circ}\text{C} \sim 3^{\circ}\text{C}$

### 調整冷藏室溫度



1. 按左側「<」方向按鈕，使中室溫度下調  $1^{\circ}\text{C}$ 。
2. 按左側「<」方向按鈕，使中室溫度下調  $1^{\circ}\text{C}$ 。

 
冷藏室溫度範圍： $0^{\circ}\text{C} \sim 7^{\circ}\text{C}$

### 建議與資訊

在正常或非常炎熱的天氣，不建議將冷凍室溫度設定為最冷，因為這將限制冰箱其他部分的製冷功能。在天氣很冷時，冷凍室的溫度應當設定為超冷。

### 冰箱門警報

按「隔室選擇」按鈕以消除警報。

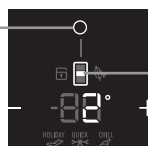


隔室圖示每 0.5 秒跳動一次。

如果冷凍室、中室或食物保鮮室的門打開時間超過 2 分鐘。會有蜂鳴聲響起，且「隔室圖示」和「隔室選擇按鈕」將每 0.5 秒跳動一次。按「門開關」或關閉冰箱門，即可停止警報。按任意鍵消除警報。如果門依然未關，則警報聲會在 8 分鐘後再次響起。如果警報聲再次響起，則再次按任意鍵，可再次消除警報 8 分鐘。當冰箱門警報啟動時，所有其他功能都將被鎖定。

### 能源效率

 在設計冰箱時，就考慮到了能源效率問題，可根據所需效率等級分三種模式（正常、環保、假日）運行。

### 環保模式

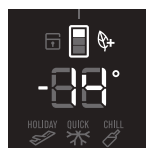

當綠色的「環保」圖示亮起時，則表示您的冰箱已設定為以環保模式運行。

當冷凍隔室的溫度為  $-18^{\circ}\text{C} \sim -17^{\circ}\text{C}$ 、中室隔室的溫度為  $-2^{\circ}\text{C} \sim 4^{\circ}\text{C}$ 、食物保鮮隔室的溫度為  $3^{\circ}\text{C} \sim 4^{\circ}\text{C}$  時，「環保」圖示將會出現。

如果任意隔室的溫度設定超出這一範圍，或速凍模式被啟動，則「環保」圖示將會消失。

## 假日模式

 


假日模式的設計目的，就是讓您在需要長時間離開冰箱時，能夠最大程度地利用能源效率。按「模式」按鈕，直到「假日」圖示亮起，選擇假日模式。如果溫度設定仍然在環保模式範圍內，則「環保」圖示保持不變。假日模式可在門打開時啟動。手動啟用假日模式，則必須手動關閉。按下顯示器上的按鈕或打開門，自動假日模式（30小時內無人接觸冰箱）將關閉。

注意：假日模式的設計目的，是為了冰箱能夠在門打開次數很少的情況下運行（如：冰箱用於長期儲存），在假日模式下頻繁地開冰箱門，會導致食物變質。

## 飲品冷藏模式

使用飲品冷藏模式在冷凍室中冷藏飲料，20 分鐘（預設）後發出警報聲，提醒您將飲料拿出。按「模式」按鈕，選擇飲品冷藏模式。「冷藏」圖示將亮起。數字顯示將變更為「20」。

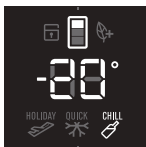

最小調整時間為 5 分鐘，最大調整時間為 30 分鐘。

通過使用“<”和“>”按鈕，調整計時器。

每次觸鍵，冷藏時間將增加或減少 5 分鐘。

建議冷藏時間：

- 罐頭或飲料，10 分鐘
- 瓶裝酒，20 分鐘
- 瓶裝軟飲，30 分鐘

注意：飲品冷藏警報啟動時，所有其他功能都將被鎖定。

## 速凍模式



當您在冰箱中添置大量食物時，可使用速凍模式。冷凍隔室的溫度將顯示為 -23°C。（按「模式」按鈕選擇速凍模式後，溫度無法變更，該模式下運行 90 分鐘後，將打開正常運行模式。）

## LED 燈

 
您的冰箱裝有使用壽命長的 LED 燈。LED 燈失效是不太可能發生的情況，萬一有發生，則需要專業技術人員來更換 LED 燈。參考第 14 頁，獲取聯絡方式詳情。

## 結構

本節說明如何利用冰箱的諸多結構，以及如何清潔它們。您可以調整冰箱的儲物櫃，以滿足不同的儲存需求。

### 門上儲物櫃（擱物架）

冷藏室和冷凍室都有門上儲物櫃。您可以調整冰箱的儲物櫃，以滿足不同的儲存需求。所有門上儲物櫃皆可完全移動，以方便清理。如果您想移除或調整儲物櫃，請將其抬起並傾斜移動。重新安裝時，傾斜頂部並將儲物櫃往下推，直到支撐支托鎖定至原位。

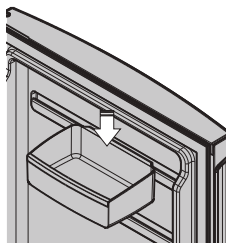

### 儲存安全隔室（定做）

您可以利用這一隔室來儲存食物或其他物件。操作鎖定時，往上推是打開，往下推是鎖定。

 
#### 保鮮櫃

#### 存儲蔬菜

利用保鮮櫃儲存蔬菜、水果或小物件。滑動濕度控制項，您可以調整內部濕度。


### 儲存水果和小物件

您可以在保鮮櫃中儲存水果，但切記要降低濕度，可透過滑動濕度控制項上的手柄來進行調節。

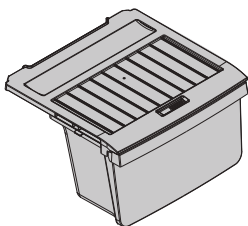


### 除臭器

 您的冰箱安裝有納米銅除臭器，可以幫助您除去冰箱內的食物氣味。蓋上食物以及將其用塑膠製品包好，亦可減少冰箱內的氣味。

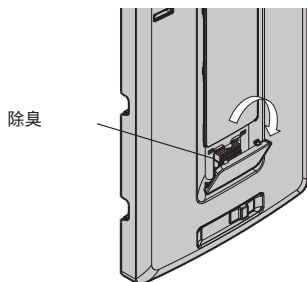

## 冷凍室上置款結構

 - ETB2302H

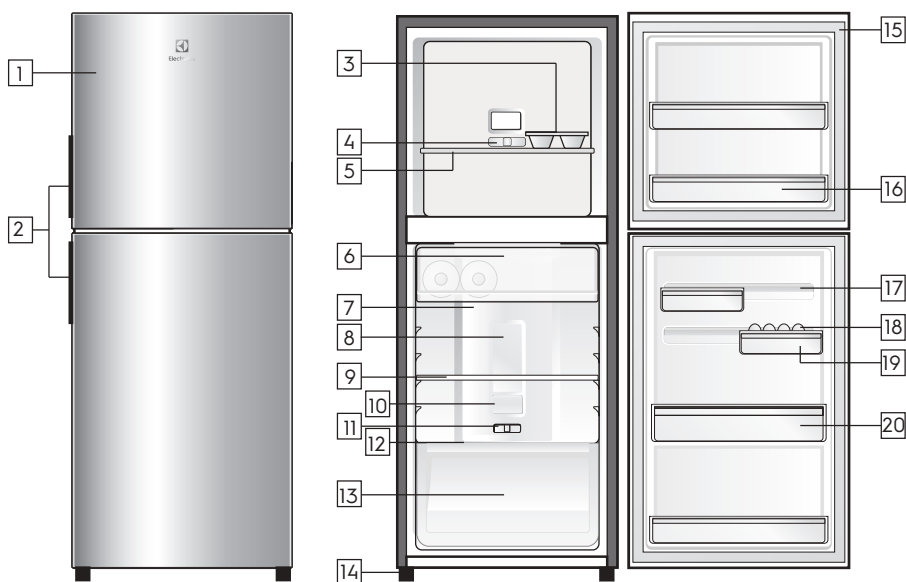


### 冰箱結構詳情：

1	門
2	門把手
3	制冰盤
4	冷凍室滑動控制項
5	冷凍室擱物架
6	冷藏室
7	多流程
8	冰箱燈
9	擱物架
10	除臭器蓋板

11	冷藏室滑動控制項
12	濕度滑塊
13	保鮮櫃
14	底腳
15	墊圈
16	門上儲物櫃
17	固定儲存橫欄
18	蛋盒
19	固定儲存儲物櫃
20	玻璃儲物櫃

## 冷凍室上置款結構

 - ETB2502H

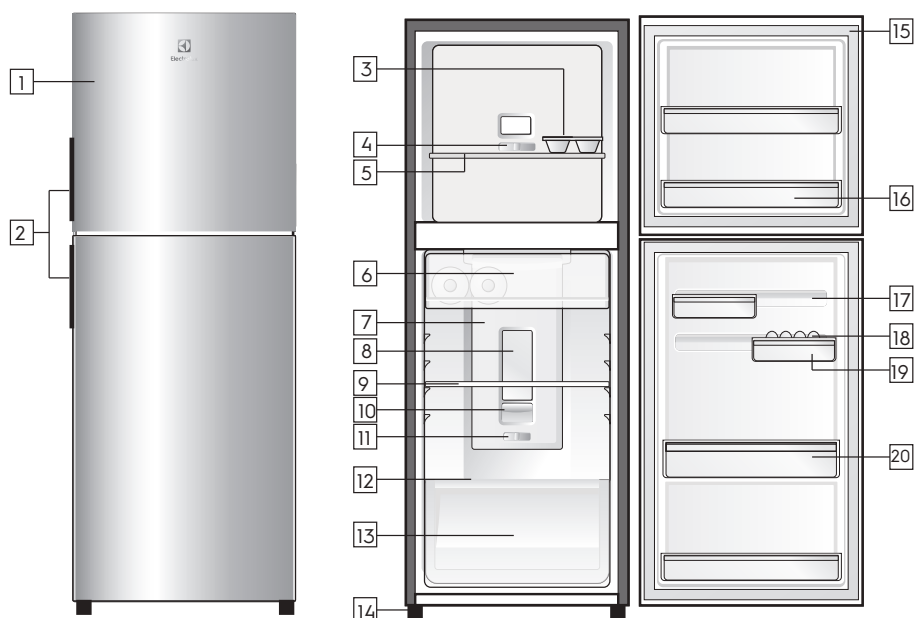


### 冰箱結構詳情：

1 門	11 冷藏室滑動控制項
2 門把手	12 濕度滑塊
3 制冰盤	13 保鮮櫃
4 冷凍室滑動控制項	14 底腳
5 冷凍室擱物架	15 墊圈
6 冷藏室	16 門上儲物櫃
7 多流程	17 固定儲存橫欄
8 冰箱燈	18 蛋盒
9 擱物架	19 固定儲存儲物櫃
10 除臭器蓋板	20 玻璃儲物櫃

## 冷凍室上置款結構

 - ETB2802H

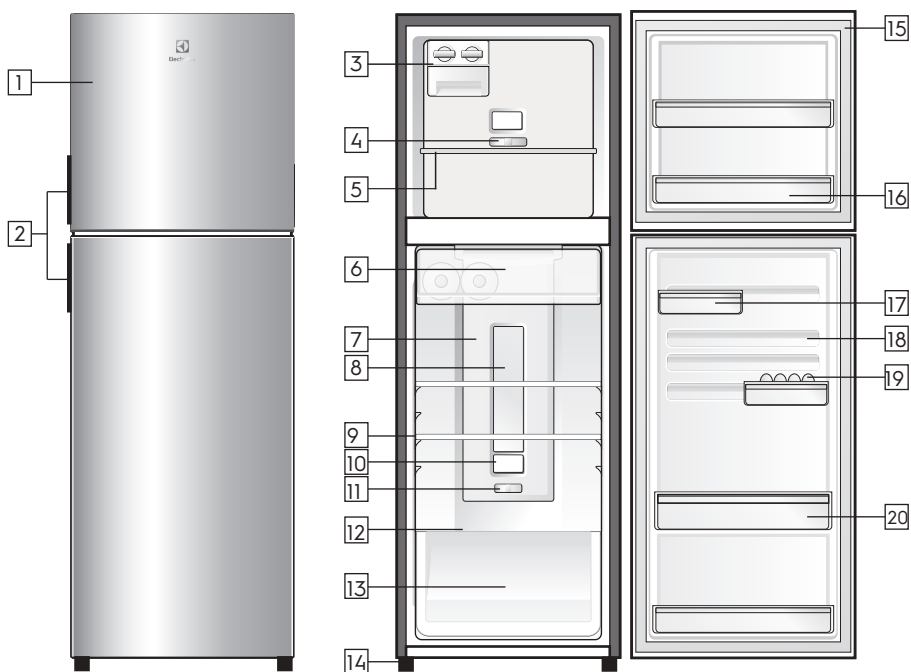


### 冰箱結構詳情：

1	門
2	門把手
3	冰塊扭&輔助器
4	冷凍室滑動控制項
5	冷凍室擱物架
6	冷藏室
7	多流程
8	冰箱燈
9	擱物架
10	除臭器蓋板

11	冷藏室滑動控制項
12	濕度滑塊
13	保鮮櫃
14	底腳
15	墊圈
16	門上儲物櫃
17	固定儲存儲物櫃
18	固定儲存橫欄
19	蛋盒
20	玻璃儲物櫃

## 冷凍室上置款結構

 - ETB3400H
- ETB3700H

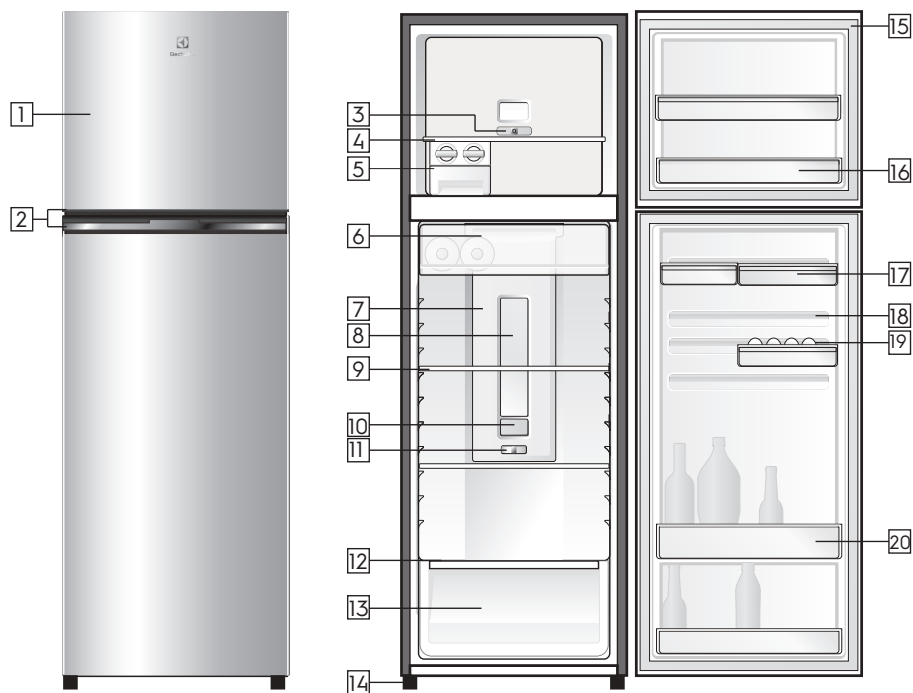


### 冰箱結構詳情：

1 門	11 冷藏室滑動控制項
2 門把手	12 濕度滑塊
3 冷凍室滑動控制項	13 保鮮櫃
4 冷凍室擱物架	14 底腳
5 冰塊扭 & 輔助器	15 墊圈
6 冷藏室	16 門上儲物櫃
7 多流程	17 固定儲存儲物櫃
8 冰箱燈	18 固定儲存橫欄
9 擱物架	19 蛋盒
10 除臭器蓋板	20 玻璃儲物櫃



## 冷凍室下置款結構

 - EBB2802H

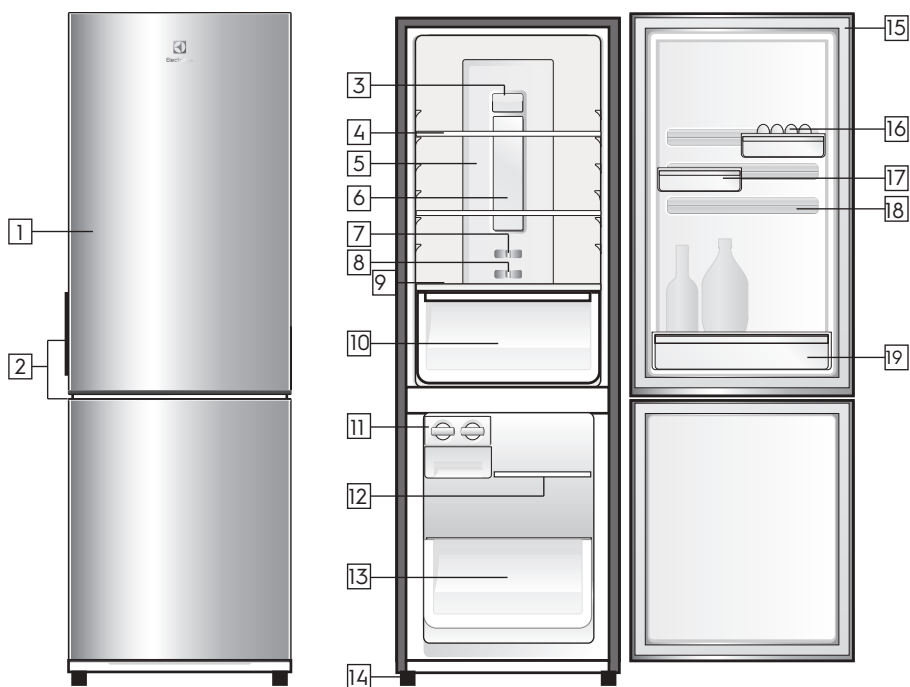


### 冰箱結構詳情：

1 門	11 冰塊扭 & 輔助器
2 門把手	12 冷凍室擱物架
3 除臭器蓋板	13 冷凍室抽屜
4 擱物架	14 底腳
5 多流程	15 墊圈
6 冰箱燈	16 蛋盒
7 冷藏室滑動控制項	17 固定儲存儲物櫃
8 冷凍室滑動控制項	18 固定儲存橫欄
9 濕度滑塊	19 玻璃儲物櫃
10 保鮮櫃	

## 冷凍室下置款結構

 - EBB3400H
- EBB3700H

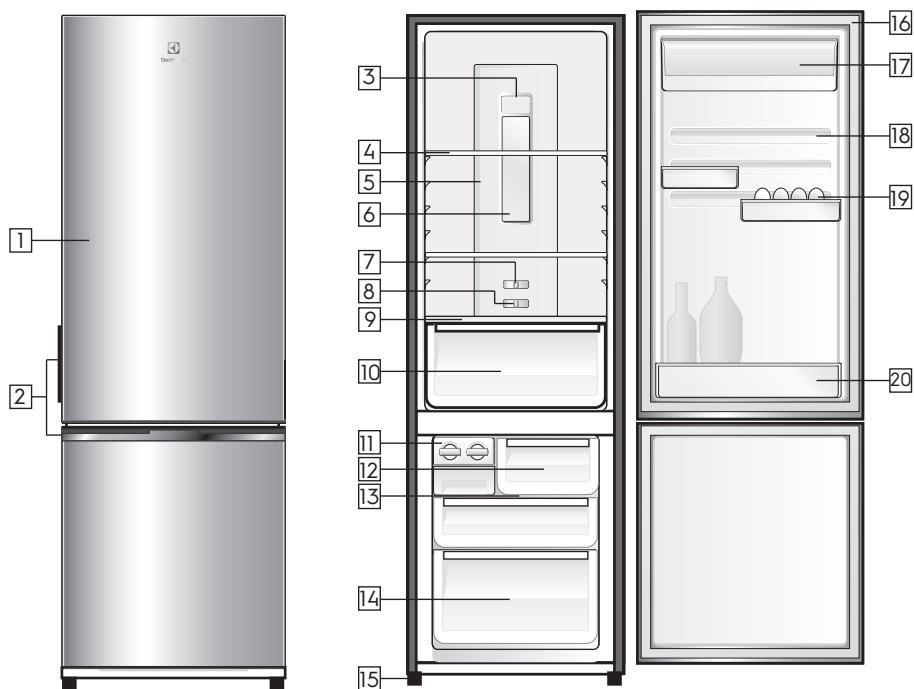


### 冰箱結構詳情：

1 門	11 冰塊扭 & 輔助器
2 門把手	12 肉類儲存屨
3 除臭器蓋板	13 冷凍室擱物架
4 擱物架	14 保鮮櫃
5 多流程	15 底腳
6 冰箱燈	16 墊圈
7 冷藏室滑動控制項	17 固定儲存儲物櫃
8 冷凍室滑動控制項	18 固定儲存橫欄
9 濕度滑塊	19 蛋盒
10 保鮮櫃	20 玻璃儲物櫃

## 多冷凍室上置款結構

 - EME2800H
- EME3700H

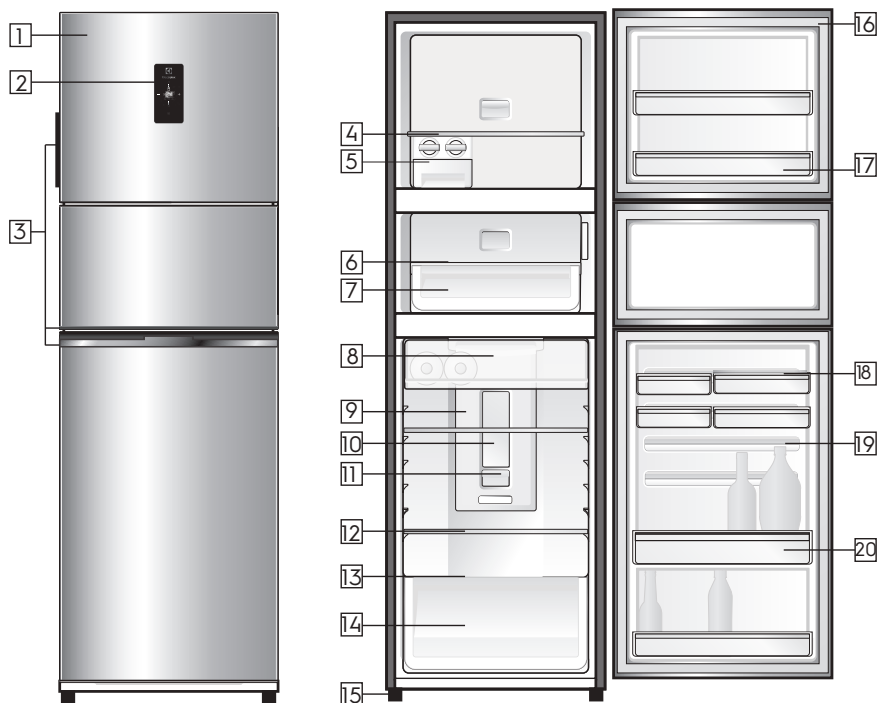

### 冰箱結構詳情：

1	門
2	冰箱控溫件
3	門把手
4	冷凍室擱物架
5	冰塊扭 & 輔助器
6	中門擱物架
7	中門儲物櫃
8	冷藏室
9	多流程
10	冰箱燈

11	除臭器蓋板
12	擱物架
13	濕度滑塊
14	保鮮櫃
15	底腳
16	墊圈
17	固定儲存儲物櫃
18	蛋盒
19	固定儲存橫欄
20	玻璃儲物櫃

## 食物儲存指南

類別	產品	冷藏	冷凍	儲存小貼士
肉類	香腸與肉餡	1-2 天	2-3 個月	將凍肉儲存在冰箱後部最冷的地方。
	豬排和牛排	3-4 天	4-6 個月	
	凍肉	3-5 天	4-6 個月	用塑膠袋裝肉，在冷藏室儲存超過一天，可能會導致肉類滲出水珠。
	烤肉	3-5 天	12 個月	
家禽類	雞肉	1-2 天	2 個月	如果家禽肉類出現異味或變色，而無法確認其是否安全時，請扔掉。
	烤雞	3-5 天	12 個月	
	雞蛋	6 週	不宜冷凍	完整的雞蛋不宜冷凍，稍微攪打過的蛋液可以冷凍 4 個月。
海產品	整條魚和魚片	2-3 天	2 個月	儲存在密封容器或用錫箔紙包裹。
	龍蝦與螃蟹	1-2 天	2 個月	
	明蝦	1-2 天	2 個月	永遠不要將明蝦冷凍在鹽水中，否則會導致肉質脫水。
乳製品	牛奶	有效期前	不宜冷凍	如果乳製品出現異味或變色，而無法確認其是否安全時，請扔掉。
	優酪乳	7-10 天	不宜冷凍	
	硬芝士	2 週-2 個月	2 個月（碎芝士）	視芝士的硬度而定，其儲存時間為 2 週到 2 個月不等。
	軟芝士	1-2 週	不宜冷凍	
	黃油	8 週	12 個月	
水果與蔬菜	每種水果和蔬菜的保質期都不同。有些保鮮期只有兩三天（如：豆類），有些可以儲存兩三個月（如：洋蔥）。		8-12 個月 切成小份，焯水後冷凍	將蔬菜儲存在保鮮櫃中，使其遠離通風口，避免結凍。
				水果和蔬菜儲存到冷藏室前，千萬不要清洗，否則可能導致其腐爛。
剩飯剩菜	家常飯菜	3-4 天	2-6 個月	將其儲存在密封容器中。
				將冷凍食物分成小份儲存，避免浪費。



### 重要

請注意，本指南資訊僅供參考，實際儲存時間可能視您使用冰箱的方式、氣候條件和食物的新鮮程度而不同。

## 疑難排解

如果發現冰箱有問題，在撥打服務電話前，可自行做一些簡單的排查。您或能解決問題，從而節約時間和花費，避免一些不便情況。

### 問題

### 解決方法

#### 當您的冰箱 不運行時

- 檢查電源線是否插在電源插座上，並檢查插座是否接通電源。
- 嘗試在相同的插座上運行其他電器。如果插座沒有電，可能是保險絲熔斷，或您的家用電源跳閘了。
- 嘗試將本控溫件調整至稍微冷一些的位置。
- 冰箱風扇在自動除霜過程中不運行，或在冰箱啟動後的短時間內不運行是正常的。

#### 冰箱有 噪音時

- 冰箱使用的節能元件可能會產生與舊冰箱不同的噪音
- 有時是冰箱內的流淌流水聲，或者聽到零件收縮或膨脹的聲音。
- 這些聲音都是很正常的。如果冰箱發出嘎嘎的聲音或發出振動的聲音，可以檢查其是否平整，並調整平腳。

#### 冰箱內 有異味

- 冰箱內部可能需要清潔
- 有些食物可能會產生很強的氣味，需要緊緊密封起來。

#### 冰箱 內溫度過高

- 檢查冰箱兩側及前後是否留有足夠的間隙。請參閱本手冊中的安裝說明。
- 請參考「**溫度控制**」章節
- 冰箱門打開時間可能過長或打開次數過於頻繁。
- 食物容器或包裝可能擋住了門

#### 冰箱 內溫度過低

- 請參考「**溫度控制**」章節
- 調高溫度，以避免高能耗。

 
 
 
 
## 服務請求

如果在完成上述檢查後問題仍然存在，請聯絡您最近的服務中心或您購買冰箱的經銷商。請記住冰箱型號，該型號標記在冰箱內塑膠隔層的內壁標籤上。

### 重要提示

在致電維修技術員之前，請仔細查看操作說明、服務手冊和保修條款與條件。

# 噪音

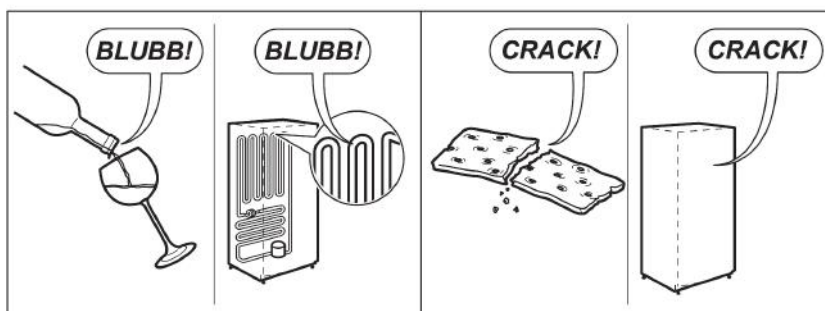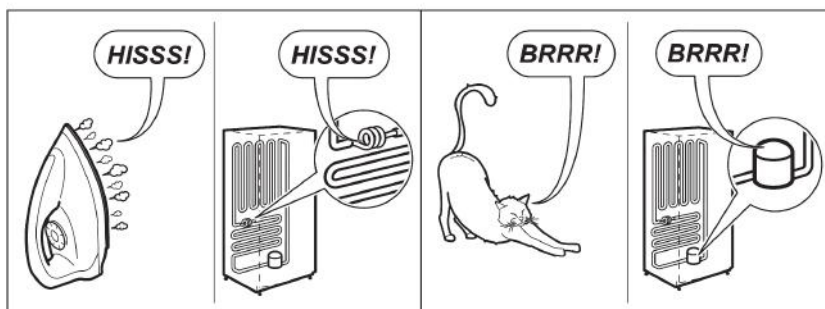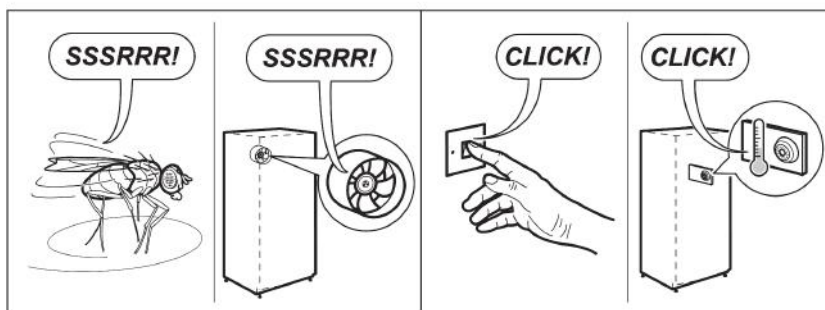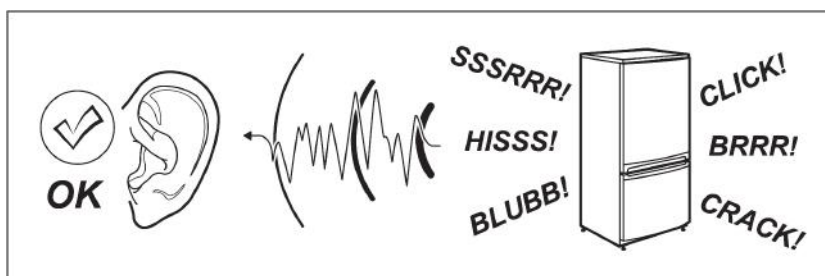

## 體貼周到的設計創新者

您是否還記得上次打開禮物，您對自己說「這正是我想要的！」的時刻。我們設計師的理念就是想在每一位使用我們產品的顧客身上尋求這種感覺。在預期和創造客戶真正需要和想要的電器方面，我們投入了大量的時間、知識和豐富的思考。

這種體貼周到的關懷，意味著創新與洞察力。不為設計而設計，只為使用者而設計。於我們而言，體貼周到的設計意味著讓設備更易於使用、執行更令人享受的任務，並讓我們的客戶感受奢華與輕鬆的極致體驗。我們的目標，是讓輕鬆的理念惠及全世界更多的人，滲透到日常生活中的方方面面。所以，當我們說我們在想你所想的時候，我們是真的做到了。

**伊萊克斯。想你所想**

 
**更多想法，盡在**

**[www.electrolux.com](http://www.electrolux.com)**





## 伊萊克斯客戶服務聯絡資訊



### 香港

DCH Electrical Appliances Service Centre  
5/F, DCH Building, 20 Kai Cheung Road,  
Kowloon Bay, Hong Kong  
Service Hotline: (852) 3193 9888

大昌行電器服務中心  
香港九龍灣啟祥道20號  
大昌行集團大廈5樓  
服務熱線：(852) 3193 9888

### 菲律賓

國內免費服務專線： 1-800-10-845-care 2273客  
戶服務專線： (+63 2) 845 care 2273 Electrolux  
Phils Inc  
25th Floor, Equitable Bank Tower 8751 Paseo  
De Roxas, Makati City  
1226 Philippines  
辦公室電話： (+63 2) 845 4510  
辦公室傳真： (+63 2) 845 4548  
電子郵件： [wecare@electrolux.com](mailto:wecare@electrolux.com)

### 馬來西亞

國內免費服務專線： 1800-88-11-22  
Electrolux Home Appliances Sdn. Bhd  
7th Floor, Tower 2, Jaya 33, No. 3 Jalan Semangat,  
Seksyen 13, 4610 Petaling Jaya, Selangor  
辦公室電話： (+60 3) 7843 5999  
辦公室傳真： (+60 3) 7955 5511  
客戶服務中心： Lot C6, No. 28, Jalan 15/22, Taman  
Perindustrian Tiong Nam, 40200 Shah Alam, Selangor.  
消費者服務專線： (+60 3) 5525 0800  
傳真： (+60 3) 5524 2521

### 新加坡

消費者服務專線： (+65) 67273699  
Electrolux S.E.A. Pte Ltd.  
1 Fusionopolis Place, West Lobby #07-10 Galaxis,  
Singapore 138522.  
辦公室傳真： (+65) 67273611  
電子郵件： [customer-care.sin@electrolux.com](mailto:customer-care.sin@electrolux.com)



A12081618A

Share more of our thinking at [electrolux.com](http://electrolux.com).

P/No: A12081618