

EN User Manual | Washing Machine

2

EWF7028M6WA

Enjoy peace of mind. Register your appliance today.

Stay updated on better living services, safety notices and shop for accessories.

 Open the camera app on your smartphone and point at the QR code to scan.

Product Registration QR code is located on the front of your appliance or inside the door rim.

- 2. Tap the notification or link to open the registration form.
- Complete your details and enjoy peace of mind.

Full version of the User Manual is available on the Product registration link via the above QR code Alternatively, visit www.electrolux.com for more information.

Welcome to Electrolux! Thank you for choosing our appliance.



Get usage advice, brochures, troubleshooter tips, service information, purchase accessories & spareparts, and register your product online at: www.electrolux.com

CUSTOMER CARE AND SERVICE

We recommend using original spareparts. Scan the QR code on the rating plate to get professional repair. When contacting our service department, please ensure you have the following data available, which can be found on the rating plate: Model, PNC, Serial Number.



(i) General information and tips.



Environmental information.

Subject to change without prior notice.

CONTENT

1. Important instructions for safety and environment	.3
2. Installation	. 8
3. Preparation	.12
4. Product operation	18
5. Maintenance and cleaning	25
6. Technical specifications	28
7. Troubleshooting	30

1. Important instructions for safety and environment

This section contains safety instructions that will help protect against the risk of personal injury or property damage.

1.1 General safety

- This product can be used by children aged 8 and above, as well as by individuals whose physical, sensory, or mental capabilities are not fully developed, or who lack experience and knowledge, provided that they are supervised or trained in the safe usage of the product and the risks it presents. Children must not play with the product. Cleaning and maintenance should not be performed by children unless supervised. Children under 3 years old should be kept away unless continuously supervised.
- Never place the product on a carpeted floor.
 Otherwise, the lack of airflow beneath the machine will cause electrical parts to overheat, leading to problems with your product.
- If the product fails, do not operate it until it has been repaired by an Authorized Service Agent. There is a risk of electric shock!
- This product is designed to resume operating in the event of powering on after a power interruption. If you wish to cancel the programme, see "Cancelling the programme" section.
- Connect the product to a grounded outlet protected by a 13 A fuse. Do not neglect to have the grounding installation made by a qualified electrician. Our company shall not be liable for any damages that may arise from using the product without proper grounding in accordance with local regulations.

- The water supply and draining hoses must be securely fastened and remain undamaged. otherwise, there is the risk of water leakage.
- Never open the loading door or remove the filter while there is still water in the drum. Otherwise, there is a risk of flooding and injury from hot water.
- Do not force open the locked loading door. The door will be ready to open just a few minutes after the washing cycle ends. If you force the loading door open, it may damage the door and the lock mechanism.
- Unplug the product when not in use.
- Never wash the product by spreading or pouring water onto it! There is a risk of electric shock!Never touch the plug with wet hands! Never unplug by pulling on the cable, always pull out by grabbing the plug.
- Use detergents, softeners and supplements suitable for automatic washing machines only.
- Follow the instructions on the textile tags and the detergent package.
- The product must be unplugged during installation, maintenance, cleaning and repair procedures.
- Always have the repairing procedures carried out by the Authorized Service Agent. The manufacturer shall not be held liable for damages that may arise from procedures carried out by unauthorized persons.
- If the power cable is damaged, it must be replaced by the manufacturer, after-sales service or a similarly qualified person (preferably an electrician) or someone designated by the importer, in order to avoid possible risks.
- Place the product on a rigid, flat and level surface.
- Do not place it on a long-pile rug or similar surfaces.

4 ENGLISH

- Do not place the product on a high platform or near the edge on a cascaded surface.
- Do not place the product on the power cable.
 Never use sponge or scrub materials. These will damage the painted, chrome plated and plastic surfaces.
- The water supply pressure required to run the product is between 1 to 10 bars (0.1– 1MPa).
- Do not use old or used water inlet hoses on the new product, as they may cause stains on your laundry.
- Never place the product on a carpet-covered floor; otherwise, the lack of airflow beneath the machine will cause electrical parts to overheat, resulting in problems with your product.

1.2 Intended use

- This product has been designed for domestic use. It is not suitable for commercial use and must not beyond its intended purpose.
- The product must only be used for washing and rinsing laundry that are appropriately marked.
- The manufacturer waives any responsibility arising from incorrect usage or transportation.
- This appliance is intended for household and similar applications, such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses:
 - Clients use in hotels, motels and other residential type environments;

- bed and breakfast type environments;
- areas for communal use in blocks of flats or in launderettes.

1.3 Children's safety

- Packaging materials are dangerous for children. Keep them stored in a safe place out of their reach.
- Electrical products can be dangerous for children.
 Keep children away from the product when it is in use and do not allow them to tamper with it. Use child locks to prevent children from accessing the product.
- Always remember to close the loading door when leaving the room where the product is located.
- Store all detergents and additives in a safe place out of reach of children. Make sure to close the cover of the detergent container or seal the detergent package.



When washing laundry at high temperatures, the loading door glass becomes hot. Therefore, especially keep children away from the loading door of the machine while the washing operation is in progress.

1.4 Package information

 The packaging materials of the product are manufactured from recyclable materials in accordance with our national environmental regulations. Do not dispose of the packaging materials with domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

1.5 Disposing of the waste product

• This product has been manufactured with high-quality parts and materials that can be reused and are suitable for recycling. Therefore, do not dispose of the product with normal domestic waste at the end of its service life. Take it to a collection point for the recycling of electrical and electronic equipment. Please consult your local authorities to find the nearest collection point. Help protect the environment and natural resources by recycling used products. For children's safety, cut the power cable and disable the locking mechanism of the loading door so that it cannot function before disposing of the product.

1.6 Compliance with WEEE Directive



This product complies with the EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waste electrical and electronic equipment (WEEE).

It has been manufactured with high-quality parts and materials that can be reused and are suitable for recycling. Do not dispose of this product with normal domestic or other wastes at the end of its service life. Take it to a collection center for the recycling of electrical and electronic equipment. Please consult your local authorities to find out about these collection centers.

Compliance with RoHS Directive:

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

2. Installation

Refer to the nearest Authorized Service Agent for installation of the product. To prepare the product for use, review the information in the user manual and ensure that the electricity, tap water supply, and water drainage systems are suitable before contacting the Authorized Service Agent. If they are not suitable, call a qualified technician and plumber to make any necessary arrangements.

(i) NOTE

- Preparation of the location and electrical, tap water, and waste water installations at the place of installation is the customer's responsibility.
- Make sure that the water inlet and discharge hoses, as well as the power cable, are not folded, pinched, or crushed while pushing the product into place after installation or cleaning procedures.

NARNING!

- Installation and electrical connections of the product must be carried out by the Authorized Service Agent. The manufacturer shall not be held liable for damages that may arise from procedures carried out by unauthorized persons.
- Prior to installation, visually inspect the product for any defects. If defects are found, do not proceed with installation. Damaged products pose safety risks.

2.1 Appropriate installation location

 Place the machine on a rigid floor.
 Do not place it on a long-pile rug or similar surfaces.

- Place the machine on a rigid floor.
 Do not place it on a long-pile rug or similar surfaces.
 - The total weight of the washing machine and dryer with a full load, when placed on top of each other, reaches approximately 180 kilograms. Place the product on a solid and flat floor that has sufficient load-carrying capacity.
- Do not place the product on the power cable.
- Do not install the product in places where the temperature may fall below 0°C.
- Place the product at least 1 cm away from the edges of other furniture

2.2 Removing packaging reinforcement

Till the machine backwards to remove the packaging reinforcement. Pull the ribbon to remove the packaging reinforcement.



2.3 Removing the transportation locks

/ WARNING!

- Do not remove the transportation locks before removing the packaging reinforcement. Remove the transportation safety bolts before operating the washing machine, or the product will be damaged.
- 1 Loosen all the bolts with a suitable spanner until they rotate freely (C).
- 2. Remove transportation safety bolts by turning them gently.
- 3. Attach the plastic covers supplied in the User Manual bag into the holes on the rear panel. (P)







(i) NOTE

- Keep the transportation safety bolts in a safe place to reuse them when the washing machine needs to be moved again in the future.
- Never move the product without properly fixing the transportation safety bolts in place!

2.4 Accessories

Plastic Caps

To close the holes on the rear side of the cabinet after the removal of the transit bolts



Plastic Hose Guide

To connect the drain hose on the edge of a sink



Use manual

Make it easier for people to know and understand the Product



Water inlet hose

Connect the hose to the water inlet on the product.



Spanner

Loosen all the bolts on the rear panel.




2.5 Connecting water supply



The water supply pressure required to operate the product ranges from 1 to 10 bars (0.1 - 1 MPa). It is necessary to have a flow of 10 - 80 liters of water per minute from a fully open tap for the machine to operate smoothly. Attach a pressure reducing valve if the pressure is higher.

WARNING!

- Models with a single water inlet should not be connected to the hot water tap. Doing so may damage the laundry or cause the product to switch to protection mode, preventing operation.
- Do not use old or used water inlet hoses with the new product, as this may cause stains on your laundry.
- 1. Tighten all hose nuts by hand. Never use a tool when tightening the nuts.

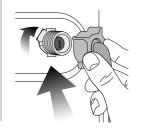



 Open the taps completely after making the hose connection to check for water leaks at the connection points. Check for water leaks at the connection points; if any leaks occur, turn off the tap and remove the nut. Carefully retighten the nut after checking the seal. To prevent water leaks and resulting damages, keep the taps closed when the machine is not in use.


2.6 Connecting to the drain

 The end of the drain hose must be directly connected to the waste water drain or to the washbasin.

NARNING!

Your house could flood if the hose comes loose during water discharge. Moreover, there is a risk of scalding due to high washing temperatures! To prevent these situations and ensure smooth water intake and discharge of the machine, securely fix the end of the discharge hose so that it cannot come out.

- The hose should be attached at a height of at least 40 cm and at most 100 cm.
- If the hose is elevated after being laid on the floor or close to the ground (less than 40 cm above the ground), water discharge becomes more difficult, and the laundry may come out excessively wet. Therefore, follow the heights described in the diagram.

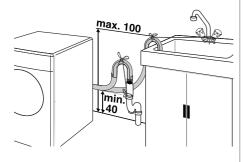

- To prevent dirty water from flowing back into the machine and ensure easy discharge, do not submerge the hose end into dirty water or Insert it more than 15 cm Into the drain. If the hose is too long, trim it to the appropriate length
- Ensure the hose end is not bent stepped on. or pinched between the drain and the machine. If the hose Is too short, use an orlaginal extension hose. The total length of the hose should not exceed 3.2 m
- To prevent water leaks, securely connect the extension hose to the product's drain hose using an appropriate clamp to ensure remains tightly fitted and leak-free


2.7 Adjusting the feet

↑ WARNING!

To ensure quiet operation and minimal vibration, the product must be positioned level and balanced on its feet. Adjust the machine's feet to achieve proper balance. Otherwise, it may shift during operation, leading to potential issues with crushing and excessive vibration.

For plastic feet:

- Loosen the lock nuts on the feet by hand.
- 2. Adjust the feet until the product stands level and balanced.
- 3. Tighten all lock nuts again by hand.

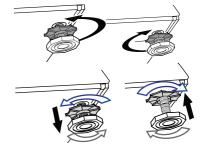


↑ WARNING!

Do not use any tools to loosen the lock nuts.Otherwise, they will get damaged.

For metal feet:

- 1. Loosen the lock nuts on the feet with a spanner.
- 2. Adjust the feet until the product stands stable and balanced.
- Tighten all lock nuts by spanner again.

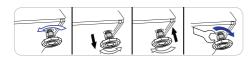

2.8 Electrical connection

Connect the product to a grounded outlet protected by a 13 A fuse. Our company shall not be liable for any damages that arise from using the product without proper grounding in accordance with local regulations.

- Connection must comply with national regulations.
- The power cable plug must be within easy reach after installation.
- If the current value of the fuse or breaker in the house is less than 13 Amps, have a qualified electrician install a 13 Amp fuse.
- The voltage specified in the "Technical specifications" section must match your mains voltage.
- Do not make connections via extension cables or multiplugs.

NARNING!

Damaged power cables must be replaced by the Authorized Service Agents.

Transportation of the product

- 1. Unplug the product before transporting it.
- 2. Remove water drain and water supply connections.
- 3. Drain all water that has remained in the product (SEE 5.5).
- Install transportation safety bolts in the reverse order of removal procedure (SEE 2.3).

i NOTE

Never move the product without the transportation safety bolts properly fixed in place!

N WARNING!

Packaging materials are dangerous to children. Keep them in a safe place out of reach.

3. Preparation

3.1 Sorting the laundry

- Sort laundry according to fabric type, color, degree of soiling, and allowable water temperature.
 Always follow the instructions given
- · on the garment tags.

3.2 Preparing laundry for washing

- Laundry items with metal attachments such as underwired bras, belt buckles, or metal buttons will damage the machine. Remove the metal pieces or wash the clothes by putting them in a laundry bag or pillowcase.
- Take out all substances from the pockets, such as coins, pens, and paper clips. Turn pockets inside out and brush them. Such objects may damage the product or cause noise problems.
- Put small-sized clothes, such as infant's socks and nylon stockings, in a laundry bag or pillowcase.
- Place curtains in without compressing them. Remove curtain attachment items.
- Fasten zippers, sew loose buttons, and mend rips and tears.
- Wash products labeled as machine washable or hand washable only with an appropriate program.
- Do not wash colors and whites together. New dark-colored cottons release a lot of dye; wash them separately.
- Treat tough stains properly before washing. If unsure, check with a dry cleaner.
- Use only dyes/color changers and limescale removers suitable for machine wash. Always follow the instructions on the package.
- Wash trousers and delicate laundry turned inside out.

- Before washing laundry items made of Angora wool, keep them in the freezer for a few hours to reduce pilling.
- For laundry exposed to materials like flour, lime dust, milk powder, etc., shake them off thoroughly before placing them into the machine. These substances can accumulate on the inner parts of the machine over time, potentially causing damage.

3.3 Things to be done for energy saving


Following information will help you use the product in an ecological and energy-effcient manner.

- Operate the product at the highest capacity allowed by the program you have selected, but do not overload. See the "Program and consumption table."
- Always follow the instructions on the detergent packaging.
- Wash slightly soiled laundry at low temperatures.
- Use faster programs for small quantities of lightly soiled laundry.
- Do not use prewash and high temperatures for laundry that is not heavily soiled or stained.
- If you plan to dry your laundry in a dryer, select the highest spin speed recommended during washing process.
- Do not use detergent in excess of the amount recommended on the detergent package.

3.4 Initial use

Before using the product for the first time, ensure all preparations are carried out according to the instructions in the 'Important Safety Instructions' and 'Installation' sections. To prepare the product for washing laundry,

initiate the Drum Cleaning program as the first operation. If your product does not feature a Drum Cleaning program, follow the Initial Use procedure outlined in the '5.2 Cleaning the loading door and the drum' section of the user manual.

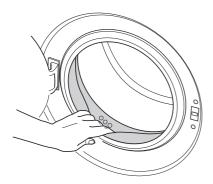

i) NOTE

- Use an anti-limescale suitable for the washing machines.
- Some water might have remained in the product due to the quality control processes in the production. It is not harmful for the product.

3.5 Correct load capacity

The maximum load capacity depends on the type of laundry, the degree of soiling, and the selected washing program. The machine automatically adjusts the amount of water based on the weight of the laundry loaded.

∕ì\ WARNING!

Follow the information provided in the "Programme and Consumption Table".Overloading the machine can reduce washing performance and may cause noise and vibration problems.

3.6 Loading the laundry

- Open the loading door.
- Place laundry items loosely into the 2. machine

3 Push the loading door to close until you hear a locking sound. Ensure that no items are caught in the door.

i) NOTE

The loading door is locked while a programme is running. The door can only be opened shortly after the programme comes to an end.

In case of misplacing the laundry, noise and vibration problem may occur in the machine.

3.7 Using detergent and softener


i) NOTE

When using detergent, fabric softener, starch, fabric dye, bleach, or limescale remover, carefully read the manufacturer's instructions on the package and follow the recommended dosage. Use a measuring cup if available

Detergent Drawer

The detergent drawer is composed of three compartments:

- (1) for prewash
- (2) for main wash
- (3) for softener
- (*) in addition, there is siphon piece in the softener compartment.

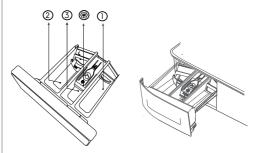

3.7 Using detergent and softener

- Add detergent and softener before starting the washing programme.
- Never leave the detergent drawer open while the washing programme is running!
- When using a programme without prewash, do not put any detergent into the prewash compartment (compartment no. "1").
- In a programme with prewash, do not put liquid detergent into the prewash compartment (compartment no. "1").
- Do not select a programme with prewash if you are using a detergent bag or dispensing ball. Place the detergent bag or the dispensing ball directly among the laundry in the machine.
- If you are using liquid detergent, do not forget to place the liquid detergent cup into the main wash compartment (compartment no. "2").

Choosing the detergent type

The type of detergent to be used depends on the type and colour of the fabric

- Use different detergents for colored and white laundry.
- Wash delicate clothes only with special detergents (such as liquid detergent or wool shampoo) designed solely for delicate fabrics. When washing darkcolored clothes and quilts, it is recommended to use liquid detergent.
- Wash woolens with special detergent specifically formulated for woolens.

/ WARNING!

- Use only detergents manufactured specifically for washing machines.
- Do not use laundry soap powder.

Adjusting detergent amount

The amount of washing detergent to be used depends on the amount of laundry, the degree of soiling and water hardness.

- Do not use amounts exceeding the dosage quantities recommended on the detergent package to avoid problems such as excessive foam, poor rinsing, unnecessary expenses and environmental impact.
- Use less detergent for small amounts or lightly soiled clothes.

Using softeners

Pour the fabric softener into the designated compartment of the detergent drawer.

- Do not exceed the maximum level indicated in the softener compartment.
- If the fabric softener has thickened, dilute it with water before pouring it into the detergent drawer.

Using liquid detergents If the product is equipped with a liquid detergent part:

 When using liquid detergent, pull the dispenser towards you. The part that drops down will act as a barrier for the liquid detergent. Clean the dispenser with water if necessary while it is in place or after removing it. If using powder detergent, ensure the dispenser is secured in the top position.



Using gel and tablet detergent

Apply the following instructions when using tablet, gel and similar detergents.

- If the gel detergent is fluid and your washing machine does not have a dedicated liquid detergent container, pour the gel detergent into the main wash detergent compartment during the first water intake. If your washing machine has a liquid detergent container, fill it with detergent before starting the program.
- If the gel detergent is not fluid or is in the form of a capsule or tablet, place it directly into the drum before washing.
- Place tablet detergents into the main wash compartment (compartment no. "2") or directly into the drum before washing.

(i) NOTE

- Tablet detergents can leave residues in the detergent compartment. If this happens, in future washes, place the tablet detergent between the laundry items, near the bottom of the drum.
- When using tablet or gel detergent, do not select the prewash function.

Using starch

- Add liquid starch, powder starch or fabric dye into the softener compartment.
- Do not use softener and starch together in a washing cycle.
- Wipe the inside of the machine with a damp and clean cloth after using starch.

Using bleaches

- Choose a program with a prewash option and add the bleaching agent at the start of the prewash cycle. Do not place detergent in the prewash compartment. Alternatively, select a program with an extra rinse feature and add the bleaching agent when the machine begins taking water from the detergent compartment during the initial rinsing step.
- Do not mix bleaching agent and
- detergent together.
 Use only a small amount
- (approximately 50 ml) of bleaching agent and ensure thorough rinsing of clothes to avoid skin irritation. Do not pour the bleaching agent directly onto clothes and avoid using it on colored fabrics. When using oxygenbased bleaches, select a program that operates at a lower temperature. Oxygen-based bleaches can be used alongside detergents. If the
- consistency of the bleach differs from the detergent, add the detergent first into compartment no. "2" of the detergent drawer. Wait for the detergent to dispense as the machine fills with water, then add the bleaching agent from the same compartment while water continues to fill the machine.

Using limescale remover

When required, use limescale removers manufactured specifically for washing machines only.

3.8 Tips for efficient washing

		Clothes			
		Light Colors and Whites	Colors	Black/Dark Colors	Delicates/ Woolens/Silks
		(Recommended temperature range based on soiling level: 40-90°C)	(Recommended temperature range based on soiling level: cold -40°C)	(Recommended temperature range based on soiling level: cold -40°C)	(Recommended temperature range based on soiling level: cold -30°C)
Level	Heavily Soiled (Difficult stains such as grass, coffee, fruits and blood.)	It may be necessary to pre-treat the stains or perform prewash. Powder and liquid detergents recommended for whites can be used at dosages recommended for heavily soiled clothes. It is recommended to use powder detergents to clean clay and soil stains and the stains that are sensitive to bleaches.	Powder and liquid detergents recommended for colors can be used at dosages recommended for heavily soiled clothes. It is recommended to use powder detergents to clean clay and soil stains and the stains that are sensitive to bleaches. Detergents which do not contain bleach should be used.	Liquid detergents suitable for colors and dark colors can be used at dosages recommended for heavily soiled clothes.	Prefer liquid detergents produced for delicate clothes. Woolen and silk clothes must be washed with special woolen detergents.
Soiling Level	Normally Soiled (For example, stains caused by body oils on collars and cuffs)	Powder detergents are recommended for cleaning clay, soil stains, and stains sensitive tobleaches.	Powder and liquid detergents recommended for colors can be used at dosages recommended for normally soiled clothes. Detergents which do not contain bleach should be used.	colors can be used at dosages	detergents produced for delicate clothes. Woolen and silk
	Lightly Soiled (No visible stains exist)	Powder and liquid detergents recommended for whites can be used at dosages recommended for lightly soiled clothes.	Powder and liquid detergents recommended for colors can be used at dosages recommended for lightly soiled clothes. Detergents which do not contain bleach should be used.	Liquid detergents suitable for colors and dark colors can be used at dosages recommended for lightly soiled clothes.	detergents produced for delicate clothes. Woolen and silk

Detergent Recommendation:

Recommended washing detergent	Wash cycles	Washing temp.	Type of laundry and textile
Heavy-duty detergent with agents and optical brighteners	Cottons&Mixed &Bedding &Extra Dirt &Cottons 20°C &ECO40-60	30/40/60 y	White laundry made from boil-proof cotton or linen
Color detergent without bleaching agent and optical brighteners	Cottons&Mixed &Bedding &Extra Dirty &Cottons 20 C&Quick 15&Hygiene	20/30/40	Coloured laundry made from boil-proof cotton or linen
Color or mild detergent without optical brighteners	Mixed&Down Jacket &Quick 15 &Delicates	Cold/20/30/40	Coloured laundry made from easy care fibres or synthetic materials
Mild washing detergent	Silk&Down Jacket &Delicates	Cold/20/30	Delicate textiles, silk,viscose
Special wool detergent	wool	20/30/40	Wool

- Agglomerating or ropy detergent or additive can be diluted in some water before pouring them into the detergent dispenser to prevent blockage and potential water overflow.
- Please choose the appropriate type of detergent to achieve maximum washing performance with minimal water and energy consumption.
- Proper detergent dosing is crucial for achieving the best cleaning results. Use a reduced amount of detergent if the drum is not completely filled.
- Always adjust the detergent amount water is soft, use less detergent.
- Dose according to the level of dirtiness of your laundry; less soiled clothes require less detergent.
- Highly concentrated (compact) detergents require precise dosing.


Following symptoms are the sign of detergent overdosing:

- heavy foam formation
- poor washing and rinsing result

Following symptoms are the sign of detergent underdosing:

- laundry turns grey
- built-up of limescale deposits on the drum, the heating element and/or the laundry

4. Operating the product

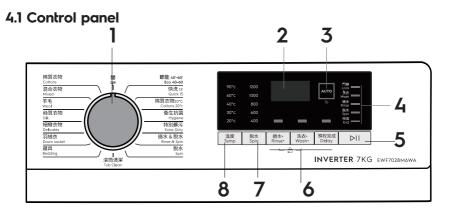

- Programme Selection knob (Uppermost position: On / Off)
- 2 Display
- **3** Auto Wash button
- 4 Programme Follow-up indicator

4.2 Preparing the machine

Make sure that the hoses are connected tightly. Plug in your machine. Turn the tap on completely. Place the laundry in the machine. Add detergent and fabric softener.

4.3 Programme selection

 Select the programme suitable for the type, quantity and soiling degree of the laundry in accordance with the "Programme and consumption table" and the with temperature table below.

Temp	Soil level
90°C	Heavily soiled white cottons and linens. (coffee table covers, tableclothes, towels, bed sheets, etc.).

- 5 Start / Pause button
- **6** Auxiliary Function buttons
- 7 Spin Speed Adjustment button
- 8 Temperature Adjustment button

Temp	Soil level
60°C	Normally soiled, coloured, fade proof linens, cottons or synthetic clothes (shirt, nightgown, pajamas, etc.) and lightly soiled white linens (underwear, etc.).
40°C 30°C 20°C Cold	Blended laundry including delicate textile (veil curtains, etc.), synthetics and woolens.

2. Select the desired programme with the Programme Selection button.

(i) NOTE

- Programmes are limited to the highest spin speed appropriate for that particular type of fabric.
- When selecting a programme, always consider the type of fabric, color, degree of soiling, and permissible water temperature.
- Always select the lowest required temperature; higher temperatures mean higher power consumption.
- For further programme details, refer to the Programme and Consumption Table.

4.4 Program introduction

Depending on the type of fabric, use the following main programmes.

Cottons

Use this programme for your cotton laundry (such as bed sheets, duvet and pillowcase sets, towels, bathrobes, underwear, etc.). Your laundry will be washed with vigorous washing action for a longer washing cycle.

Down Jacket

The process for washing down jackets is specially designed. The material of down jackets is lightweight, difficult to rinse, has poor resistance to washing, and is hard to absorb water. Therefore, it's necessary to extend the soaking time during the washing process and reduce the rotation speed during dehydration.

Wool

Use this program to wash your woolen clothes. Select the appropriate temperature according to the care tags on your clothes. Use detergents specifically designed for woolen.

Bedding

The main items washed in this programme are bed sheets, quilt covers, curtains, overcoats, and tablecloths. During the washing process, soaking and washing times are increased to enhance washing effect.

Tub Clean

Periodically (every 1-2 months) use this program to clean the drum for necessary sanitation cleaning. Let the washing machine run the programme without any laundry. For better results,

add powdered limescale cleaning agent to the detergent box. After the program, leave the front door ajar and let the inside of the machine dry.

Extra Dirty

For the clothes with more stubborn stains, the washing effect can be improved by longer washing time and strong washing rhythm.

Delicates

You can use this programme to wash delicate laundry such as cotton/synthetic mix knitted clothes or socks.

Silk

You can choose this programme to wash delicate fabrics such as silk. The wash is very gentle, and the spin step is not done right away. This programme is best if the laundry requires a gentle wash.

Hygiene

Hygiene washing process is to produce steam in the washing process, improve the washing effect, and at the same time, steam iron the clothes to prevent wrinkles.

Quick 15

Quick wash 15 is a fast washing program for a small amount of non dirty clothes. Its optional washing temperature range is narrow and the maximum speed of dehydration is low.

Mixed

Use this programme to wash your cotton and synthetic clothes together without sorting them.

Cottons 20°C

New European standard special program, used to wash some mild clothes, the temperature can only be selected at 20 °C, to protect the clothes.

ECO 40-60

For washing cotton garments that are normally washable at 40°C or 60°C, wash them together in the same cycle. This cycle is used to ensure compliance with EU eco design regulations.

For specific applications, select any of the following programmes.

Rinse+Spin

A programme designed for users to rinse and dehydrate.

Spin

Use this programme to apply an additional spin cycle for your laundry or to drain the water in the machine. Before selecting this programme, select the desired spin speed and press Start / Pause button.

(i) NOTE

Use a lower spin speed for delicate laundries.

4.5 Temperature selection

Whenever a new programme is selected, the default temperature of the selected program is displayed in the temperature indicator. To adjust the temperature, press the temperature button. The temperature will gradually increase and cycle to the lowest when the maximum is reached.

(i) NOTE

If you want to change the temperature after the program starts, you need to re-select the program to adjust the temperature while it is in the unlocked status.

4.6 Spin speed selection

Whenever a new programme is selected, the default dehydration speed of the selected program is displayed on the speed indicator. To adjust the dehydration speed, press the speed button. The rotation speed increases gradually and returns to the lowest setting when it reaches the highest.

4.7 Programme table

Programme; Temperature range	Default spin Max. load speed (rpm) (Dry clothes)	Αι	Auxiliary function		
		(Dry clothes)	Rinse+	Wash+	Delay
Mixed; Cold to 60°C	800	3.5 kg	•	•	
Quick 15; Cold to 30°C	800	1 kg	•	•	•
Silk; Cold to 40°C	400	1.5 kg	-	•	•
Bedding; Cold to 60°C	800	3.5 kg	•	•	
Delicates; Cold to 90°C	800	2 kg	-	-	•
Rinse+Spin;	800	Мах	•		•
Spin	800	Мах			•
ECO 40-60 ; 40°C	1200	Мах			
Extra Dirty; 40°C to 60°C	800	3.5 kg	•		
Cottons; Cold to 90°C	800	Мах	•	-	•
Down Jacket; Cold to 40°C	600	2 kg	•		
Wool; Cold to 40°C	400	1.5 kg	-	-	
Hygiene ; 90°C	800	3.5 kg	•	•	•
Cottons 20℃; 20°C	800	Мах	•	-	•
Tub Clean;	800	-		•	•
AUTO ; Auto	800	Мах			

^{■ :} Selectable

 $_{\star}$: Automatically selected, no canceling. During certain programmes, the washer will detect the balance status to adjust the spin speed automatically, ensuring machine stability.

4.8 Auxiliary function selection

Select the desired auxiliary functions before starting the programme. Additionally, you can select or cancel auxiliary functions suitable for the current program without pressing the Start/Pause button while the machine is operating. To do this, the machine must be in a step before the auxiliary function you intend to select or cancel. If the auxiliary function cannot be selected or canceled, the light of the relevant auxiliary function will blink three times to warn the user.

Wash+

In standby mode, press the enhanced washing function setting button. The Strengthen Washing Function indicator will illuminate, and the Strengthen Washing Function will be incorporated into the washing process. Upon selecting the Strengthen Washing Function, the washing time during the main washing stage will increase by 10 minutes, and the updated time will be displayed in the remaining time window. Pressing the button again will cancel the Strengthen Washing Function.

Rinse+

To activate the Rinse Plus function, press the Rinse Plus button while in standby mode; the Rinse Plus indicator will illuminate. This adds an extra rinse cycle during the washing process, and the added time will be displayed in the remaining time window. To cancel the Rinse Plus function, press the Rinse Plus button again. If the rinse cycle has not started during operation, press the Pause button. The Rinse Plus function can then be added or cancelled. Note that the Rinse Plus function cannot be selected or cancelled during operation.

AUTO

Press the AUTO button for 3 seconds until the display light turns on and the AUTO program starts. The AUTO programme is an intelligent feature that operates automatically in both standby and power-off states. In the AUTO programme, washing temperature, water level, and washing time are set automatically based on the weight sensing results, eliminating the need for user input.

Delay End

The Delay End function allows you to postpone the start of the programme by up to 24 hours. The Delay End time can be adjusted in 1-hour increments.



i NOTE

Do not use liquid detergents when you set Delay End! There is the risk of staining of the clothes.

Open the loading door and place the laundry inside. Add detergent and any other required items. Select the washing program, temperature, spin speed, and optional auxiliary functions. Use the Delay button to set the desired start time. Press the Start/Pause button to begin the cycle. The delay Pause button to begin the cycle. The delay the countdown will commence. The '_' symbol next to the delay end time will move up and down on the display.

(i) NOTE

Additional laundry may be loaded during the delay end period.

At the end of the countdown, duration of the selected programme will be displayed. "_"symbol will disappear and the selected programme will start.

Canceling the Delay End function

If you want to cancel the delay end countdown and start the programme immediately:

Set the Delay End period to zero or turn the Programme Selection knob to any programme. This action will cancel the Delay End function, indicated by the continuous flashing of the End/Cancel light. Then, select the desired programme again. Press the Start/Pause button to initiate the programme.

4.9 Starting the programme

Press Start/Pause button to start the programme. Programme follow-up light showing the startup of the programme will turn on.

(i) NOTE

If no programme is started or no key is pressed within 10 minute during programme selection process, the machine will switch to turn off mode and the temperature, speed and other lights will turn off.

4.10 Child Lock

Use Child Lock function to prevent children from tampering with the machine. Thus you can avoid any changes in the running programme.

(i) NOTE

- If the Programme Selection knob is turned while the Child Lock is active, "CL" appears on the display. The Child Lock does not allow any change in the programmes and the selected temperature, speed and auxiliary functions.
- If another program is selected using the Programme Selection knob while the Child Lock is active, the previously selected program will continue to run.

To activate the Child Lock:

Press and hold 1st(Rinse+) and 2nd(Wash+) Auxiliary Function buttons for 3 seconds while any programme is running. The Child Lock is activated. If you press any button or turn the Programme Selection knob when the Child Lock is active, "CL" will appear on the display.

To deactivate the Child Lock:

Press and hold 1st(Rinse+) and 2nd(Wash+) auxiliary function buttons for 3 seconds while any programme is running. The Child Lock is deactivated.

(i) NOTE

- In addition to the method above, to deactivate the Child Lock, switch the Programme Selection knob to the On/ Off position when no program is running, and then select another programme.
- Child Lock is not deactivated after power failures or when the machine is unplugged.

4.11 Progress of programme

The progress of a running program can be monitored using the Programme Follow-up indicator. At the beginning of each program step, the corresponding indicator light will turn on, and the light for the completed step will turn off. If you wish to change auxiliary functions, speed, or temperature settings, you need to press the Start/Pause button before making any changes to the program. Ensure that any changes made occur during a step that follows the current running program step.

(i) NOTE

If the machine does not proceed to the spin cycle, it may activate the unbalanced loading detection system automatically due to uneven distribution of laundry inside the drum. This system adjusts the distribution of laundry by rotating the drum.

4.12 Loading door lock

There is a locking system on the loading door of the machine that prevents opening the door when the water level is unsuitable.

The Loading Door light will start flashing when the machine is switched to Pause mode. The machine checks the water level inside. If the level is suitable, the Loading Door light will illuminate steadily within 1-2 minutes, and the loading door can be opened. If the water level is unsuitable, the Loading Door light turns off, and the loading door cannot be opened. If you need to open the Loading Door while the light is off, you have to cancel the current programme; see "Canceling the programme".

4.13 Changing the selections after programme has started

Switching the machine to pause mode

Press the Start/Pause button to switch the machine to Pause mode while a programme is running. The light of the current step the machine is in will start flashing in the Programme Follow-up indicator, indicating that the machine is in Pause mode. Additionally, when the loading door can be opened, the Loading Door light will also illuminate continuously, in addition to the programme step light.

Changing the speed and temperature settings for auxiliary functions

Depending on the current step of the program, you can either cancel or activate auxiliary functions. Refer to "Auxiliary function selection" for details. Additionally, you can adjust the spin speed and temperature settings. See "Spin speed selection" and "Temperature selection" for more information.

i) NOTE

If no change is allowed, the relevant light will flash 3 times.

Adding or taking out laundry

Press the Start/Pause button to switch the machine to Pause mode. The Programme Follow-up light for the current step during which the machine was paused will flash. Wait until the Loading Door can be opened. Open the Loading Door to add or remove laundry, then close it. Make any necessary changes to auxiliary functions, temperature, and speed settings. Press the Start/Pause button again to resume the programme.

4.14 Canceling the programme

To cancel the programme, press the Start/Pause button first. Then, turn the Programme Selection knob to choose another programme. The previous programme will be canceled. The End/Cancel light will flash continuously to indicate that the programme has been canceled. The pump function is activated for 1-2 minutes regardless of the programme step or the presence of water in the machine. After this period, your machine will be ready to start the new programme from its first step.

i NOTE

Depending on the step at which the programme was canceled, you may need to add detergent and softener again for the new programme you have selected.

4.16 End of the programme


"End" appears on the display at the end of the programme. Wait until the loading door light illuminates steadily. Press On /Off button to switch off the machine. Take out your laundry and close the loading door. Your machine is ready for the next washing cycle.

5 Maintenance and cleaning

The service life of the product extends, and the frequency of common problems decreases when cleaned at regular intervals.

5.1 Cleaning the detergent drawer

Clean the detergent drawer at regular intervals (every 4-5 washing cycles) as shown below in order to prevent accumulation of powder detergent over time.

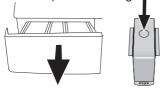

 Press the dotted point on the siphon in the softener compartment and pull towards you until the compartment is removed from the machine.

(i) NOTE

If an excessive amount of water and softener mixture begins to collect in the softener compartment, the siphon should be cleaned.

- 2 Wash the detergent drawer and the siphon with plenty of lukewarm water in a washbasin. Wear protective gloves or use an appropriate brush to avoid touching of the residues in the drawer with your skin when cleaning.
- 3 Insert the drawer back into its place after cleaning and make sure that it is seated well

If your detergent drawer is the one indicated in the following figure:





(i) NOTE

Lift the rear part of the siphon to remove it as illustrated. After performing the above mentioned cleaning procedures, replace the siphon back to its seating and push its front section downwards to make sure that the locking tab engages.

5.2 Cleaning the loading door and the drum

For products with drum cleaning programme, please see operating the product programmes.

Please confirm that there is no laundry in the drum before selecting the drum cleaning program, and no other key operation is needed after selecting. Before starting the programme, put 1 pouch of special drum cleaning agent (if the special agent could not be supplied, put max. 100 g of powder anti-limescale) into the main wash detergent compartment (compartment no. "2"). If the anti-limescale is in tablet form, place only one tablet into the main wash compartment no. '2'. After the programme has finished, dry the inside of the bellow with a clean cloth.

(i) NOTE

- Repeat Drum Cleaning process every 2 months.
- Use an anti-limescale suitable for the washing machines.

After every wash ensure that no foreign substance is left in the drum.



If the holes on the bellow, as shown in the figure, are blocked, use a toothpick to open them.

(i) NOTE

Foreign metal substances can cause rust stains in the drum. Clean these stains from the drum surface using cleaning agents suitable for stainless steel. Never use steel wool or wire wool

∕L WARNING!

Never use sponges or scrubbing materials as they can damage painted and plastic surfaces.


5.3 Cleaning the body and control panel

Wipe the body of the machine with soapy water or non-corrosive mild gel detergents as necessary, and dry with a soft cloth.

Use only a soft and damp cloth to clean the control panel.

5.4 Cleaning the water intake **filters**

There is a filter at the end of each water intake valve at the rear of the machine. and also at the end of each water intake hose where they connect to the tap. These filters prevent foreign substances and dirt from entering the washing machine. Clean the filters regularly as they can become dirty.

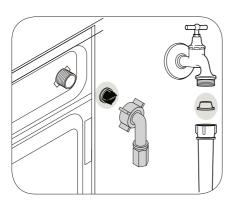

- 1 Close the taps.
- 2 Remove the nuts of the water intake hoses to access the filters on the water intake valves. Clean them with an appropriate brush. If the filters are too dirty, take them out by means of pliers and clean them.
- 3 Take out the filters on the flat ends of the water intake hoses together with the gaskets and clean thoroughly under running water.
- 4 Replace the gaskets and filters carefully in their places and tighten the hose nuts by hand.

5.5 Draining remaining water and cleaning the pump filter

The filter system in your machine prevents solid items such as buttons, coins and fabric fibers clogging the pump impeller during discharge of washing water. Thus, the water will be discharged without any problem and the service life of the pump will extend. If the machine fails to drain water, the pump filter is clogged. Filter must be cleaned whenever it is cloaged or at least every 3 months. Water must be drained off first to clean the pump filter. In addition, prior to transporting the machine (e.g., when moving to another house) and in case of freezing of the water, water may have to be drained completely.



!\ WARNING!

Foreign substances left in the pump filter may damage your machine or may cause noise problem.

In order to clean the dirty filter and discharge the water:


Unplug the machine to cut off the supply power.



∕!\ WARNING!

Temperature of the water inside the machine may rise up to 90 °C. To avoid burning risk, filter must be cleaned after the water in the machine cools down.

2. Push the hook of filter cap to right side and pull out the filter cap

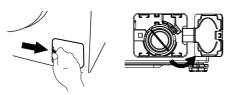


(i) NOTE

To remove the filter cover, gently push downwards using a thin plastic-tipped tool through the gap above the cover. Avoid using metal-tipped tools for this.

3.Some of our products have emergency draining hose and some does not have. Follow the steps below to discharge the water.

Discharge the water when the product does not have an emergency draining hose:

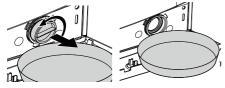

- a Place a large container in front of the filter to catch water from the filter.
- b Loosen pump filter (anticlockwise) until water starts to flow. Fill the flowing water into the container you have placed in front of the filter.
- c Always keep a piece of cloth handy to absorb any spilled water.
 When the water inside the machine is finished, take out the filter completely by turning it.
 - 4 Clean any residues inside the filter as well as fibers, if any, around the pump impeller region.
- 5 Install the filter.
- 6 If the filter cap is composed of two pieces, close the filter cap by pressing on the tab. IIf it is a single piece, first seat the tabs in the lower part into their places, then press the upper part to close it.

5.6 Periodic cleaning schedule



WARNING!

Refer to Safety chapters.

Periodic cleaning helps to extend the life of your appliance.

After each cycle, keep the door and the detergent dispenser slightly ajar to get air circulation and dry the humidity inside the appliance: this will prevent mildew and odours.

If the appliance is not used for a long time: close the water tap and unplug the appliance

Indicative periodic cleaning schedule:

Descaling	Twice a year
Maintenance wash	Once a month
Clean door seal	Every two months
Clean drum	Every two months
Clean detergent dispenser	Every two months
Clean drain pump filter	Twice a year

5.7 Descaling



If the water hardness in your area is high or moderate, we recommend that you use a water descaling product for washing machines.

Regularly examine the drum to check for limescale.

The regular detergents already contain water softening agents, but we recommend to run a cycle with empty drum and a descaling product occasionally.

6 Technical specifications

Model name	EWF7028M6WA
Capacity (kg)	7
Maximum spin speed (rpm)	1200
Height (cm)	84
Width (cm)	60
Depth (cm)	50
Net weight (±4 kg)	58
Input(V/Hz) total	220 - 240 V~/ 50 Hz

Common programmes

These values are indicative only.

		EWF7028M6WA		
Cycle	Nominal capacity in kg	Temperature Setting	Highest Temperature ℃	Cycle Duration in Hours and Minutes
AUTO	Max.	30°C	30°C	0:55
Cottons	Max.	40°C	90°C	0:58
Mixed	3.5	30°C	0°06	0:52
Wool	1.5	30°C	40°C	1:00
Silk	1.5	Cold	40°C	0:47
Delicates	2	40°C	90°C	0:59
Down Jacket	2	30°C	40°C	0:57
Bedding	3.5	30℃	60°C	1:15
Tub Clean	0	90°C	90°C	1:28
Spin	Max.	-	-	0:10
Rinse+Spin	Max.	-	-	0:17
Extra Dirty	3.5	60°C	0°06	1:17
Hygiene	3.5	90°C	90°C	1:58
Cottons 20°C	Max.	20°C	20°C	0:50
Quick 15	1	Cold	30°C	0:15
ECO 40-60	Max.	40℃	40℃	3:28

7 TROUBLESHOOTING

Malfunction	Possible cause	Solution	
Programme does not start after closing the door.	Start/Pause/Cancel button was not pressed.	Press the Start/Pause/Cancel button.	
Programme cannot be started or selected. Washing machine has switched to self protection mode due to a supply problem (line voltage, water pressure, etc.).		To cancel the programme, turn the Programme Selection knob to select another programme. Previous programme will be cancelled. (See "Canceling the programme")	
Water in the machine. Some water might have remained in the product due to the quality control processes in the production. This is not a failure; wate harmful to the machine.			
	Machine might be standing unbalanced.	Adjust the feet to level the machine.	
	A hard substance might have entered into the pump filter.	Clean the pump filter.	
Machine	Transportation safety bolts are not removed.	Remove the transportation safety bolts.	
vibrates or makes noise.	Laundry quantity in the machine might be too little.	Add more laundry to the machine.	
	Machine might be overloaded with laundry.	Take out some of the laundry from the machine or distribute the load by hand to balance it homogenously in the machine.	
	Machine might be leaning on a rigid item.	Make sure that the machine is not leaning on anything.	
stopped shortly after the65V to 20V) appears more than 10S.washing machine is i and should return to		When this phenomenon occurs, the washing machine is in a safe state and should return to normal after being plugged back in (after more than 10 seconds).	

Malfunction	Possible cause	Solution
	Timer may stop during water intake.	The timer indicator will not start counting down until the machine has taken in an adequate amount of water. The machine will wait until there is enough water to ensure proper washing results. The timer indicator will resume counting down after this.
Programme time does not	Timer may stop during heating step.	Timer indicator will not countdown until the machine reaches the selected temperature.
countdown. (On models with display)	Timer may stop during spinning step.	Automatic unbalanced load detection system might be activated due to the unbalanced distribution of the laundry in the drum.
	The machine does not proceed to the spinning step if the laundry is unevenly distributed in the drum. This precaution prevents damage to the machine and its surroundings.	Laundry should be rearranged and re-spin.
Foam is	Too much detergent is used.	Mix 1 tablespoonful softener and ½ water and pour into the main wash compartment of the detergent drawer.
from the detergent drawer.	Do not put detergent into the machine if it is unsuitable for the programmes and maximum loads indicated in the "Programme and consumption table".	When you use additional chemicals (stain removers, bleaches and etc.), reduce the amount of detergent.
Laundry remains wet at	Excessive foam may have occurred due to too much detergent usage, leading to the activation of the automatic foam absorption system.	Use recommended amount of detergent.
the end of the programme	The machine does not proceed to the spinning step if the laundry is unevenly distributed in the drum. This is to prevent damage to the machine and its surrounding environment.	Laundry should be rearranged and re-spin.



MARNING!

If you cannot resolve the problem despite following the instructions in this section, please consult your dealer or an Authorized Service Agent. Never attempt to repair a nonfunctional product yourself.

7.1 Customer service

NARNING!

- Risk of electric shock
- To repair the appliance contact the Authorised Service Centre. Use original spare
- Please note that self-repair or non-professional repair can have safety consequences and might void the guarantee.
- Improper repair may void the warranty, and any resulting damages will not be covered.

Alarm code	Code interpretation	Troubleshoot and workaround
ΕI	Abnormal water intake	1: Check whether the faucet is turned on; 2: Check whether the water pressure is too low or the water is stopped; 3: Check whether the water inlet pipe is twisted; After the investigation is completed, if it still appears, please contact the maintenance.
65	The door is not closed	1: Check whether the door is closed properly; 2: Check whether the clothes are pressed by the door; After the inspection is completed,if it still appears, please contact the maintenance.
E 3	Washing motor failure	Please restart after powering off. If the issue persists, please contact us for maintenance.
ЕЧ	Abnormal drainage	1: Clean the drain valve filter; 2: Check whether the drain pipe is blocked; After the investigation, if it still occurs, please contact the maintenance.
E5	Abnormal water level	After pressing the start button, it will automatically drain to the washing water level and continue to run; If the issue persists, please contact maintenance.
E x X is a number other than the above)	Other	Please restart after powering off. If the issue persists, please contact maintenance.

The following symptoms are not malfunctions of the washing machine:

State	Reason
There is water in the machine or in the drain when it is used for the first time.	This is residual water from factory performance testing.
No water is visible during washing.	Water-saving washing machine, the washing water level is under the visible surface of the door glass.
After spinning, the laundry was not completely spun dry.	Heavy clothes can cause excessive imbalance, triggering the washing machine's imbalance protection feature during dehydration, resulting in uneven drying. Avoid washing thick garments individually; instead, mix large and small items together.
The program runs longer than the displayed time.	During the washing process, factors such as water pressure, water absorption by clothing materials, and motor dehydration treatment may influence and adjust the washing time accordingly. This is a normal occurrence and does not affect the overall washing process.

electrolux.com



2



FWF7028M6WA

繁体中文 使用手冊洗衣機

讓您高枕無憂。請即註冊您的家電產品。

時刻了解更優質的生活服務、安全通知,以及購買各 種配件。

1. 請開啟智能手機上的相機應用程式,並對準二維碼以掃描。

產品註冊二維碼設於產品正面或門框內側。

- 2. 點擊通知或連結以打開註冊表格。
- 3. 只需填妥您的詳細資料,即可高枕無憂地享用產品。

掃描上面的二維碼,您便可在產品註冊連結中找到完整的使用手冊,或可瀏覽 www.electrolux.com 以了解更多資訊。

歡迎選用伊萊克斯!多謝選購我們的家電產品。



如需獲取使用建議、產品手冊、故障排除提示、維修資訊,購買配件和後備零件,以及在網上註冊產品,請瀏覽: www.electrolux.com

客戶關懷與服務

建議您使用原廠後備零件。只需掃描銘牌上的二維碼,便可獲取專業的維修服務。與我們的服務部門聯絡時,請確保提供以下資料,這些資料可在產品銘牌上找到:型號、PNC碼、序號。

⚠ 警告/安全注意資訊。

(i) 一般資訊及提示



如有更改, 恕不另行诵知。

目記	錄	
1.	有關安全及環境的重要說明	3
2.	安裝	8
3.	準備工作	12
4.	操作產品	18
5	維護及清潔	25
6	技術規格	28
	故障排除	

1. 有關安全及環境的重要說明

此部分提供了一些有助避免造成人員受傷或財物損失的安全說明。

11一般安全事項

- 本產品可供8歲及以上的兒童,以及身體、感官或心智能力仍未完全成熟或缺乏經驗和知識的人士使用,但是他們必須在受到看管的情況下使用本產品,或已接受與安全使用本產品及其所涉及風險相關的培訓。切勿讓兒童把玩本產品。除非受到看管,否則不得讓兒童清潔及維護本產品。除非持續受到看管,否則不得讓3歲以下兒童接近本產品。
- 切勿將本產品放在鋪有地氈的地面上。否則,機身下方會因缺乏空氣流通而令電氣零件過數,繼而導致產品出現問題。
- 如本產品出現故障,在由授權維修代理商維修前,請勿操作本產品。注意觸雷風險!
- 一旦電源中斷,本產品能夠在重新接通電源時恢復運作。如希望取消程式,請見「取消程式」部分。
- 請將本產品連接至設有 13 A 保險絲保護的接地插座。請安排合資格的電氣技工完成接地安裝。如任何損壞可能是由於使用本產品時未有根據您當地的法規正確安裝接地而造成,本公司不會承擔任何責任。
- 供水管及排水管必須繋緊以及保持完好無損。否則會有漏水風險。
- 當滾筒內仍有水時,切勿打開機門或拆除過濾器。否則可能會水浸及被熱水灼傷。
- 切勿強行打開鎖定的機門。洗衣循環完成後幾分鐘,機門便可打開。如強行打開機門,便可能損壞機門及鎖定裝置。
- 不使用本產品時,請拔除電源插頭。
- 清洗本產品時,切勿將水噴灑或傾倒在產品上!注意觸電風險!切勿以濕手觸摸電源插頭!切勿拉扯電線來拔除插頭,相反應時刻握著插頭然後將其拔出。
- 只可使用適合自動洗衣機的洗滌劑、柔順劑和補充品。
- 請按照衣物標籤和洗滌劑包裝上的說明。
- 在安裝、維護、清潔和維修本產品期間,必須將其電源插頭拔除。
- 任何維修程序都必須交給授權服務代理商負責。如損壞可能是因未獲授權人士執行程序而 造成,生產商無須承擔任何責任。
- 如電源線路受損,則必須由生產商、售後服務人員或具有類似資格的人員(以電氣技工為 住),或推口商指定的人員負責更換,以免有機會發生風險。
- 請將本產品放在堅固、平坦及水平的表面上。

- 切勿將本產品放在長絨地氈或類似表面上。
- 切勿將本產品放在高架平台上或圖疊表面的邊緣位置。
- 切勿將本產品放在電源線路上。切勿使用海綿或磨砂物料。否則會令噴漆、鍍鉻和塑膠表面受損。
- 揮作本產品所需的供水壓力為 1 至 10 巴(0.1 至 1MPa)。
- 切勿在新產品上使用舊有或用禍的進水管,否則可能今衣物沾上污清。
- 切勿將本產品放在鋪有地氈的地面上,否則機身下方會因缺乏空氣流通而令電氣零件過熱, 繼而導致產品出現問題。

1.2 預期用涂

- 本產品是專為家居使用而設計。不適合商業使用,亦不得用作預期以外的用途。
- 本產品只可洗滌及沖洗附有適當標籤的衣物。
- 生產商不會承擔因不當使用或運輸過程而產生的任何責任。
- 本設備旨在用於家居環境及類似應用範圍,例如:
 - 商店、辦公室和其他工作環境的員工廚房區域;
 - 農舍;
 - 酒店、汽車旅館及其他居民場所;
 - 餐飲及住宿場所;
 - 公寓或洗衣房的公共區域。

1.3 兒童安全事項

- 包裝物料會危及兒童安全。請將其放置在兒童接觸不到的安全地方。
- 電氣產品可能對兒童造成危險。請勿讓兒童接近使用中的產品,以及切勿讓兒童胡亂觸碰產品。請使用兒童鎖以防止兒童使用產品。
- 離開放置本產品的房間時,請時刻記著關上機門。
- 請將所有洗滌劑和添加劑存放在兒童接觸不到的安全地方。請確保關上洗滌劑容器的蓋子,或密封洗滌劑的包裝。



當以高溫洗滌衣物時,機門的玻璃會變熱。因此在洗衣操作期間,請勿讓任 何人士(特別是兒童)接近洗衣機機門。

1.4 包裝資訊

本產品的包裝材料是以可回收的物料製造,符合國家環保法規。請勿將包裝材料與家居垃圾或其他垃圾一起處理。請將包裝材料送往您當地或地區指定的包裝材料收集站。

1.5 處置廢棄產品

• 本產品採用可重複使用及適合回收再用的優質零件和物料製造。因此,當產品的使用壽命 完結時,請勿將其與一般家居垃圾一起處理。您應將其送往回收電氣及電子設備的收集站。 請向您當地的有關當局查詢,以查找最就近的收集站。您可透過回收使用過的產品來保護 環境和天然資源。為確保兒童安全,在棄置產品前,請先切斷電源線路以及停用機門的鎖 定裝置,使其無法運作。

1.6 符合 WEEE 指令

X

本產品符合歐盟的 WEEE 指令(2012/19/EU)。本產品標有廢棄電氣及電子設備 (WEEE)的分類符號。

其採用可重複使用及適合回收再用的優質零件和物料製造。當產品的使用壽命完結 時,請勿將其與一般家居垃圾或其他廢物一起處理。您應將其送往回收電氣及電子 設備的收集中心。請向您當地的有關當局查詢,以查找這些收集中心。

符合 RoHS 指令:

您所購買的產品符合歐盟的 RoHS 指令(2011/65/EU)。產品不包含在指令中列明為有害和禁用的物料。

2. 安裝

如需安裝本產品,請向最就近的授權服務代理商查詢。如要準備使用本產品,請在聯絡授權服務代理商前,先查閱使用手冊中的資料,以及確保具備適當的電力、自來水供應和排水系統。如有不適當之處,請聯絡合資格的技術人員和水喉技工以作出任何所需的安排。

(i) 備註

- 客戶有責任妥善整理安裝地點,以及在 安裝位置準備好電力、自來水和廢水設 備。
- 完成安裝或清潔程序後,當將產品推到 合適的位置時,請確保進水管、排水管 和電源線路沒有折疊、被夾或擠壓。

小警告!

- 產品安裝和電氣連接,必須交由授權服務代理商負責。如損壞可能是因未獲授權人士執行程序而造成,生產商無須承擔任何責任。
- 安裝前,請先以目測方式檢查產品是否 有任何缺憾。如發現有任何缺憾,請立 即停止安裝。損壞的產品存在安全風 險。

2.1 合適的安裝位置

- 請將本產品放在堅固的地面上。切勿將本產品放在長絨地氈或類似表面上。
- 請將本產品放在堅固的地面上。切勿將本產品放在長絨地氈或類似表面上。上下疊放一起的洗衣機和乾衣機,當裝滿衣物時總重量大約為180公斤。請將產品放在堅固平坦,並有足夠承托力的地面上。
- 切勿將本產品放在電源線路上。
- 請勿將產品安裝在溫度可能低於 0°C 的 地方。
- 產品在放置後,須與其他傢俬的邊緣至少相隔 1 厘米的距離。

2.2 移除包裝固件

將洗衣機向後傾側,以移除包裝固件。拉動



2.3 拆除運輸鎖

/ 警告!

- 在移除包裝固件前,請勿拆除運輸鎖。 操作洗衣機前,請先拆下運輸安全螺 栓,否則會令產品受損。
- 1. 請使用合適的扳手鬆開所有螺栓,直至螺 栓能自由轉動為止 **(C)**。
- 2. 輕輕轉動運輸安全螺栓以將其拆除。
- 3. 將使用手冊袋子中的塑膠封蓋,安裝到後 方面板上的孔洞中(**P**)。





i)備註

- 請將運輸安全螺栓保存在安全的地方, 以便日後需要再次移動洗衣機時能重 複使用。
- 當運輸安全螺栓未有正確地固定到位時,切勿移動產品!

2.4 配件

塑膠封蓋

在拆除運輸螺栓後,塑膠封蓋 可用作關閉機櫃後側的孔洞。

塑膠軟管導向器

用於將排水管固定在洗手盆邊緣。

使用手冊

讓用戶能更容易認識和了解本產品。



進水管

將水管連接至產品的進水 口。



扳手

用於鬆開後方面板上的所 有螺栓。



2.5 連接供水


(i) 備註

操作本產品所需的供水壓力介乎 1 至 10 巴(0.1 至 1 MPa)。將水龍頭完全打開後,水流每分鐘必須達到 10 至 80 公升,這樣洗衣機才能暢順地運作。

如水壓過高,請安裝減壓閥。

⚠ 警告!

- 不應將只設有單一進水口的型號,與熱水水龍頭連接。否則可能會損壞衣物,或令洗衣機切換至保護模式而無法運作。
- 切勿在新產品上使用舊有或用過的進水管,否則可能令衣物沾上污漬。
- 1. 用手扭緊所有水管螺母。切勿使用工具 扭緊螺母。

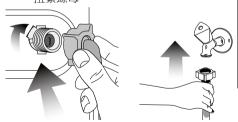

2. 連接水管後,將水龍頭完全打開,以檢查連接位置有否漏水。檢查各連接位置有否漏水,檢查各連接位置有否漏水;如有漏水,請關閉水龍頭並拆下螺母。檢查密封後,小心地重新扭緊螺母。為防止漏水並導致損壞,請在不使用洗衣機時關閉水龍頭。


2.6 連接排水口

• 排水管的末端必須直接與廢水排放口或 洗手盆連接。

⚠ 警告!

排水期間假如水管鬆動,房子可能會出現水浸情況。另外,以高溫洗滌亦可能導致燙傷風險!為免出現這些情況,以及確保洗衣機能暢順地進水和排水,請將排水管末端繫緊,以防止鬆脫。

- 水管的安裝高度應至少達 40 厘米,最高 為 100 厘米。
- 將水管放在地面上或接近地面(離地面少於40厘米)後,如將水管抬高,洗衣機便會更難排水,並且可能令衣物過濕。因此,請按照圖中所示的高度安裝。

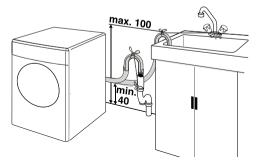

- 為免污水回流入洗衣機內,以及確保容易排水,請勿將水管末端浸在污水中,或將 其插入排水口超過15厘米。如水管過長, 請剪裁至適當的長度
- 請確保水管末端沒有彎曲、被踐踏,或來 在排水口和洗衣機之間。如水管過短,請 使用原廠延長水管。水管的總長度不應超 過 3.2 米
- 為免漏水,請使用適當的卡箍將延長水管 穩固地與洗衣機的排水管連接,以確保保 持穩固,不會漏水


2.7 調校支腳

⚠ 警告!

 為確保能安靜操作及盡量減少振動,必 須將本產品水平地放置,並且以支腳保 持平衡。調校支腳,以適當地平衡洗衣 機。否則洗衣機可能在操行期間移動, 並可能導致擠壓和禍度振動問題。

如為塑膠支腳:

- 1. 用手鬆開支腳上的鎖定螺母。
- 2. 調校支腳, 直至產品保持水平和平衡。
- 3. 再次用手扭緊所有鎖定螺母。

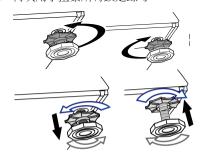


▲ 警告!

請勿使用任何工具鬆開鎖定螺母。否則會 令鎖定螺母受損。

如為金屬支腳:

- 1. 使用扳手鬆開支腳上的鎖定螺母。
- 2. 調校支腳, 直至產品保持穩定和平衡。
- 3. 再次使用扳手扭緊所有鎖定螺母。

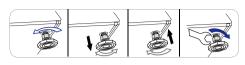

2.8 雷氣連接

請將本產品連接至設有 13 A 保險絲保護的接地插座。如任何損壞是由於使用本產品時未有根據您當地的法規正確安裝接地而造成,本公司不會承擔任何責任。

- 連接必須符合國家法規。
- 安裝後,電源線路插頭必須位於容易觸及的位置。
- 假如房子中的保險絲或斷路器電流值低於13A,請安排合資格的電氣技工安裝 13A保險絲。
- 「技術規格」部分中列明的電壓,必須與 您的電源電壓吻合。
- 切勿使用延長線或複式插頭連接。

如電源線路受損,必須安排授權服務代理 商更換。

運輸產品

- 1. 運送產品前,請先拔除產品的電源插頭。
- 2. 拆除排水管和供水連接。
- 3. 排出產品中所有殘餘的水(請見 5.5)。 以拆除程序相反的次序,安裝運輸安全螺栓 (請見 2.3)。

i)備註

當運輸安全螺栓未有正確地固定到位時,切勿移動產品!

小警告!

包裝物料會危及兒童安全。請將其放置在 不易接觸的安全地方。

3. 準備工作

3.1 將衣物分類

- 請按照紡織物的類型、顏色、骯髒程度以 及可承受的水溫,將衣物分類。
- 請務必按昭衣物標籤上的說明。

3.2 洗滌前準備衣物

- 附有金屬配件(例如鋼圈胸罩、皮帶扣或 金屬紐扣)的衣物會令洗衣機受損。請移 除金屬部件,或將衣服放進洗衣袋或枕頭 套內清洗。
- 取出口袋中的所有物品,例如硬幣、筆和 萬字夾。翻轉及輕刷口袋。這些物品可能 會損壞產品或引致噪音。
- 將嬰兒襪和尼龍襪等小型衣物放進洗衣袋或枕頭套內。
- 以不擠壓的方式將窗簾放進洗衣機中。拆 除窗簾的附件。
- 拉上拉鍊,縫好鬆脫的紐扣,以及修補破損的衣物。
- 只可使用適當的程式,以洗滌標有可機洗 或可手洗的衣物。
- 切勿將有色和白色的衣物一起清洗。新的 深色棉質衣物會釋放大量染料,因此請分 開清洗。
- 洗滌衣物前,請先適當地處理頑固的污漬。如有疑問,請向乾洗店查詢。
- 只可使用適合機洗的染料/換色劑和除 垢劑。請務必按照包裝上的說明。
- 洗滌褲子和細緻衣物時,請將內面翻出來。
- 洗滌以安哥拉毛製造的衣物前,請先將其 放入冰箱中幾個小時,以減少起球。
- 如衣物曾經接觸麵粉、石灰粉、奶粉等物質,請在放入洗衣機前先將其徹底甩乾淨。這些物質會隨著時間積聚在洗衣機內部,可能會令洗衣機受損。

3.3 箭能措施

以下資訊將能助您以符合生態及節能的方式 使用產品。

- 請根據您所選擇的程式,將最多可容納的 衣物數量放入產品中然後運作,但切勿放 入過量衣物。請見「程式及耗電量列表」。
- 請務必按照洗滌劑包裝上的說明。
- 以低溫清洗輕微髒污的衣物。
- 如只有少量輕微髒污的衣物,請使用較快速的程式。
- 如衣物並非嚴重髒污或污漬過多,請勿使 用預洗和高溫清洗。
- 如打算使用乾衣機烘乾衣物,請選擇洗滌程序所建議的最高脫水速度。
- 切勿使用超出洗滌劑包裝所建議的洗滌劑份量。

3.4 初次用途

首次使用產品前,請先確保按照「重要安全說明」及「安裝」部分中的說明,完成所有準備工作。要讓產品準備好洗滌衣物,第一項操作是先啟動滾筒清潔程式。如產品沒有滾筒清潔程式,請按照使用手冊「5.2 清潔機門及滾筒」部分中所概述的初次使用程序操作。



i備註

- 請使用適用於洗衣機的抗垢劑。
- 生產期間的品質控制程序,可能會令產品內部殘餘一些水。這不會對產品造成 損害。

3.5 滴當的衣物容量

洗衣機最多可容納多少衣物,會視乎衣物類型、髒污程度和所選的洗滌程式而定。洗衣機會根據放入的衣物重量自動調節水量。

⚠ 警告!

請按照「程式及耗電量列表」所提供的資料操作。將過量衣物放進洗衣機會降低洗 滌效果,並可能引發噪音和振動。

3.6 放入衣物

- 1. 打盟機門。
- 2. 將衣物鬆散地放入洗衣機內。
- 3. 推動機門以將其關閉,直至聽到鎖定聲 音。請確保機門沒有來著任何物品。

i 備註

程式運作期間,機門會鎖定。只有待程式完成後,您便可隨即打開機門。

如衣物放錯位置,洗衣機可能會引發噪音 和振動。

3.7 使用洗滌劑和柔順劑


i)備註

使用洗滌劑、織物柔軟劑、洗衣澱粉、衣物染料、漂白劑或除垢劑時,請小心閱讀 包裝上的生產商說明,以及按照建議的份量操作。請使用量杯(如有)。

洗滌劑抽屜

洗滌劑抽屜分為三個注入槽:

- (1) 供預洗使用
- (2) 供主洗使用
- (3) 供柔順劑使用
- (*) 另外,柔順劑注入槽內設有虹吸管。

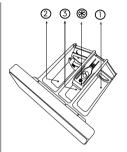



3.7 使用洗滌劑和柔順劑

- 在開始洗滌程式前,先加入洗滌劑和柔順劑。
- 洗滌程式運作期間,切勿讓洗滌劑抽屜打 開!
- 如使用的程式不包括預洗程序,切勿將任何洗滌劑放入預洗注入槽中(注入槽編號「1」)。
- 如使用的程式包括預洗程序,切勿將液體 洗滌劑倒入預洗注入槽中(注入槽編號 「1」)。
- 如使用洗滌劑袋或分配球,切勿選擇包括 預洗的程式。請將洗滌劑袋或分配球,直 接放入洗衣機內的衣物之間。
- 如使用液體洗滌劑,請緊記將液體洗滌劑 杯放入主洗注入槽內(注入槽編號「2」)。

選擇洗滌劑類型

選用哪種類型的洗滌劑,需視乎紡織物的類 型和顏色而定。

- 有色和白色的衣物需使用不同的洗滌劑。
- 如要清洗細緻衣物,請只使用為細緻織物 而設的專用洗滌劑(例如液體洗滌劑或羊 毛衣物清洗液)。洗滌深色衣物和被子時, 建議使用液體洗滌劑。
- 如要清洗羊毛衣物,請使用為羊毛衣物而 設的專用洗滌劑。

警告!

- 請只使用專為洗衣機而生產的洗滌劑。
- 切勿使用洗衣多泡粉。

調整洗滌劑份量

洗滌劑的使用份量,需視乎衣物數量、髒污 程度和水的硬度而定。

- 切勿使用超出洗滌劑包裝所建議的份量, 以免導致泡沫過多、過水效果欠佳、不必 要花費,以及環境問題。
- 如衣物數量較少或只有輕微髒污,請使用較少洗滌劑。

使用柔順劑


請將織物柔軟劑倒入洗滌劑抽屜的指定注入槽中。

- 切勿超出柔順劑注入槽所指示的最大份量。
- 如織物柔軟劑變稠,請先用水稀釋,再將 其倒入洗滌劑抽屜內

使用液體洗滌劑

如產品設有液體洗滌劑部件:

 使用液體洗滌劑時,請將分配器朝著您的 方向拉動。掉落的部件將成為液體洗滌劑 的隔離板。當分配器安裝到位時或拆除 後,在需要時可用水清洗分配器。如使用 粉狀洗滌劑,請確保分配器固定在頂部位 置。

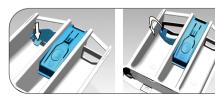

使用凝膠狀及錠片狀洗滌劑

使用錠片狀、凝膠狀及類似洗滌劑時,請按 照以下說明。

- 如凝膠狀洗滌劑是液體,同時洗衣機沒有專用的液體洗滌劑容器,請在第一次進水期間將凝膠狀洗滌劑倒入主洗的洗滌劑注入槽中。如洗衣機設有液體洗滌劑容器,請在開始程式前先將洗滌劑注入容器中。
- 如凝膠狀洗滌劑並非液體,或呈膠囊或錠 片狀,請在洗滌前先將其直接放入滾筒 中。

洗滌前,先將錠片狀洗滌劑放入主洗注入槽(注入槽編號「2」)或直接放入滾筒中。

(i) 備註

- 錠片狀洗滌劑可能會在洗滌劑注入槽中留下殘餘物。在這種情況下,日後洗滌衣物時,請將錠片狀洗滌劑放在靠近溶管底部的衣物之間。
- 使用錠片狀或凝膠狀洗滌劑時,切勿選 擇預洗功能。

使用洗衣澱粉

- 將液體洗衣澱粉、粉狀洗衣澱粉或織物染料加入柔軟劑注入槽中。
- 切勿在洗滌循環中同時使用柔軟劑和洗 衣澱粉。
- 使用洗衣澱粉後,請以乾淨的濕布擦拭洗衣機內部。

使用漂白劑

- 請選擇設有預洗選項的程式,並在預洗循環開始時加入漂白劑。切勿將洗滌劑放入預洗注入槽中。或者,您可選擇設有額外過水功能的程式,並在初次過水步驟期間,當洗衣機開始從洗滌劑注入槽取水時,加入漂白劑。
- 切勿混合漂白劑和洗滌劑。
- 請只使用少量(約50毫升)漂白劑,並確保徹底將衣物過水,以免刺激皮膚。切勿將漂白劑直接倒在衣物上,以及避免在有色的織物上使用。使用氧基漂白劑時,請選擇以較低溫度運作的程式。氧基漂白劑可與洗滌劑一起使用。
- 如漂白劑與洗滌劑的濃稠度不同,請先將 洗滌劑加入洗滌劑屜的「2」號注入槽中。 在洗衣機注水期間,請等待洗滌劑排出, 然後當洗衣機繼續注水時,從同一個注入 槽加入漂白劑。

使用除垢劑

如有需要,請使用專為洗衣機生產的除垢劑。

3.8 提升洗滌效能的提示

	衣物			
	淺色及白色衣物	有色衣物	黑色/深色衣 物	細緻/羊毛/ 絲質衣物
	(根據髒污程度而建			(根據髒污程
	議的溫度範圍:40至		度而建議的溫	度而建議的溫
				度範圍:冷水至
			/	-30°C)
嚴重髒污 (如草漬、咖啡漬、水果漬和血 漬等頑固污漬。)	可能需要預先處理污 漬或執行預洗程序。 可使用針對白色衣物	衣物而建議的粉	色和深色衣物	細緻衣物而生
	而建議的粉狀和液體 洗滌劑,並使用適合	處理嚴重髒污衣	理嚴重髒污衣	毛和絲質衣物,
	處理嚴重髒污衣物的 份量。如為黏土污漬、 泥土污漬,以及對漂	黏土污漬、泥土		則必須使用專 用的羊毛衣物 洗滌劑。
	白劑敏感的污漬,建 議可使用粉狀清潔劑	白 劑 敏 感 的 污 漬,建議可使用		7九/ 床月]。
御	7147,523	粉狀清潔劑來清 潔。應使用不含 漂 白 劑 的 洗 滌 劑。		
	如為黏土污漬、泥土			最好選用專為
	污漬,以及對漂白劑			細緻衣物而生
口位置造成的污漬)	敏感的污漬,建議使			產的液體洗滌
	潔。	處理一般髒污衣物的份量。應使用不含漂白劑的 洗滌劑。	理嚴重髒污衣 物的份量。	劑。如要洗滌羊 毛和絲質衣物, 則必須使用專 用的羊毛衣物 洗滌劑。
輕微髒污 (沒有顯著污漬)	可使用針對白色衣物 而建議的粉狀和液體 洗滌劑,並使用適合	衣物而建議的粉		最好選用專為 細緻衣物而生 產的液體洗滌
		劑,並使用適合 處理輕微髒污衣 物的份量。應使 用不含漂白劑的 洗滌劑。	理輕微髒污衣 物的份量。	劑。如要洗滌羊 毛和絲質衣物, 則必須使用專 用的羊毛衣物 洗滌劑。

洗滌劑建議

建議的洗滌劑	洗滌循環	洗滌溫度	衣物及布料類型
含有助劑和螢光增白劑	棉質衣物及混合衣物及	30/40/60	以耐煮棉質或麻質製造的
的強力洗滌劑	寢具及特別髒污及棉質		白色衣物
	衣物 20°C 及 節能		
	40'-60'		
不含漂白劑和螢光增白	棉質衣物及混合衣物及	20/30/40	以耐煮棉質或麻質製造的
劑的有色洗滌劑	寢具及特別髒污及棉質		有色衣物
	20°C 及 快洗 15'及衛生		
	抗菌		
不含螢光增白劑的有色	混合衣物及羽絨衣及快	冷水/20/30/	由易於打理的纖維或合成
或溫和洗滌劑	洗 15'及細緻衣物	40	物料製造的有色衣物
溫和洗滌劑	絲質衣物及羽絨衣及細	冷水/20/30	細緻布料、絲質、黏膠
	緻衣物		
羊毛衣物專用洗滌劑	羊毛	20/30/40	羊毛

- 如洗滌劑或添加劑結塊或黏稠,在倒入洗 滌劑分配器前,可先用水稀釋,以免造成 阳塞及溢水風險。
- 請選用合適的洗滌劑類型,以能在使用最少的水和消耗最少的能源下,獲得最好的 洗滌效果。
- 必須使用適當的洗滌劑份量,以獲得最佳的清洗效果。如衣物未能裝滿整個滾筒, 請減少洗滌劑份量。
- 請務必調整洗滌劑份量,如使用軟水,請使用較少的洗滌劑。
- 根據衣物的髒污程度來決定洗滌劑份量; 較不髒污的衣物,使用較少的洗滌劑。
- 高濃度(濃縮)洗滌劑需要準確的份量。

以下跡象表示洗滌劑禍多:


• 產生大量泡沫 洗滌和過水效果欠佳

以下跡象表示洗滌劑不足:

- 衣物變灰
- 滾筒、加熱組件及/或衣物上積聚水垢沉積物

4. 操作產品

4.1 控制而板

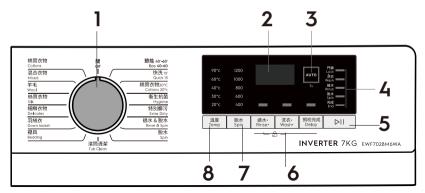

- 1 程式選擇旋鈕(最上方位置:開/關)
- 2 顯示屏
- 3 AUTO(自動)洗滌按鈕
- 4 程式追蹤指示燈

- 5 開始/暫停按鈕
- 6 輔助功能按鈕
- 7 脫水速度調節按鈕
- 8 溫度調節按鈕

4.2 準備洗衣機

請確保穩固地連接水管。插上洗衣機的電源 插頭。將水龍頭完全打開。將衣物放入洗衣 機內。加入洗滌劑和織物柔順劑。

4.3 選擇程式

根據以下的「程式及耗電量列表」和溫度表,選擇適合衣物類型、數量和髒污程度的程式。

溫度 髒污程度

	10T7 7 LLX
90°C	嚴重髒污的白色棉質和麻質衣物。
	(咖啡桌桌布、桌布、毛巾、床單
	等)。
60°C	——一般髒污、有色、防褪色麻質、
	棉質或合成衣物(襯衫、睡袍、
	睡衣等)以及輕微髒污的白色麻
	質衣物(內衣等)。
40°C	混合衣物,包括細緻布料(面紗、
30°C	窗簾等)合成衣物和羊毛製品。
20°C	
冷水	

2. 請使用程式選擇按鈕以選擇所需的程式。

(i) 備註

- 程式只限於以適合某特定類型紡織物 的最高脫水速度操作。
- 選擇程式時,請務必考慮紡織物的類型、顏色、骯髒程度以及可承受的水溫。
- 時刻選擇最低的所需溫度;溫度越高, 耗電量便越大。
- 如需了解更多有關程式的詳細資料,請見「程式及耗電量列表」。

14 繁体中文

4.4 程式簡介

請根據紡織物的類型使用以下主要程式。

棉質衣物

使用此程式以洗滌棉質衣物(例如床單、羽 絨被和枕頭套套裝、毛巾、浴袍、內衣等)。 洗衣機將以較長的洗滌循環及猛烈的洗滌操 作洗滌衣物。

羽絨衣

羽絨衣的洗滌程序經過專門設計。羽絨衣的 物料輕盈,不易過水,耐洗性差,並且難以 吸水。因此,在洗滌過程中需要延長浸泡時間,並在脫水期間減低轉速。

羊毛

請使用此程式洗滌羊毛衣物。根據衣物上的 護理標籤選擇合適的溫度。請使用專為羊毛 衣物而設計的洗滌劑。

寢具

滾筒清潔

作為所需的衛生清潔措施,請定期(每1至2個月)使用此程式清潔滾筒。請在洗衣機沒有任何衣物的情況下運行此程式。如要取得更佳效果,請在洗滌劑盒中加入粉狀水垢清潔劑。程式完成後,請讓前門保持半開,以風乾洗衣機內部。

特別髒污

如衣物上的污漬較為頑固,可選擇較長的洗滌時間和較強的洗滌節奏來提升洗滌效果。

細緻衣物

您可以使用此程式洗滌細緻衣物,例如棉質 /合成混合針織衣物或襪子。

絲質衣物

您可選擇此程式洗滌絲質等細緻織物。洗衣 機會非常溫和地進行洗滌,並且不會即時完 成脫水步驟。此程式最適合用於溫和洗滌衣 物。

衛牛抗菌

在衛生抗菌洗滌程序中,洗衣機會在洗滌期間產生蒸汽,提升洗滌效果,並同時蒸熨衣物,以免出現褶皺。

快洗 15'

快洗 **15**'是一個適合洗滌少量非髒污衣物的 快速洗滌程式。其中可選擇的洗滌溫度範圍 較小,同時最高脫水速度亦較低。

混合衣物

此程式可同時洗滌棉質和合成衣物,無需分類。

棉質衣物 20 ℃

這是一個全新歐洲標準的專門程式,可用作 洗滌一些柔性衣物;為防止衣物受損,您只 能選擇 20°C 維行洗滌。

節能 40'-60'

對於一般以 40°C 或 60°C 洗滌的棉質衣物, 請在同一循環中一起洗滌。使用此循環可確 保符合歐盟生態設計法規。

如需特定功能, 請選擇以下任何一個程式。

過水&脫水

專為禍水和脫水而設計的程式。

脫水

此程式可為衣物執行額外的脫水循環或排出 洗衣機內的水。在選擇此程式前,請先選擇 所需的脫水速度,並按下開始/暫停按鈕。

(i) 備註

請使用較低的脫水速度洗滌細緻衣物。

4.5 選擇溫度

每當選擇一個新的程式時,所選程式的預設 溫度會在溫度指示器上顯示。如要調整溫度, 請按下溫度按鈕。溫度會逐漸上升,當到達 最高溫度時,便會重回最低溫度。

i)備註

程式開始後,如需要更改溫度,您需要在解鎖狀態下重新撰擇程式以調整溫度。

4.6 選擇脫水速度

每當選擇一個新的程式時,所選程式的預設 脫水速度會在速度指示器上顯示。如要調整 脫水速度,請按下速度按鈕。轉速會逐漸提 升,當到達最高速度時,便會重回最低設定。

繁体中文 15

4.7 程式列表

40一十・30 中発展	預設脫水	最大衣物量	輔助功能		
程式;溫度範圍	速度(rpm)	(乾衣物)	過水+	洗衣+	延遲啟動
混合衣物;	800	3.5 公斤			
冷水至 60°C	000	0.0 4)	-	_	-
快洗 15';	800	1 公斤			
冷水至 30°C	000	ГДЛ	•	-	
絲質衣物;	400	1.5 公斤			
冷水至 40°C	400	1.0 4/1	•		
寢具;	800	3.5 公斤	_	_	
冷水至 60°C	800	3.3 AM			•
細緻衣物;	800	2公斤	_	_	_
冷水至 90°C	800	2 27			
過水&脫水;	800	最大	•		
脫水	800	最大			
節能 40'-60';	1200				
40°C	1200	权人			_
特別髒污;	800	3.5 公斤	•		
40°C 至 60°C	000	0.0 4)1	•	•	_
棉質衣物;	800	最大	•		
冷水至 90°C	000	权人	•		
羽絨衣;	600	2公斤	_	_	_
冷水至 40°C	000	2 27			
羊毛;	400	1.5 公斤	_	_	_
冷水至 40°C	400	1.5 公川			
衛生抗菌;	800	3.5 公斤			
90°C	000	0.0 471	•		
棉質衣物 20°C;	800	 最大			
20°C		4文/人	_	_	
滾筒清潔;	800	-			
90°C				_	
AUTO;	800	最大			
自動					

^{■:}可選擇

執行某些程式期間,洗衣機會透過偵測平衡狀態以自動調整脫水速度, 從而確保機身穩定。

^{*:}自動選擇,不能取消。

4.8 選擇輔助功能

程式開始前, 你可選擇所雲的輔助功能。

另外,在洗衣機運作期間,您無需按下開始 /暫停按鈕,便可選擇或取消適合目前程式 的輔助功能。要實現這項操作,洗衣機必須 處於您打算選擇或取消的輔助功能之前的 步驟。

如無法選擇或取消輔助功能,相關輔助功能 的指示燈便會閃爍 3 次,以警告用戶。

洗衣+

在待機模式下,按下增強洗衣功能設定按鈕。增強洗衣功能指示燈將會亮起,同時洗滌程序將包含增強洗衣功能。選擇增強洗衣功能後,主洗階段的洗滌時間將增加 10 分鐘,而最新時間將會在剩餘時間視窗中顯示。再次按下此按鈕,將會取消增強洗衣功能。

禍水+


如要啟動進階過水功能,請在待機模式中按下進階過水按鈕,進階過水指示燈便會亮起。之後,洗滌過程便會增加一個額外的過水循環,同時新增的時間將會在剩餘時間視窗中顯示。如要取消進階過水功能,請再次按下進階過水按鈕。如運作期間過水循環沒有開始,請按下暫停按鈕。然後,您便可新增或取消進階過水功能。請留意,操作期間無法選擇或取消進階過水功能。。

AUTO

按住 AUTO 按鈕 3 秒,直至顯示屏燈亮起, AUTO 程式便會開始。自動程式是一項智慧功 能,可在待機和關機狀態下自動運作。在 AUTO 程式中,洗滌溫度、水位和洗滌時間會 根據重量 國應結果自動設定,無需用戶輸入。

延遲完成

延遲完成功能可讓您將程式的開始時間最長延後 24 小時。延遲完成時間能以 1 小時為增量調整。

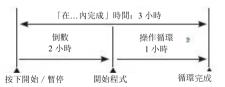

備註

當設為延遲完成時,切勿使用液體洗滌劑!否則可能會今衣物沾上污清。

打開機門,並將衣物放入洗衣機內。加入洗滌劑和任何其他所需物品。選擇洗滌程式。溫度、脫水速度及可選的輔助功能。使用延遲啟動按鈕以設定所需的開始時間。按下開始/暫停按鈕以開始循環。延遲暫停按鈕開始循環。延遲倒數將會開始。延遲完成時間旁邊的「」,符號,將在顯示屏中上下移動。

i 備註

在延遲完成期間,您可以放入更多衣物。

倒數結束時 顯示屏將顯示所選程式的持續時間。「_」符號將會消失,並將開始所選的程式。

取消延遲完成功能

如要取消延遲完成倒數以及立即開始程式:

將延遲完成時段設為零,或將程式選擇旋鈕 轉動至任何程式。此操作將取消延遲完成功 能,並會以連續閃爍的完成/取消指示燈表 示。然後,再次選擇所需的程式。按下開始 /暫停按鈕以開始程式。

4.9 開始程式

按下開始/暫停按鈕以開始程式。顯示程式 開始的程式追蹤指示燈將會亮起。

(i) 備註

在選擇程式期間,如 10 分鐘內沒有開始程式或沒有按下任何按鍵,洗衣機將切換至關閉模式,同時溫度、速度和其他指示燈將會熄滅。

4.10 兒童鎖

請使用兒童鎖以防止兒童胡亂觸碰洗衣機。 這樣,您便能避免運作中的程式被胡亂更改。

(i) 備註

- 兒童鎖啟動期間,如轉動程式選擇旋鈕,顯示屏會顯示「CL」。使用兒童鎖時,用戶無法更改程式以及所選的溫度、速度和輔助功能。
- 兒童鎖啟動期間,如使用程式選擇旋鈕來選擇另一個程式,則先前所選的程式 將會繼續運作。

如要啟動兒童鎖:

在任何程式運作期間,長按第一個(過水+) 及第二個(洗衣+)輔助功能按 鈕 3 秒。 兒童鎖便會啟動。兒童鎖啟動期間,如按下 任何按鈕或轉動程式選擇旋鈕,顯示屏便會 顯示「CL」。

如要停用兒童鎖:

在任何程式運作期間,長按第一個(過水+) 及第二個(洗衣+)輔助功能按 鈕3秒。 兒童鎖便會關閉。

(i) 備註

- 除了上述方法外,如要停用兒童鎖,請 在沒有程式運作期間將程式選擇旋鈕 切換至開/關位置,然後選擇另一個程 式。
- 即使斷電或拔除洗衣機的電源插頭後, 兒童鎖亦不會關閉。

4.11 程式執行推度

您可以透過程式追蹤指示器來監察程式的執行進度。當每個程式步驟開始時,相應的指示燈將會亮起;步驟完成時,相應的指示燈將會熄滅。如需要變更輔助功能、速度或溫度設定,您需要在對程式作出任何變更前,先按下開始/暫停按鈕。請確保在某步驟執行期間所作出的任何變更,是按照著目前正在執行的程式步驟。

(i) 備註

如洗衣機沒有進入脫水循環,則由於滾筒內的衣物分佈不均,洗衣機可能因此自動啟動衣物分佈不均偵測系統。此系統會透過轉動滾筒來調整衣物分佈。

4.12 門鎖

洗衣機機門上設有一個鎖定系統,可防止機 門在不適當的水位時打開。

當洗衣機切換到暫停模式時,機門指示燈將開始閃爍。洗衣機會檢查機內的水位。如水位適當,機門燈會在1至2分鐘內持續亮起,同時您可以打開機門。如水位不適當,機門燈便會熄滅,同時機門將無法打開。如需要在機門燈熄滅時打開機門,則必須取消目前程序;請見「取消程式」。

18 繁体中文

4.13 程式開始後更改選擇

將洗衣機切換至暫停模式

程式運作期間,接下開始/暫停按鈕便可將洗衣機切換至暫停模式。在程式追蹤指示燈中,洗衣機目前所處步驟的指示燈將開始閃爍,表示洗衣機正處於暫停模式。另外,當機門可以打開時,除了程式步驟指示燈外,機門燈亦會持續亮起。

更改輔助功能的速度和溫度設定

您可以取消或啟動各項輔助功能,視乎程式目前的步驟而定。詳情請見「選擇輔助功能」。 另外,您可以調整脫水速度和溫度設定。請見「選擇脫水速度」及「選擇溫度」以了解 更多資訊。

(i) 備註

如不容許更改,相關指示燈將會閃爍3次。

添加或拿取衣物

按下開始/暫停按鈕便可將洗衣機切換至暫停模式。洗衣機暫停期間,顯示目前步驟的程式追蹤指示燈將會閃爍。請稍候,以待機門可以打開。打開機門以添加或拿取衣物,然後將機門關閉。如有需要,可更改輔助功能、溫度和速度的設定。再次按下開始/暫停按鈕以恢復程式。

4.14 取消程式

如要取消程式,請先按下開始/暫停按鈕。 然後,轉動程式選擇旋鈕以選取另一個程式。 先前的程式將會取消。完成/取消指示燈將 會持續閃爍,表示程式已取消。不論是哪個 程式步驟或洗衣機內是否有水,泵水功能都 會啟動1至2分鐘。之後,洗衣機將準備好 從第一個步驟開始新的程式。

(i) 備註

您可能需要為所選的新程式再次加入洗滌 劑和柔軟劑,視乎取消的程式處於哪個步 驟而定。

4.16 程式完成


程式完成時,顯示屏會顯示「End」。請稍候,直至機門燈長亮為止。按下開/關按鈕以關閉洗衣機。拿取衣物,並關上機門。洗衣機已準備好執行下一個洗滌循環。

5 維護及清潔

定期清潔可延長產品的使用壽命,以及減少 常見問題的發生頻率。

5.1 清潔洗滌劑抽屜

請根據以下所示,定期清潔洗滌劑抽屜(每隔4至5個洗滌循環),以避免粉狀洗滌劑 隨著時間而積聚。

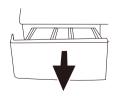



1 接下柔順劑注入槽虹吸管上的虛點,並 且朝著您的方向拉動,直至從洗衣機上 拆下注入槽。

j 備註

如柔順劑注入槽內開始積聚過多的水和柔順劑混合物,則應清潔虰吸管。

- 2 請在洗手盆中使用大量溫水清洗洗滌劑 抽屜和虹吸管。清洗時,請配戴防護手 套或使用合適的刷子,以免皮膚接觸到 抽屜中的殘餘物。
- 3 清洗後,請將抽屜裝回原位並確保安裝 到位。

如洗滌劑抽屜如下圖所示:





i 借註

將虹吸管的後端提起以將其拆除,如圖所示。完成上述清潔步驟後,將虹吸管裝回原位,並將其前端往下推,以確保鎖扣正確接合。

5.2 清潔機門和滾筒

如產品設有滾筒清潔程式,請見操作產品程式。

選擇滾筒清潔程式前,請先確保滾筒內沒有 衣物;選擇後無需操作任何其他按鍵。開始程式前,請先將 1 小袋專用滾筒清潔劑(如沒有專用清潔劑,則放入最多 100 克的抗垢粉末)放入主洗的洗滌劑注入槽內(注入槽編號「2」)。如為錠片狀的抗垢劑,則只需將一顆錠片放入 2 號主洗注入槽中。程式完成後,使用乾淨的布擦乾波紋管內部。

(i) 備註

- 每2個月重複滾筒清潔程序一次。
 - 請使用適用於洗衣機的抗垢劑。

每次清洗後,請確保沒有任何異物殘留在滾 筒內。



如波紋管上的孔洞被堵塞(如圖所示),請 使用牙籤清理。

i 借註

金屬異物可能會令滾筒產生鏽跡。請使用適 用於不鏽鋼的清潔劑,以清除這些在滾筒表 面的污漬。切勿使用鋼絨或鋼棉清潔。

/ 警告!

切勿使用海綿或研磨物料清潔,否則會損壞 漆而和塑膠表面。


5.3 清潔機身和控制而板

如有需要 請使用肥皂水或非腐蝕性的溫和凝 膠清潔劑擦拭洗衣機的機身,然後用軟布擦 乾。

只可使用柔軟的濕布清潔控制面板。

5.4 清潔進水過濾器

洗衣機背部的每個進水閥末端。以及連接水龍頭的每條進水管末端,都設有一個過濾器。這些過濾器可防止異物和污物進入洗衣機。過濾器可能會變難,因此請定期清潔

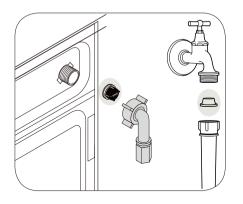

- 1 關上水龍頭。
- 2 拆除進水管的螺母,以找到進水閥上的 過濾器。使用合適的刷子清潔過濾器。 如過濾器過於骯髒,請使用鉗子將其取 出並加以清潔。
- 3 取出進水管平整末端上的過濾器和墊 圈,並以水流徹底清洗。
- 4 小心地將墊圈和過濾器裝回原位,然後 用手扭緊水管的螺母。

5.5 排出剩餘的水, 並清潔泵機渦濾器

排放洗滌水期間,洗衣機內的過濾系統能防止鈕扣、硬幣和織物纖維等堅硬物件阻塞泵機葉輪。因此,水便能順利地排出,並能延長泵機的使用壽命。如洗衣機無法排水,則表示泵機過濾器被阻塞。當過濾器被阻塞時便必須清潔,或者至少每三個月清潔一次。清潔泵機過濾器前,必須先將水排出。另外,在運輸洗衣機前(例如將洗衣機搬到另一間房子)以及當水結成冰時,便可能需要將水完全排出。


⚠警告!

遺留在泵機過濾器內的異物,可能會令洗 衣機受損或引發噪音。

如要清潔髒污的過濾器並將水排出:

1. 拔除洗衣機的插頭,以截斷供雷。

洗衣機內的水溫可能會升至 90°C。為免 燃燒風險,當洗衣機內的水冷卻後,必須 清潔禍濾器。 2. 將禍瀘器蓋子的掛鈎推至右側,並拉出禍 5.6 定期清潔時間表 瀘哭芸子

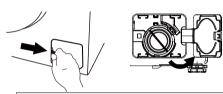


i 備註

如要拆除禍瀘器著子,請以尖端為朔飂的蓮 身工具穿過蓋子上的間隙,然後輕輕往下 推。請避免使用尖端為金屬的工具。

3. 我們部分產品設有緊急排水管,部分則沒 有提供。請按照以下步驟將水排出。

如產品沒有緊急排水管,排水時:

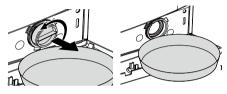

- a. 將一個大型容器放在渦濾器前面,以收集 從過濾器中流出的水。
- b. 鬆開泵機過濾器(逆時針方向), 直至水 開始流出。將流出的水注入到放在過濾器 前方的容器中。
- c. 請務必在身旁準備一塊布,以吸收溢出的 水。當排清洗衣機內的水後,便可轉動禍 **瀘器以將其完全取出。**
- 4. 清潔過濾器內的所有殘餘物,以及泵機葉 輪四周的纖維(如有)。
- 5. 安裝猧濱器。
- 6. 如渦濾器蓋子是由兩個組件構成,請按壓 卡扣以關閉過濾器蓋子。如為單一組件, 請先將下半部分的卡扣固定到位,然後按 壓 上 半 部 分 以 將 萘 子 關 閉 。

Λ

警告!

請見安全事項章節。

定期清潔有助延長設備的使用壽命。

每次循環後,請讓機門和洗滌劑分配器稍微 打開,以保持空氣流涌及風乾設備內部的濕 氫,防止發霆和產生異味。

如長時間不使用設備, 請關閉水龍頭, 並拔 除設備的插頭 建議的定期清潔時間表:

除垢	每年兩次
維護清洗	每月一次
清潔機門封條	每兩個月一次
清潔滾筒	每兩個月一次
清潔洗滌劑分配器	每兩個月一次
清潔排水泵過濾器	每年兩次

5.7 除垢

i備註

如您身處地區的水硬度屬於高或中等,建 議您使用為洗衣機而設的除垢產品。

定期檢查滾筒,以檢查是否存在水垢。

雖然一般洗滌劑已含有水質軟化劑,但我們 仍建議偶然在空置滾筒中使用除垢產品運作 一個循環。

6 技術規格	
型號名稱	EWF7028M6WA
容量(公斤)	7
最高脫水速度(rpm)	1200
高度(厘米)	84
闊度(厘米)	60
深度(厘米)	50
淨重(±4 公斤)	58
輸入(V/Hz)總額	220 至 240 V~/ 50 Hz
₩ H14H_D	

• 常用程式

此等數值僅屬說明性質。

EWF7028M6WA					
循環	標稱容量(公斤)	溫度設定	最高溫度℃	循環持續時間 (小時及分鐘)	
AUTO	最高	30°C	30°C	0:55	
棉質衣物	最高	40°C	90°C	0:58	
混合衣物	3.5	30°C	60°C	0:52	
羊毛	1.5	30°C	40°C	1:00	
絲質衣物	1.5	冷水	40°C	0:47	
細緻衣物	2	40°C	90°C	0:59	
羽絨衣	2	30°C	40°C	0:57	
寢具	3.5	30°C	60°C	1:15	
滾筒清潔	0	90°C	90°C	1:28	
脫水	最高	-	-	0:10	
過水&脫水	最高	-	-	0:17	
特別髒污	3.5	60°C	60°C	1:17	
衛生抗菌	3.5	90°C	90°C	1:58	
棉質衣物 20°C	最高	20°C	20°C	0:50	
快洗 15'	1	冷水	30°C	0:15	
節能 40'-60'	最高	40°C	40°C	3:28	

E.F. Hole E.H. H. A		
7 故障排除		
故障 關上機門後,程 式不開始運作。	可能成因 未有按下開始/暫停/取消按鈕。	解決方法 請按下開始/暫停/取消按鈕。
	因供電/供水出現問題(例如線路電壓、水壓等),洗衣機切換至自我保護模式。	
洗衣機內有水。	生產期間的品質控制程序,可能會令 產品內部殘餘一些水。	這並非故障,水不會令洗衣機受損
	洗衣機可能未有平衡放置。	調校支腳,使洗衣機保持平整。
	可能有硬物進入泵機過濾器。	請清潔泵機過濾器。
	未曾拆下運輸安全螺栓。	請拆下運輸安全螺栓。
洗衣機振動或 發出噪音。	洗先機內的衣物可能太少。	請將更多衣物放入洗衣機內。
	洗先機內的衣物可能太多。	請從洗衣機內取出部分衣物,或以 均勻地分佈洗衣機內的衣物。
	洗衣機可能靠著堅硬的物體上。	請確保洗衣機沒有靠在任何物體上
程 式 開 始 後 7 久,洗衣機便停 止運作。	當用戶的電壓(從 65V 到 20V)出現 超過 10 秒。	在此情况下,洗衣機處於安全狀態 重新插上電源後(在超過 10 秒後 應能回復正常。
		在洗衣機注人足夠的水量前 計時指 器不會開始倒數。洗衣機將一直等待 直至水量足以達到適當的洗滌效果為 止。之後,計時指示器將恢復倒數。
程式時間沒有倒 數(針對設有顯示		在洗衣器達到所選溫度前 計時指示 不會倒數。
弄的型號) 。	計時器可能在脫水步驟期間停止計	由於滾筒內的衣物分佈不均·因此可於會自動啟動衣物分佈不均偵測系統。
	如衣物在滾筒內分佈不均,洗衣機 不會繼續執行脫水步驟。此預防措	您應重新整理衣物,並且重新脫水。

施可避免洗衣機及四周物件受損。

故障	可能成因	解決方法
泡沫從洗滌劑抽	使用過多洗滌劑。	將 1 湯匙柔順劑與 ½公升清水混合,然後倒入洗滌劑抽屜的主洗注入槽中。
屜溢出。	如「程式及耗電量列表」列明洗滌 劑不適用於程式和最大衣物量,切 勿將該洗滌劑放入洗衣機內。	當使用其他化學品(例如去污劑、漂白劑等)時,請減少洗滌劑的份量。
程式完成時,衣物	這可能是由於洗滌劑份量過多而產 生過多泡沫,導致自動泡沫吸收系 勿統啟動。	請使用建議的洗滌劑份量。
仍然很濕。	如衣物在滾筒內分佈不均,洗衣機 不會繼續執行脫水步驟。這可避免 洗衣機及四周物件受損。	您應重新整理衣物,並且重新脫水。

如按照此部分中的說明仍然無法解決問題,請向經銷商或授權服務代理查詢。切勿嘗試自 行維修無法正常運作的產品。

7.1 客戶服務

⚠ 警告!

- 觸雷風險!
- 如要維修設備,請與授權服務中心職絡。只可使用原廠後備零件。
- 請留意,自行維修或由非專業人員維修可能構成危險,並可能導致保養失效。
- 維修不當可能令保養失效,同時保養範圍不包括任何因此而造成的損壞。

警報代碼	代碼釋義	故障排除及解决方法
E1	進水不正常	1:檢查是否已打開水龍頭;
		2:檢查水壓是否過低或停水;
		3:檢查進水喉是否扭曲;
		檢查完畢後,如問題仍然存在,請與維護人員聯
		絡。
E2	機門無法關上	1:檢查機門是否已正確關閉;
		2:檢查衣物是否被機門壓著;
		檢查完畢後,如問題仍然存在,請與維護人員聯
		絡。
E3	洗衣機馬達故障	請先關機,然後重新啟動洗衣機。如問題持續,
		請聯絡我們以安排維護。
E4	排水不正常	1:清潔排水閥門過濾器;
		2:檢查排水喉是否被阻塞;檢查後,如問題仍然
		存在,請與維護人員聯絡。
E5	水位不正常	按下開始按鈕後,洗衣機會自動排水至洗滌水位,
		並且繼續運作;
		如問題持續,請與維護人員聯絡。
Ex	其他	請先關機,然後重新啟動洗衣機。如問題持續,
X是上述以外的數		請與維護人員聯絡。
字)		

以下跡象並非洗衣機故障:

狀態	原因
第一次使用時,洗衣機內或排水管內 有水。	這是工廠性能測試時殘留的水。
洗滌期間看不到水。	在節水洗衣機中,洗滌水位處於機門玻璃的可見表面以下。
脫水程序後,衣物並未完全乾透。	厚重的衣物會導致嚴重不平衡的情況,導致脫水期間觸
	發洗衣機啟動不平衡保護功能,繼而造成乾衣不均的問
	題。請避免單獨洗滌厚重的衣物;相反,請將大型與小
	型衣物混合一起洗滌。
程式運作的時間比顯示的時間長。	在洗滌過程中,水壓、衣物材質的吸水性,以及馬達脫
	水處理等因素,均會影響及相應調整洗滌時間。這是正
	常現象,不會對整體洗滌過程構成影響。

electrolux.com